

Warranty

Coleman® Exponent® Limited Lifetime Warranty

The Coleman Company, Inc. warrants to the original retail purchaser that this Coleman® Exponent® product will be free from defects in material and workmanship for the lifetime of the product. Coleman will repair or replace this product or any component of the product found to be defective, at our discretion. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

The warranty is valid for the original retail purchaser and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers or retail stores selling Coleman® Exponent® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear and tear of parts, parts that are not genuine Coleman® part, or damage caused by negligent use or misuse of the product; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center; or the natural breakdown of materials and colors over extended time and use. Further, the warranty does not cover Act of God, such as fire, flood, hurricanes or tornadoes.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by courier or insured mail with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

For products purchased in Canada:

Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions
20B Hereford Street
Brampton, ON L6Y 0M1

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada.



exponent®



Set-up Instructions for the NorthStar™ X4 Tent

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.


- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.




The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman®, , and **exponent®** are registered trademarks
and NorthStar™ is a trademark of The Coleman Company, Inc.

Remove items from compartments of the carry case and check to make sure all components are present before assembling your tent.

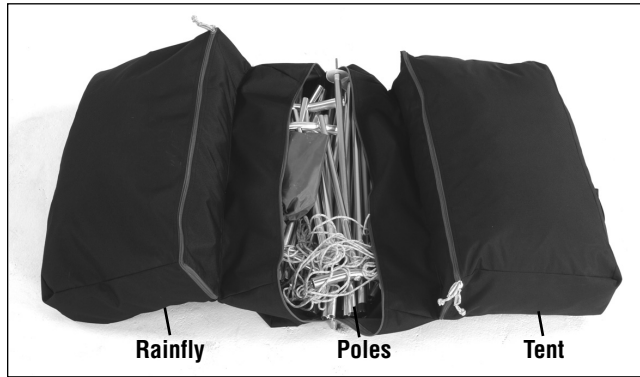

Parts and Components

Description	Part Number
Center Support Pole (1)	5010000256
Gold Leg Poles (4)	5010000255
Chrome Leg Poles (4)	5010000257
Awning Poles (2)	5010000258
Rainfly (1)	5010000259
Tent Body (1)	5010000247
Stakes (30)	5010000248
Carry Case	5010000249

To Set Up Tent

1. Assemble Center Support Pole, four Chrome Leg Poles, four Gold Leg Poles, and the two Awning Poles. (Fig. 1)

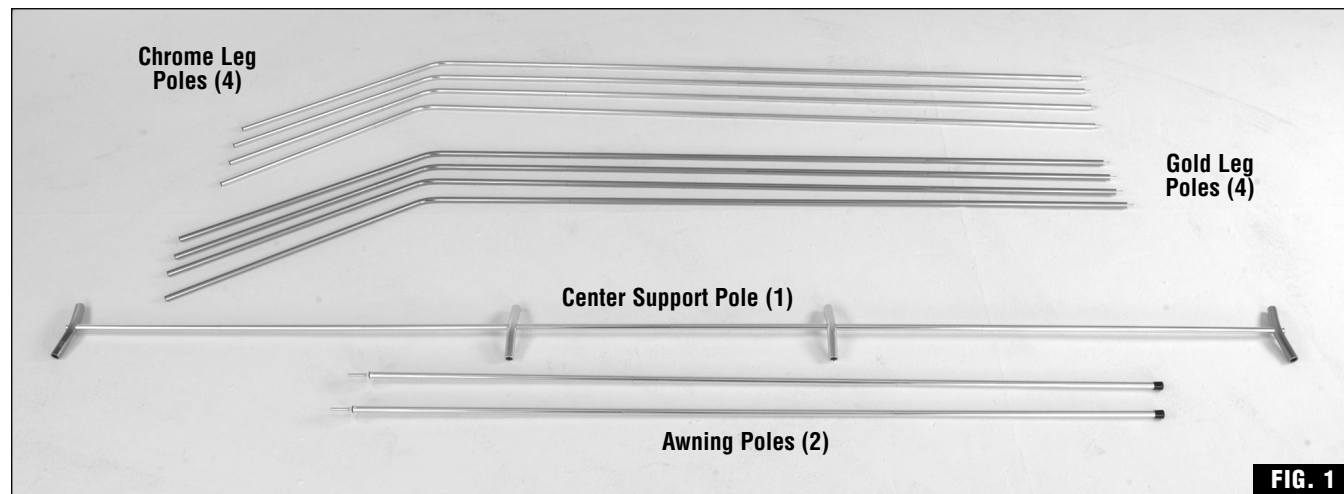


FIG. 1

2. Unfold tent and spread out on a clean, level surface with the Front Living Area Door facing the desired direction (Fig. 2). **NOTE:** Back Bedroom has a window on the left side of tent.

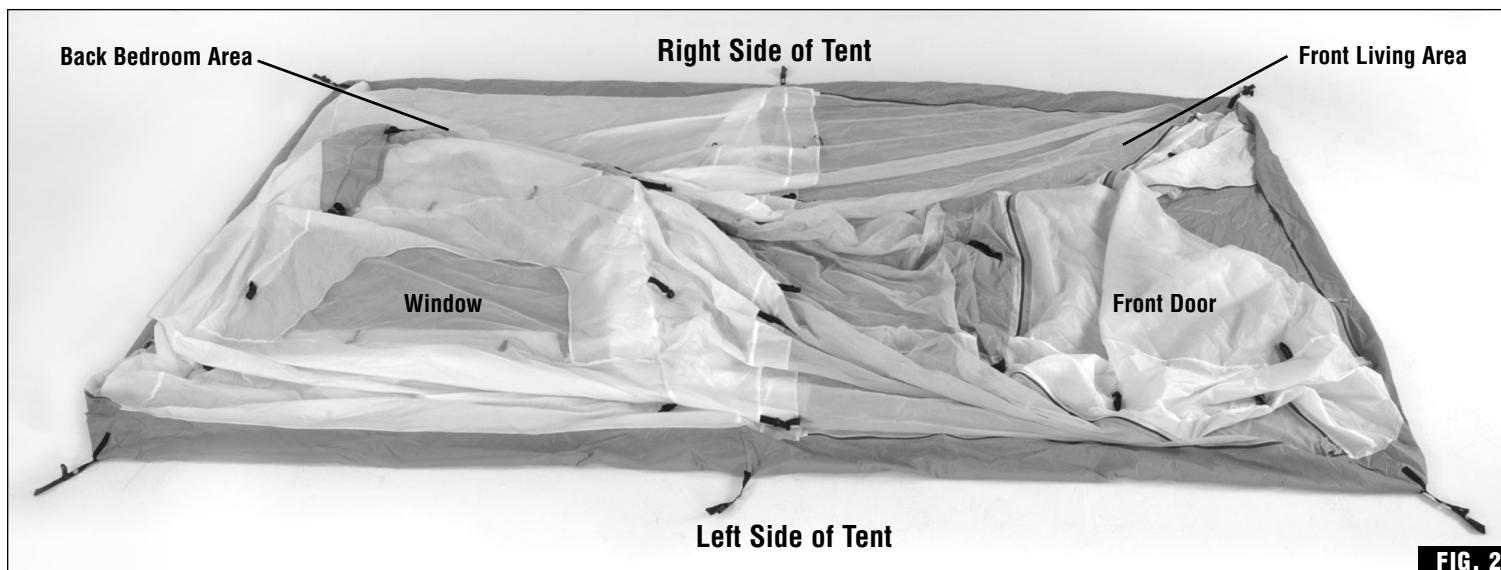


FIG. 2

To Store

1. All metal poles and stakes must be placed in the center compartment of carry case to prevent damage to the fabric items. Neatly fold and store the Tent and Rainfly in the side compartments of the carry case.
2. Make sure Tent and Rainfly are clean and dry before placing in carry case.
3. Unzip doors before taking tent down for storage.
4. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



Tent Configuration Section

The following chart is designed to show the variety of options available for access or ventilation with the X4 Tent. By zipping or rolling up the flaps on the Rainfly, Inner Tent, or a combination of both, you can provide access, privacy or maximum cross ventilation to enhance the camping experience.

Rainfly Options			
Awning 1	Zipped	Rolled	Awning*
Awning 2	Zipped	Rolled	Awning*
Front Door	Zipped	Rolled	
Back Door	Zipped	Rolled	
* See following Awning Assembly instructions below.			
Inner Tent Options			
Side Door 1	Zipped	Rolled	
Side Door 2	Zipped	Rolled	
Front Door	Zipped	Rolled	
Back Door	Zipped	Rolled	
Inner Door	Zipped	Rolled	
2 Ceiling Vents	Zipped	Rolled	

To Assemble Right or Left Side Awning

1. Unzip the right or left side Awning Flap on Rainfly. Select which awning you prefer to use, then insert the two furnished Awning Poles into grommets on web straps. (Detail A)
2. Tie guylines onto loops on the web straps, extend out, and secure with stakes. (Fig. 10)



FIG. 10

3. Insert curved end of Gold Leg Poles into gold-colored fittings on Center Support Pole; then insert curved end of Chrome Center Poles into chrome-colored fittings on Center Support Pole. (Fig. 3)
4. Insert bottom end of the four Gold Leg Poles into grommets on corner web straps (Detail A); then insert bottom end of the four Chrome Center Poles into grommets on center front & back web straps (Detail B).

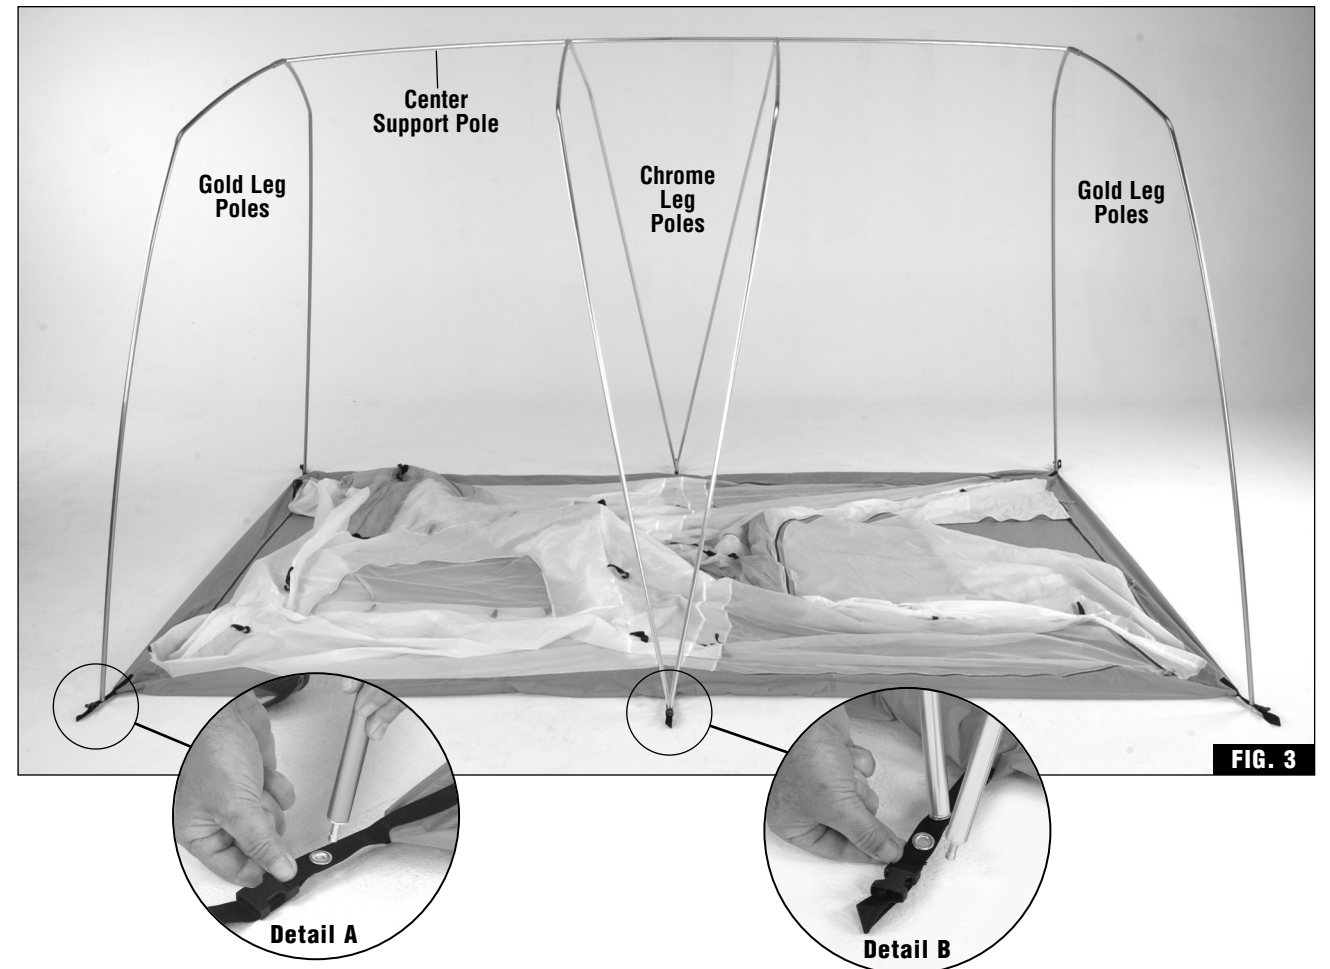


FIG. 3

5. Snap both center hooks on top of tent onto middle section of the Center Support Pole. (Fig. 4 & 5)
NOTE: Unzipping Bedroom Door Panel and Living Area Door Panel will allow easier access to attaching the center hooks of the tent to the Center Support Post.

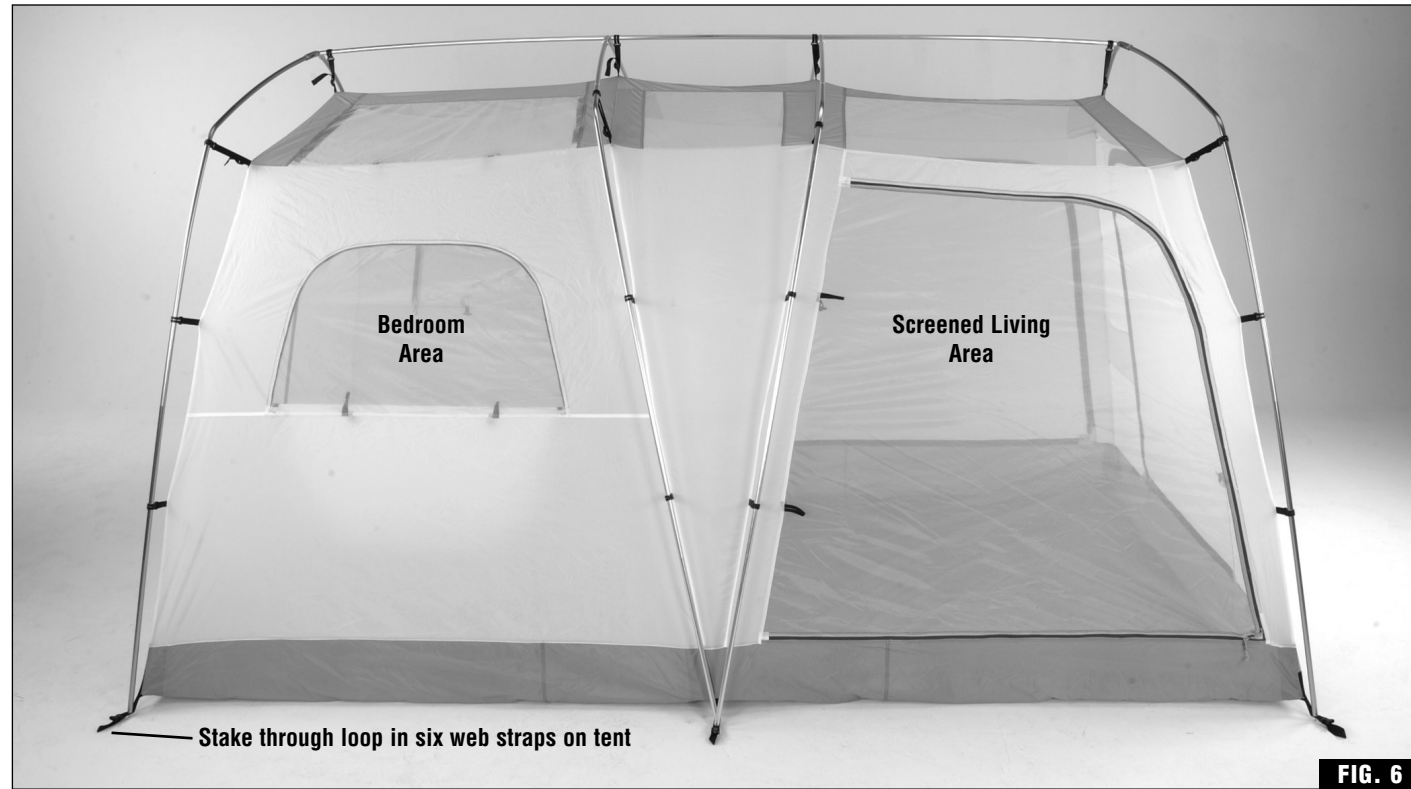


FIG. 4



FIG. 5


6. Attach the two remaining hooks on the top of the tent to the Center Support Post. (Fig. 6)
7. Attach hooks on the corners of the tent to the Gold End Poles; then the hooks on the front & back of the tent to the Chrome Center Poles. (Fig. 6)
8. Stretch corners and front & back of tent until floor is taut; then hammer stakes through loops on web straps to secure. (Fig. 6)




9. Unfold Rainfly and pull it over the tent frame. (Fig. 7)
- NOTE:** The windows need to be placed over the Bedroom Area and the right and left side awning flaps need to be positioned over the Screen Living Area.



10. Unzip all Awning Flaps and Doors on the Rainfly.
 11. Locate all 34 hook and loop fasteners, on under side of Rainfly, and wrap around all Gold and Chrome Leg Poles to secure. (Fig. 8)
- IMPORTANT:** All hook and loop fasteners must be secured to provide more stability in windy conditions.

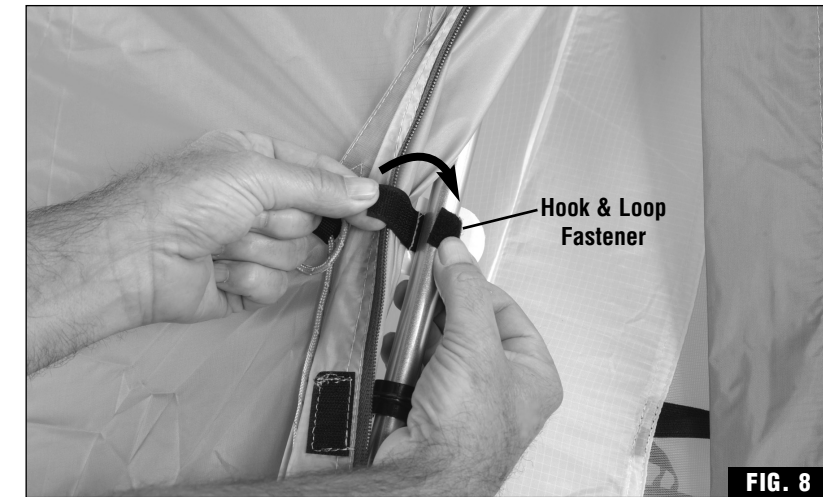

12. Insert plastic locking tabs, located on corners and front & back of Rainfly, into plastic sleeves on web straps of tent. (Detail C)
 13. Extend out guylines on front, back, and sides of tent and stake to secure Rainfly and tent (Fig. 9)
- NOTE:** Make sure guylines, located on left and right side of the Rainfly Awning Flap, do not interfere with access to the doors of tent.

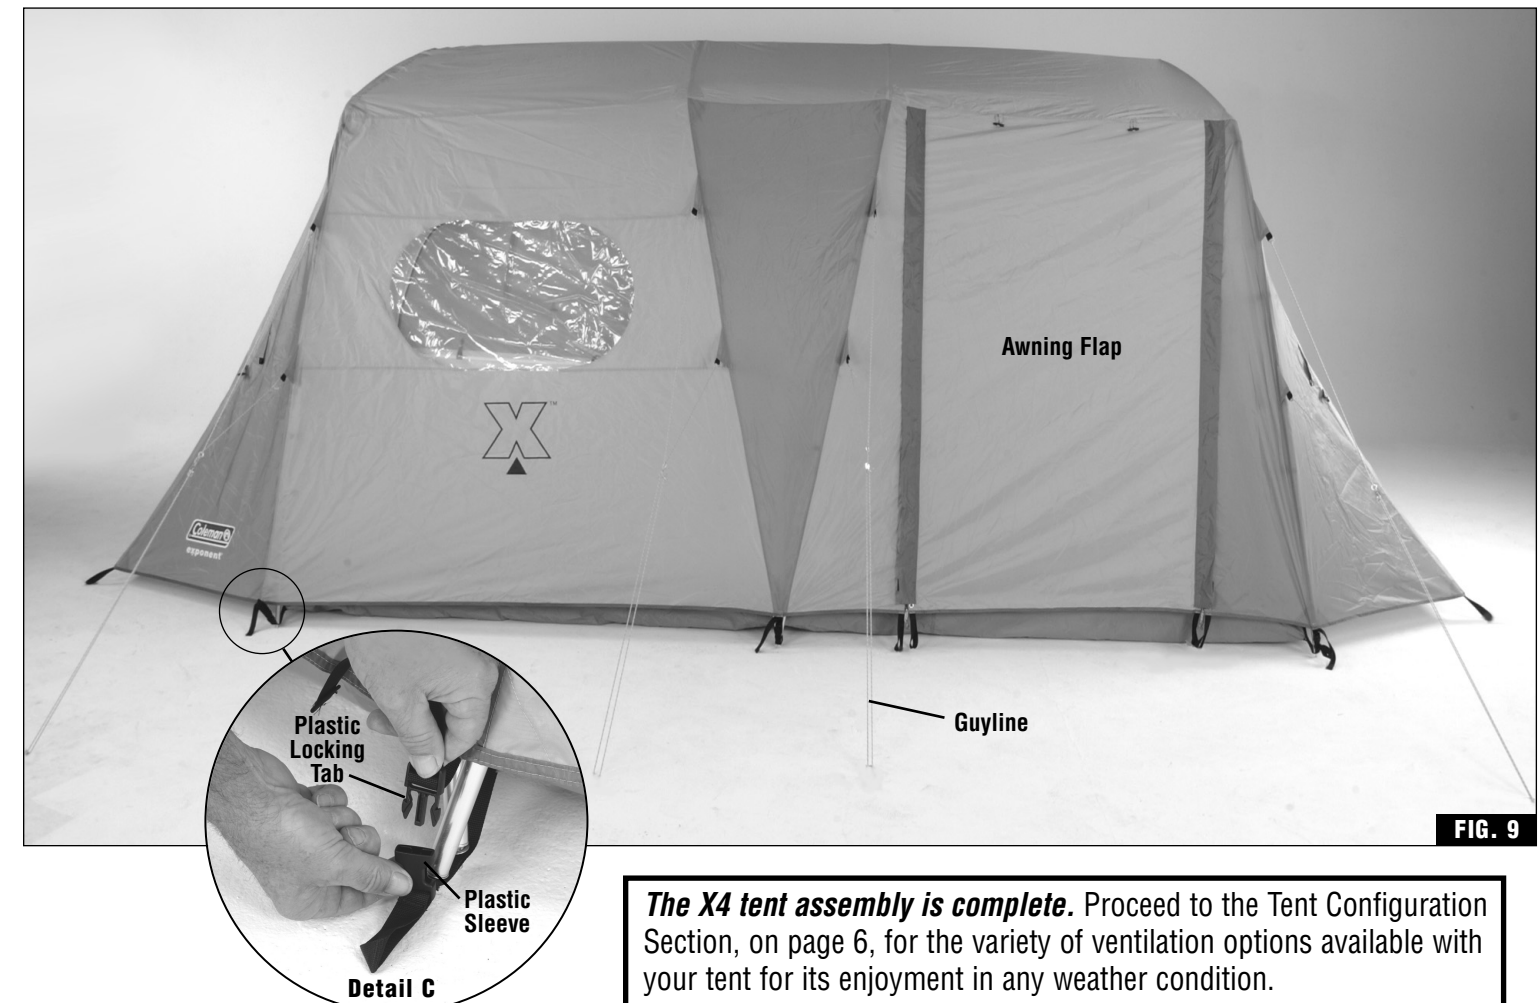

The X4 tent assembly is complete. Proceed to the Tent Configuration Section, on page 6, for the variety of ventilation options available with your tent for its enjoyment in any weather condition.