



SCREENED WEATHERMASTER™ ELITE 17'X9'


Instructions apply to Part Number 2000001113

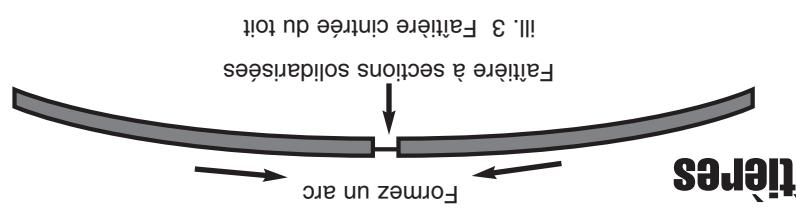

Instructions relatives au modèle 2000001113
III. 4 Faitière centre, montée
insérée dans le passage du toit

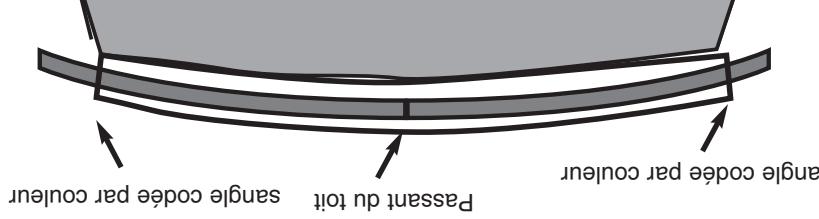

2 Assemble & Place les Faîtières

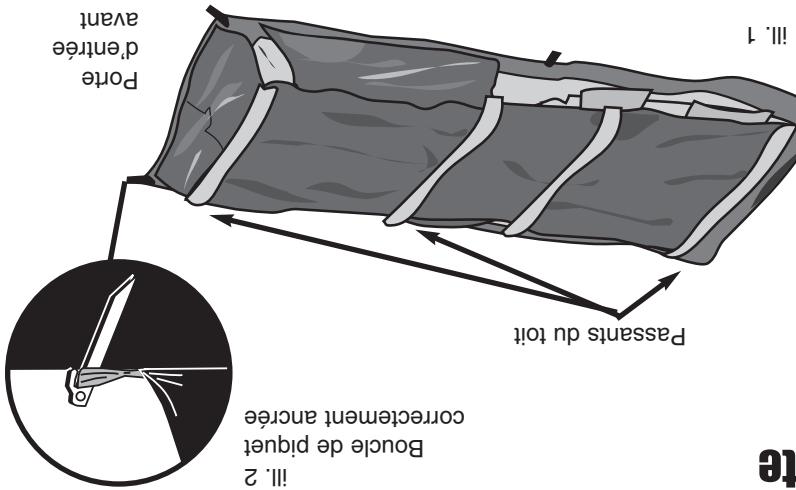

Étalez et positionnez la tente

- 1 mat de porte à charnière
Piece n° 5010000480
- 1 mat vertical de porte à charnière
n° 5010000479
- Double toit - Piece n° 5010000478
- 6 mât de support central
Piece n° 5010000477
- 2 mâts de support de bout
(vignelette orange) Piece n° 5010000476
- 1 mat de bout (vignelette orange)
Piece n° 5010000475
- 1 Choisissez un endroit propice:
monter votre tente
- 3 faîtières centrales
Piece n° 5010000474
- Pièces des mats

WEATHERMASTER™ ELITE A PIECE ABRI - 5'2" X 2'7" M
Grand vous êtes prêt à
monter votre tente
et pointes
de niveau et sans pierres,
branches ou matières dures
Ne montez pas la tente sous
les arbres.
Si y a du vent vent, mettez
l'arbre de la tente au vent.

1 mat de porte à charnière
Boucle de piquette
correctement ancrée
ill. 2

 
- Étalez et positionnez la tente en orientant la pièce abri dans la direction désirée (ill. 1).
- La tente et positionnez la tente en orientant la pièce abri dans la direction désirée (ill. 1).
- Sans tirer de l'angle excessif. Débutez
l'ancrage vers la tente aux coins,
- Ancrez bien le tapis de sol.
- Tendez bien les piquées vers la tente (ill. 2).
- Ouvrez la gâchette de la porte.
- Ancrez les boucles de piquette restantes.
- Formez la gâchette de la porte.

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

POLE ASSEMBLY PARTS


- (3) Center Curved Roof Poles
Part No. 5010000474



- (1) Rear (Orange Sticker)
Part No. 5010000475



 - (2) Rear Brace Poles
(Orange Sticker) Part No. 5010000476



- (6) Center Upright Poles
Part No. 5010000477



- Rainfly Part No. 5010000478

- (1) Vertical Hinge Door Pole
Part No. 5010000479




- (1) Hinge Door Pole Part No.
5010000480

Layout & Positioning of Tent


1

- Layout and position tent with screen room facing desired direction. (illus. 1)
- Stake down tent, starting with the corners. Do not stretch too tight. Angle the stakes slightly toward the tent. (illus. 2)
- Keep the floor taut.
- Stake down the remainder of the stake loops.
- Unzip the door.

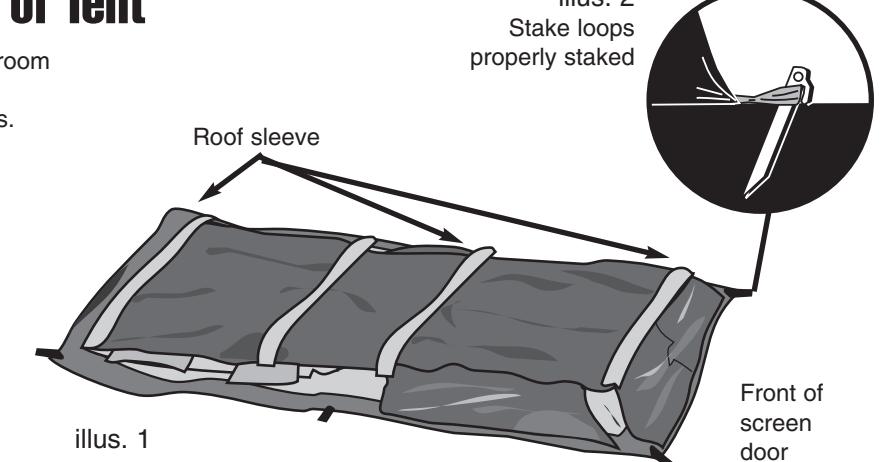


2 Assemble & Place Roof Poles

- Assemble all shock-corded roof poles. When assembled will form a continuous arch with both ends pointing down. (illus. 3)
- Select center roof poles with red stickers, then insert through the two center roof sleeves and the roof pole sleeve at the front of the screen room. (illus. 4)
- Select end roof pole, with orange sticker, then insert through the roof sleeve with orange webbing sleeve at end of the tent. (illus. 4)

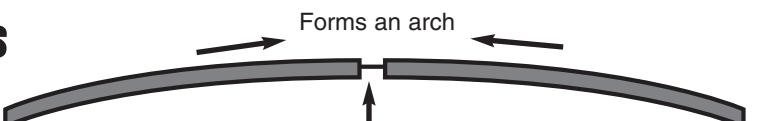

illus. 3 Curved roof pole assembly.

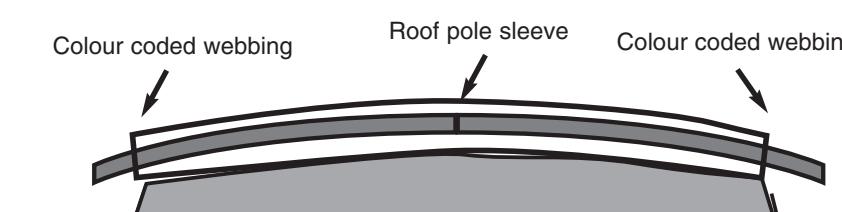

illus. 4 Curved roof pole system shown
inserted through pole sleeve.

