



MINI LANTERN

How to Use and Enjoy Your Coleman®

exponent®



5 Year Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. No warranty is provided for batteries and lightbulbs. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use of non-Coleman accessories or parts, use contrary to the operating instructions or failure to follow maintenance instructions, commercial, in profit or non-profit instructional or rental applications, disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY. SOME STATES, PROVINCES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

THINGS YOU SHOULD KNOW

1. Operating time for this lantern depends on whether it is run continuously or intermittently. Intermittent operation extends the run time of a set of batteries. On a new set of batteries, approximate run time of up to 8 hours on low, 4 hours on high, and 20 hours on emergency strobe.
2. The LED is a lifetime light source. It will never need to be replaced.
3. Do not leave discharged batteries in the lantern for this could permanently damage the lantern.
4. To clean the outside of the lantern and globe, use only a damp cloth and mild dishwashing liquid. Avoid excessive water and strong cleaner which can damage lantern.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by **courier** or **insured mail** with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

For products purchased in Canada:

Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions
20B Hereford Street
Brampton (Ontario) L6Y 0M1

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707.

©2008 The Coleman Company, Inc. All rights reserved.

Coleman®, , **Coleman®**, and **exponent®** are registered trademarks of The Coleman Company, Inc.

TO INSTALL OR REPLACE BATTERIES

Carefully read all instructions before use and save for future reference. Your new Exponent® lantern operates on two “CR2” lithium cell batteries.

1. Lift up carabiner located on bottom of lantern and rotate end cap counterclockwise to remove. (Fig. 1)
2. Remove battery cover by pushing the snap feature and lifting up. (Fig. 2)
3. Install “CR2” batteries in the correct orientation as shown on the battery housing. Make certain all batteries are installed correctly. (Fig. 3)
4. Replace battery cover by first inserting the tab on the battery cover into the notch in the battery housing. Rotate down until battery cover snaps into locked position.
5. Replace end cap and rotate carabiner clockwise until tightened.



Fig. 1



Fig. 2

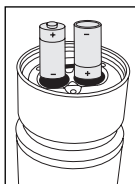


Fig. 3

OPERATING INSTRUCTIONS

Your Exponent® lantern allows you to choose the type of lighting you prefer: full brightness, subdued lighting, or emergency strobe.

1. Turn on the lantern by pushing the 4-position switch (rubber button). The number of times you push the switch will let you choose your lighting preference:
 - Once for on and full brightness
 - Three times for flashing emergency signal light
 - Twice for more subdued lighting
 - Four times to turn lantern off
2. Your lantern is equipped with “Smart Switch” technology. Push switch to cycle through settings, but if left on any setting for a few seconds, the next activation turns off lantern.

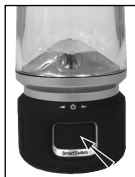


Fig. 4

ROTATING COLLAR FEATURE

Your new Exponent® lantern is equipped with a rotating collar to protect the on/off switch from inadvertently being activated during transportation or storage.

1. Rotate collar to the left or right, 180°, until the switch is covered and in the locked position. (Fig. 5 & 6)
2. To operate the lantern, rotate collar to the left or right, 180°, until the switch is exposed and collar clicks into place to secure.



Fig. 5



Fig. 6

TO ATTACH LANTERN FOR HANGING

1. Push down on built-in, spring-loaded, carabiner located on bottom of lantern then insert cord or thin strap material to hang.



Fig. 7