



Pebble Creek™ 20'x11'

Instructions apply to Part Number 9272-210C

POLE ASSEMBLY PARTS

Part No. 9272-321

Part No. 9272-323

Part No. 9272-319

Part No. 9272-317

Part No. 9272-325

Part No. 9272-315

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

(2) Main Tent Poles (Black)

(2) Side Poles (Grey)

(1) Center Pole (Black)


(2) Upright Poles (Black)

(2) Rainfly Poles

Rainfly

1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with doors facing desired direction. (illus. 1)
- Unzip doors.
- Stake down tent corners, using the stake loops. Keep the floor taut. (illus. 2)
- Stake down tent through the rings on the pin and ring system.
- Assemble frame poles by interlocking shock-corded poles. (four poles)
- Insert the poles into pole sleeves. The longer black poles should cross forming an "X" in the middle of tent. The shorter side grey poles insert into sleeves running front to back. The shorter black center pole runs straight front to back. (illus. 1)

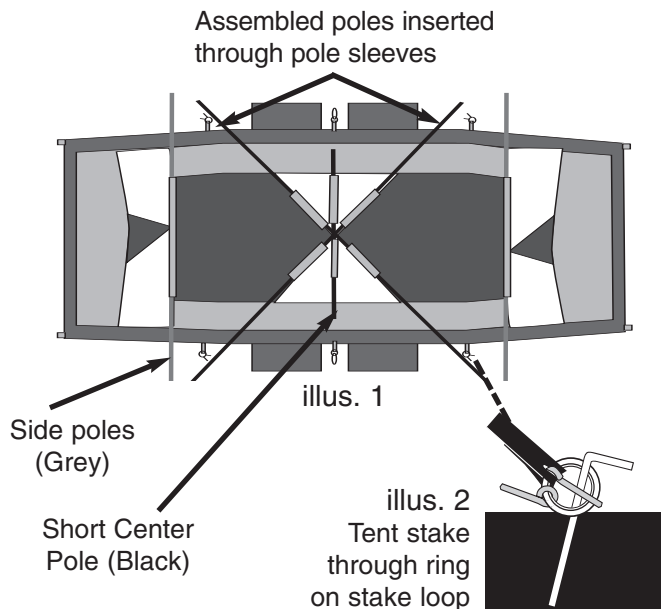


2 Connect Frame to Tent

- Insert one pin into the end of main black tent pole to the side of the door. (illus. 3), (illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole end.
- Repeat for second pole.
- Insert remaining pin into the end of side pole, go to opposite end of pole and apply pressure until you arch the pole and can insert the pin into the pole. (illus. 3), (illus. 4)
- Repeat for other side pole.




illus. 4
Tent frame set-up

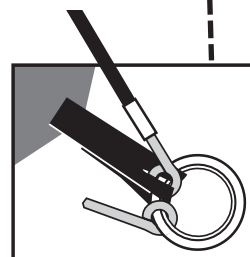


illus. 3
Insert pin into pole end

3 Attach Center Pole and Upright Poles to Hub.

- Insert center pole end into top of hub. Repeat for other end. (illus. 5), (illus. 6)
- Insert the upright pole end with the clip into the bottom of the hub until it clicks into position. (illus. 5), (illus. 6)
- Insert the metal clip located at the center of the tent, into the bottom of the upright pole. (illus. 7)
- Repeat for second upright pole on other side of tent.

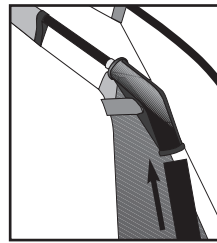

illus. 5
Center pole inserted into top of Hub and Upright pole inserting into bottom of hub.

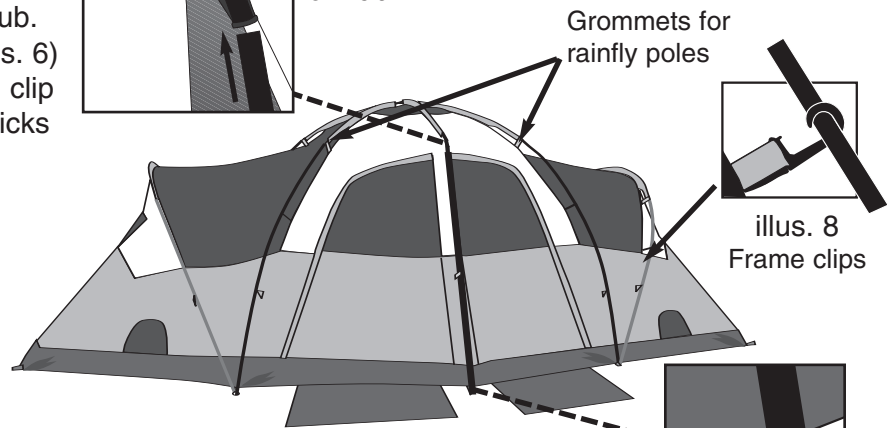


illus. 8
Frame clips

4 Attach Frame Clips

- Attach frame clips along the edges of tent to frame poles. (illus. 6), (illus. 8)


illus. 6 Assembled tent without rainfly.

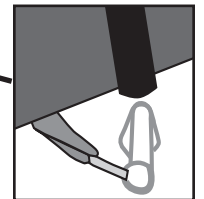

illus. 7


5 Attach Rainfly

- Assemble rainfly poles by interlocking shock-corded poles.
- Insert rainfly poles into pole sleeves located at the center edges of the underside of rainfly. (illus. 9), (illus. 10)
- Drape rainfly over tent frame, pole side down. Rainfly poles should be over front and rear doors. (illus. 10)
- Hook the eight elastic loops (found at the rainfly corners) to the fabric loops on the bottom row of frame clips. (illus. 11)
- Insert the tips of the rainfly poles into the grommets on the front and rear of tent. (See above illus. 6)
- Secure rainfly with attachments located on underside of fly. (illus. 9)
- Attach and stake out guylines.

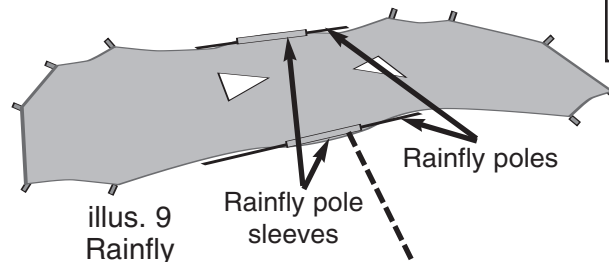

illus. 9
Rainfly

illus. 11
Hooks attach to fabric loop

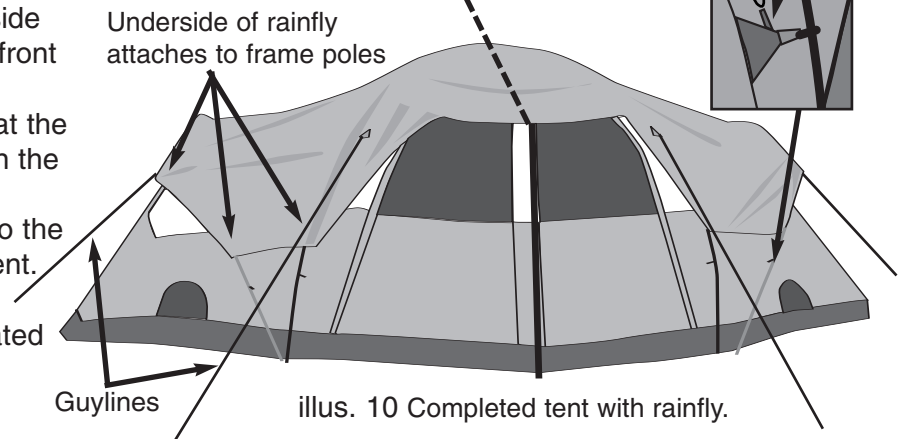

illus. 10 Completed tent with rainfly.

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. For additional protection we recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



IMPORTED BY
SUNBEAM CORPORATION (CANADA) LIMITED
 5975 Falbourn Street, Mississauga (Ontario) L5R 3V8
 1 800 387-6161 • www.colemancanada.ca