

DO NOT PRINT THIS PAGE

Printing Notes:

Material: 5 MIL high gloss paper; 50# liner;with 1mil clear polyester overlaminante (UV resistant)
Adhesive: V98 HCT adhesive.
Ink: Black
Printing: Offset Printing
Resolution: 150 DPI or above
Size: 11.69 x 8.27 in (A4) (W x H)

This drawing contains proprietary information and trade secrets of The Coleman Company, Inc.
Unauthorized use or copying is prohibited.






METRIC [INCH]					
CRITICAL DIMENSION CHECKING IS COMPULSORY					
	02	29-NOV-11	1. Changed the dimension to A4(11.69 x 8.27 in (W x H). 2. Changed the material to "5 MIL high gloss paper; 50# liner;with 1mil clear polyester overlaminante (UV resistant)" and added "Adhesive: V98 HCT adhesive." 3. Added the cover page and updated the copyright.		
VOLUME	cm ³	01	10-FEB-09	NEW	Rainy X 20021139
MASS	grams	REV.	DATE	MODIFICATIONS	NAME EON NO.
DENSITY	g/cm ³	SEE NOTES			The Coleman Company, Inc. Wichita, Kansas USA 67219
GENERAL TOLERANCES EXCEPT AS NOTED					
0 TO 6mm = ±0.1 >6 TO 30mm = ±0.2 >30 TO 80mm = ±0.3 >80 TO 180mm = ±0.4 >180mm = ±0.5 ANGULAR = ± 3°					
FINISH SPEC.	SEE NOTES			COMPOSITE- NO	SHEET 1 OF 1
SCALE:	DATE:	DRAWN BY:	APPROVED BY:	REVISION	
1:1	10-FEB-09	Rainy X	ID	02	
NAME:	INSTRUCTION SHEET FOR 2000002974			PART NO.:	4010005157



PACK-AWAY® KITCHEN





WARNING:
Read instructions and warnings before set up and use.

- Check to ensure product is not damaged, prior to use. If product is damaged, do not use.
- Use care when setting up and taking down product to avoid pinch points.
- Not for use by unsupervised children.
- Never use on uneven or soft surface.
- Weight limits for hanging items:
Spoon Rack – 1 lb. (454 g) Lantern Hook – 12 lbs. (5.4 Kg)
- Table top not intended for grill use. Use grill support braces only.

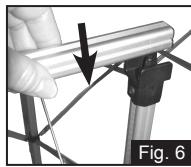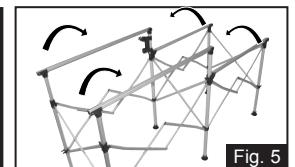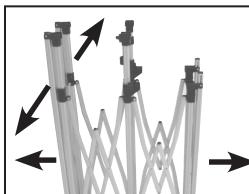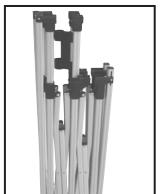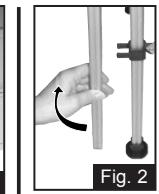

To Set Up

- Unlock front latches, open carry case and remove all components. (Fig. 1)

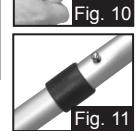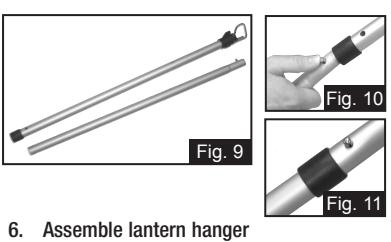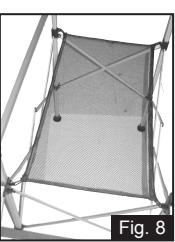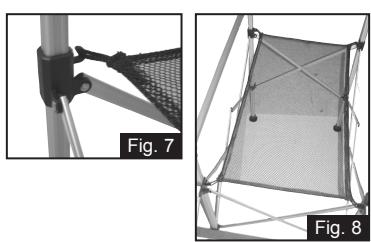

- Attach net shelf by placing loops onto hooks on legs as shown. (Fig. 7 & 8)

- Assemble lantern hanger pole by pressing down on tab and inserting to a locked position in the hole on other pole. (Fig. 9, 10, & 11)




- Rotate bracket until it lines up with tab then push down to lock position. (Fig. 12)



- Insert assembled pole into bracket (Fig. 13). NOTE: Arrow and notch on pole must line up with notch in bracket for proper installation.




- Tighten knob on bracket to secure. (Fig. 14)

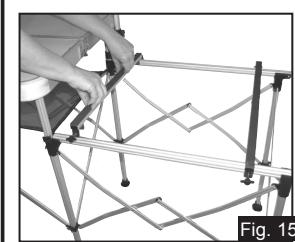

- Attach 2 grill support braces and adjust width to properly support your grill shape & size. Tighten all 4 knobs to secure. (Fig. 15)

WARNING: Do not over tighten. Over tightening may damage aluminum frame.

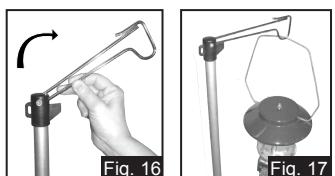


- Lift up on hanger bracket and rotate to position shown (Fig. 16 & 17). Insert lantern bail.

- On bottom side of tabletop, push latches to lock in open position. (Fig. 18)




- Place tabletop onto braces and press down to lock into clips on underneath side. (Fig. 19 & 20)

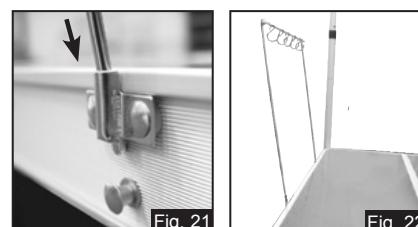


- Insert posts of utensil rack, at a slight angle, to lock into clips on back of table. (Fig. 21 & 22)

Your Pack-Away® Kitchen is now ready to use and enjoy.

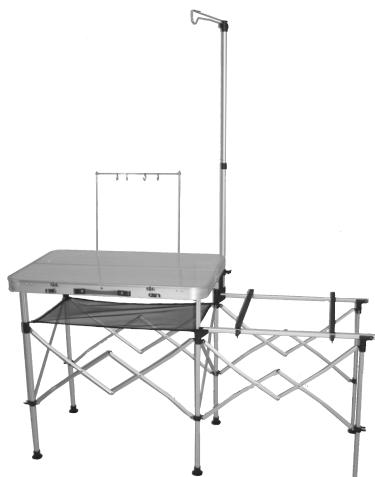

To Store

- Reverse Set Up procedures.
- Place components into carry case as shown. (Fig. 23)

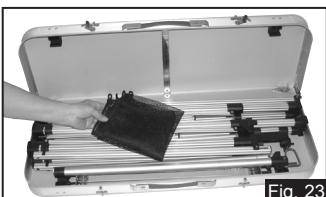

- Lock front latches on carry case. (Fig. 24)



Your Pack-Away® Kitchen is now ready to move or place into storage.



The Coleman Company, Inc. • 3600 North Hydraulic • Wichita, Kansas 67219 U.S.A.
1-800-835-3278 in the United States • www.coleman.com

Sunbeam Corporation (Canada) Limited • DBA Jarden Consumer Solutions
20B Hereford Street • Brampton, ON L6Y 0M1
1-800-387-6161 in Canada • www.coleman.com

MADE IN CHINA

© 2011 The Coleman Company, Inc.
Coleman®, and Pack-Away® are registered trademarks of
The Coleman Company, Inc.

4010005157 (ECN20021139-02)



CUISINE PACK-AWAY®

AVERTISSEMENT:

Lisez les instructions et avertissements avant le montage et l'utilisation.

- Assurez-vous que le produit ne présente aucun dommage avant l'emploi. Ne vous en servez pas si vous décelez un dommage quelconque.
- Montez et démontez le produit prudemment pour éviter de vous pincer.
- Ne permettez pas aux enfants non surveillés de l'employer.
- Ne posez jamais ce produit sur une surface accidentée ou meuble.
- Observez les poids permis ci-après pour les articles accrochés:
Porte-ustensiles - 1 lb (454 g) Porte-lanterne - 12 lb (5,4 kg)
- Ne posez pas votre gril sur le plateau de la table - mettez-le uniquement sur les entretoises prévues à cet effet.



Fig. 1

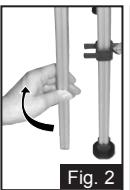


Fig. 2

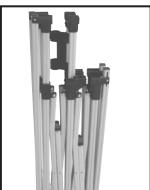


Fig. 3

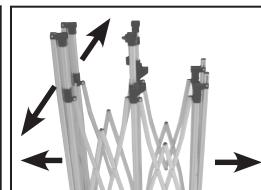


Fig. 4

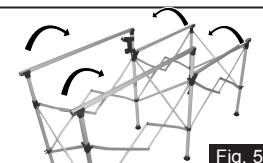


Fig. 5

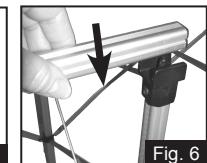


Fig. 6

- Tournez les supports pour les mettre tel qu'il illustré. (Fig. 5)
- Positionnez le trou du fond de chaque entretoise sur le tenon du support puis appuyez fermement pour immobiliser l'entretoise. (Fig. 6)

Montage

- Débloquez les loquets, ouvrez le coffret et sortez tous les éléments. (Fig. 1)

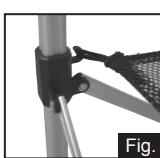


Fig. 7

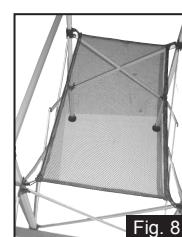


Fig. 8

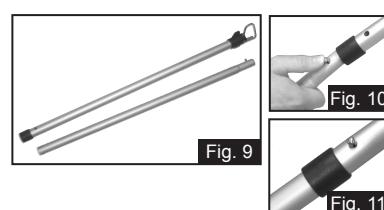


Fig. 9



Fig. 10



Fig. 11



Fig. 12



Fig. 13

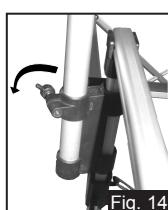


Fig. 14

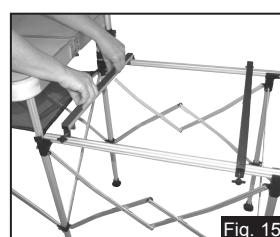


Fig. 15

- Attachez les entretoises pour le gril et ajustez-les selon la taille du gril particulier. Immobilisez les entretoises en serrant les 4 boutons. (Fig. 15)

AVERTISSEMENT: Ne serrez pas à l'excès, vous risqueriez d'abîmer le bâti d'aluminium.



Fig. 16



Fig. 17



Fig. 18

- Levez le dispositif d'accrochage et tournez-le pour le positionner tel qu'il illustré. (Fig. 16 et 17) Suspendez-y l'anse de la lanterne.

- Glissez les loquets situés sur la face inférieure du plateau de table afin de les bloquer en position ouverte. (Fig. 18)



Fig. 19

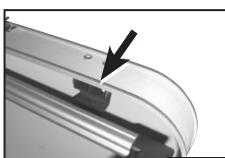


Fig. 20



Fig. 21


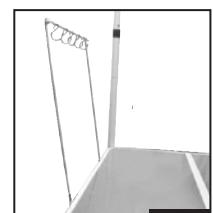


Fig. 22

- Insérez les montants du porte-ustensiles, un peu de biais, pour les bloquer dans les appliques arrière de la table. (Fig. 21 et 22)

La cuisine Pack-Away® est prête à entrer en service.

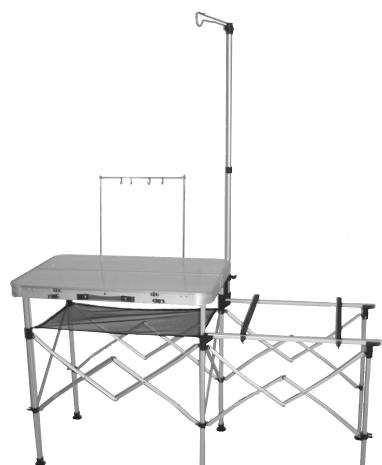

4010005157 (ECN20021139-02)

Rangement

- Inversez la méthode de montage.
- Replacez les éléments dans le coffret, tel qu'ilustré. (Fig. 23)

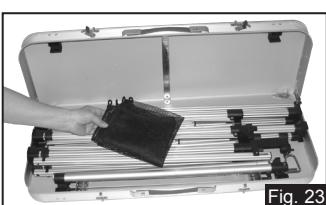


Fig. 23

- Verrouillez les loquets placés à l'avant du coffret. (Fig. 24)



Fig. 24

La cuisine Pack-Away® peut alors être déplacée ou rangée jusqu'à votre prochaine excursion.

The Coleman Company, Inc. • 3600 North Hydraulic • Wichita, Kansas 67219 U.S.A.
1-800-835-3278 aux États-Unis • www.coleman.com

Sunbeam Corporation (Canada) Limited • DBA Jarden Consumer Solutions
20B Hereford Street • Brampton, ON L6Y 0M1
1-800-387-6161 au Canada • www.coleman.com

FABRIQUÉE EN CHINE

© 2011 The Coleman Company, Inc.
Coleman®, et Pack-Away® sont des marques déposées de The Coleman Company, Inc.