



### 5 Year Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. No warranty is provided for batteries and lightbulbs. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use of non-Coleman accessories or parts, use contrary to the operating instructions or failure to follow maintenance instructions, commercial, for profit or non-profit instructional or rental applications, disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

**COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY. SOME STATES, PROVINCES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.**

### How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by calling in the U.S. 1-800-835-3278 or TDD 316-832-8707 and in Canada 1-800-387-6161 or 905-501-0090. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by courier or postal service with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.  
3600 North Hydraulic  
Wichita, KS 67219

For products purchased in Canada:

Sunbeam Corporation (Canada) Limited  
5972 Falbourne  
Mississauga, (Ontario) L5R 3V8

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call  
1-800-835-3278 or TDD 316-832-8707.



©2005 The Coleman Company, Inc. All rights reserved.  
Coleman®, Coleman® and Pack-Away® are registered trademarks of  
The Coleman Company, Inc.

11/2005



How to Use and Enjoy Your Coleman®

## PACK-AWAY® 2-in-1 BATTERY LANTERN



**8D PACK-AWAY®**  
Model 5324 Series

## OPERATING INSTRUCTIONS

1. Carefully read all instructions before use and save for future reference.
2. The PACK-AWAY® 2-in-1 lantern has two distinct methods to distribute light. In the "closed" position (See Fig. 1), the lantern serves as a floodlight by directing the beam while holding like a flashlight. In the "open" position (See Fig. 2), the lantern distributes light 360°.
3. To use as a traditional lantern, pull outward on both ends to fully open.
4. To use as a directional floodlight, push inward on both ends of the lantern.

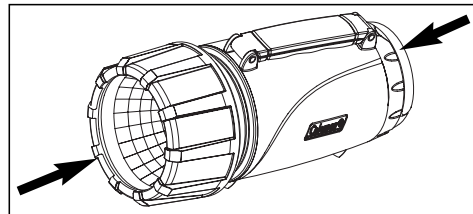 


Fig. 1

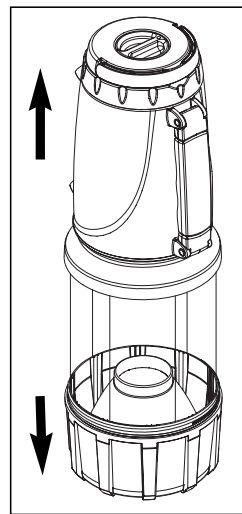 


Fig. 2

## TO INSTALL OR REPLACE BATTERIES

Your new lantern operates on 8 "D" cell batteries. For longest life, use alkaline batteries.

1. With lantern off, turn upside down and unscrew battery cover by turning counterclockwise.
2. Install 8 "D" cell batteries in the correct orientation as shown on the battery housing. Always be careful that all 8 batteries are installed correctly. (See Fig. 3.)
3. To replace battery cover, properly align cover on body of lamp and turn clockwise. Check that battery cover is securely in closed position before transporting lantern.

NOTE: When battery cover is fully tightened, the on/off symbols will align properly with the switch.

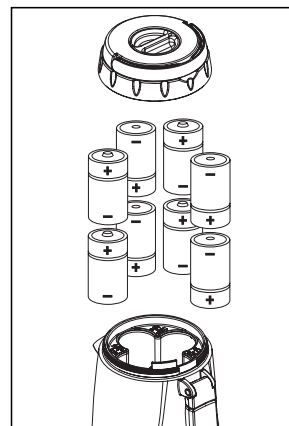 


Fig. 3

## TO CHANGE FLUORESCENT TUBE

NOTE: This lantern uses an 11-watt fluorescent spiral tube (See Parts List for replacement part #). Fluorescent spiral tubes are very fragile. Handle with care.

1. Make sure lantern is in off position.
2. With lantern in an upright position and spiral tube visible, remove bezel by turning counterclockwise.
3. Gently press down on fluorescent spiral tube and turn counterclockwise until both alignment tabs are visible in locating slots of reflector. Remove tube.
4. Install new fluorescent spiral tube by placing alignment tabs in locating slots of reflector. Gently push down and rotate clockwise until secure. (See Fig. 4)
5. Reattach bezel to main body of lantern by turning clockwise by hand until fully secure. Do not overtighten.

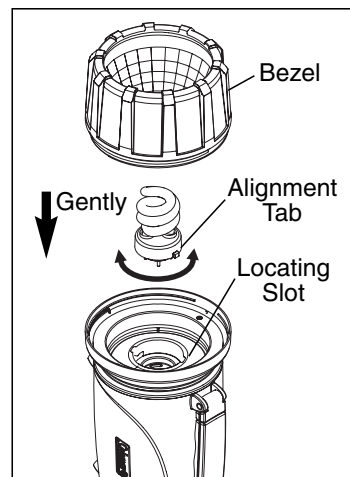 


Fig. 4

## THINGS YOU SHOULD KNOW

1. The time that the lantern will operate on a new set of batteries depends on how it is used. Alkaline batteries are recommended for maximum operating time and minimum operating cost. Approximate operation time (with Alkaline Batteries) up to 19 hours.
2. This lantern may not light at temperatures below 20°F (-7°C).
3. When the tube is not lit to full brilliance, batteries should be replaced.
4. IMPORTANT: Do not leave discharged batteries in the lantern for an extended period of time as this could permanently damage the lantern. If your lantern is damaged due to battery leakage, refer to battery manufacturer's warranty for repair or replacement.
5. To clean the outside of the lantern and globe, use only a damp cloth and mild dishwashing liquid.
6. For repair service, call 1-800-835-3278 TOLL FREE in the United States or 1-800-387-6161 in Canada for location of your nearest service center. If the lantern must be returned to a service center, attach your name, address, and a description of problem to product and mail to service center with shipping and insurance prepaid. (Do not ship product with batteries loaded.)

## Parts List

- |    |           |                        |
|----|-----------|------------------------|
| 1. | 5324-1051 | Bezel                  |
| 2. | 5324-205  | 11-watt Spiral Tube    |
| 3. | 5324-2001 | Battery Cover w/Handle |

