



VELA® 12'x11'

Instructions apply to Part Number 9161-121C

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, do not position the door of tent into the wind.

(2) Main Tent Poles

POLE ASSEMBLY PARTS

Part No. 9161-1021C



(1) Rainfly Pole

Part No. 9161-1031C

Rainfly Part No. 9161-1041C



1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with door facing desired direction. (illus. 1)
- Unzip door.
- Stake down tent using the rings of the pin & ring system at the corners of the tent. Keep the floor taut. (illus. 2)
- Assemble frame poles by interlocking shock-corded poles. This will make two long poles.
- Insert the poles diagonally into pole sleeves. The center of the poles should cross forming an "X" in the middle of tent. (illus. 1)

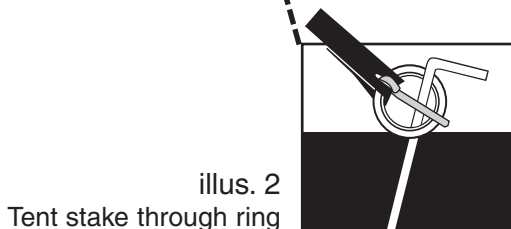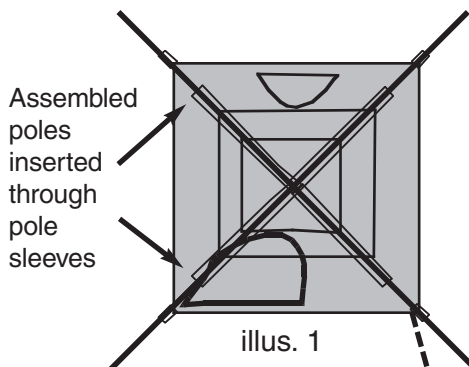

2 Connect Frame to Tent

- Insert one end of main tent pole onto pin of pin & ring system at tent corner. (illus. 3)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole.
- Repeat for second pole. (illus. 4)

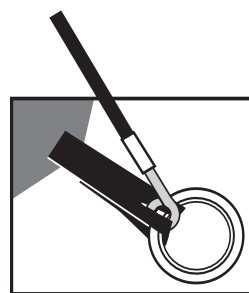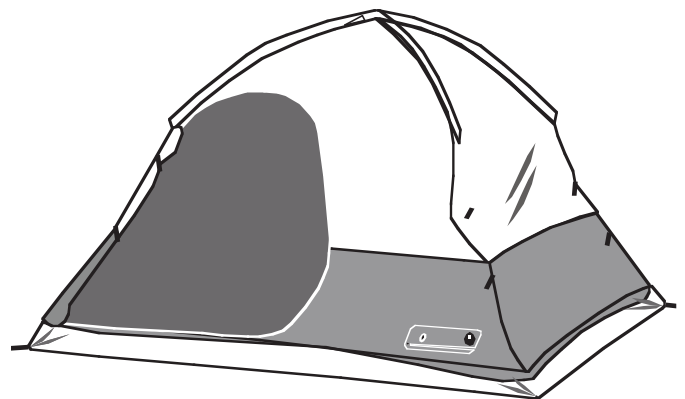


3 Attach Tent to Frame Using Frame Clips

- Attach frame clips along the edges of tent to frame poles. (illus. 5), (illus. 6)
- Make any adjustments to the tent corner stakes that are needed.



4 Attach Rainfly

- Assemble rainfly pole by interlocking shock-corded pole.
- Insert rainfly pole into reinforced pockets located at the center edges of the underside of rainfly. (illus. 7), (illus. 8)
- Attach underside of rainfly to the rainfly pole. (illus. 8)
- Drape rainfly over tent frame, pole side down. Rainfly pole should point out over door and rear window.
- Connect the four elastic loops with “S” hooks, (found at the rainfly corners) to the rings at the tent corners.
- Secure rainfly with attachments located on underside of fly. (illus. 9)
- Stake out the tent with (6) guylines. (illus. 9)

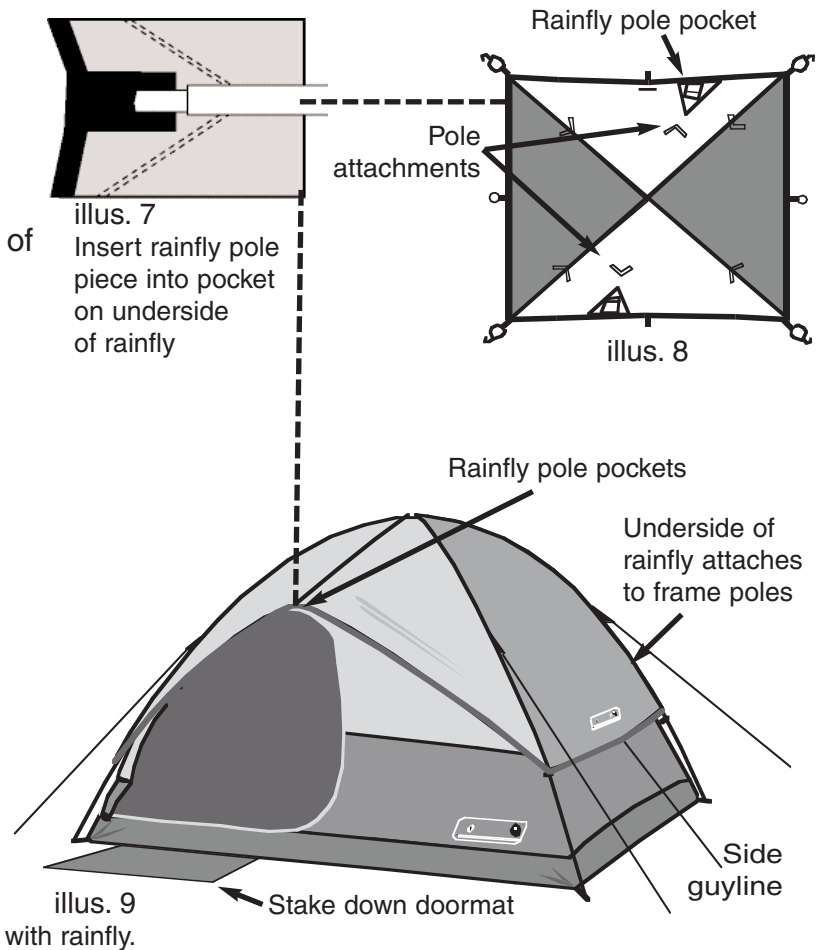

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



IMPORTED BY SUNBEAM CORPORATION (CANADA)
LIMITED DOING BUSINESS AS
JARDEN CONSUMER SOLUTIONS

5975 Falbourne Street, Mississauga, Ontario
1 800 387-6161 • www.colemancanada.ca

MADE IN CHINA