



Tallgrass™ 17'x16'5"

 
Instructions apply to Part Number 9230-174

POLE ASSEMBLY PARTS

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

(3) Main Tent Poles (Black) Part No. 9230-3521




(2) Side Poles Part No. 9230-3541



Front Entrance Pole (Gray) Part No. 9230-3571



 (2) Side Rainfly Poles Part No. 9230-3581



Rainfly Part No. 9230-3561

Pet Den Pole Part No. 9230-3591


(1) Front Rainfly Pole (Gray) Part No. 9230-3562



1 Layout & Positioning of Tent, Pole Assembly


- Layout and position tent with front door facing desired direction. (illus. 1)
- Unzip doors.
- Stake down tent corners only, using the stake loops. Keep the floor taut. (illus. 2)(Intermediate loops will be staked later.)
- Assemble main tent poles by interlocking shock-corded poles. (three poles)
- Insert the poles into pole sleeves. The poles should cross forming a triangle in the middle of tent. (illus. 1)

Assembled Main poles inserted through pole sleeves

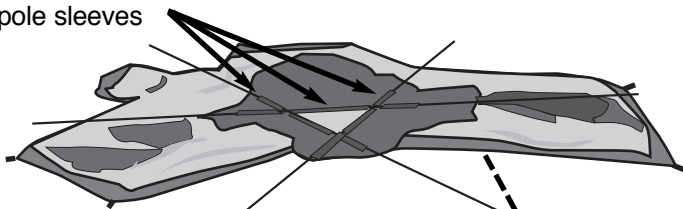


illus. 1

illus. 2 Tent stake through ring on stake loop

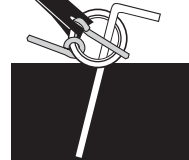


2 Connect Frame to Tent

- Insert one pin into the end of main tent pole at tent corner. (illus. 3, illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole end.
- Repeat for second and third main poles. (illus. 3, illus. 4) This will raise the center of the tent.
- Assemble side and front shock-corded poles.

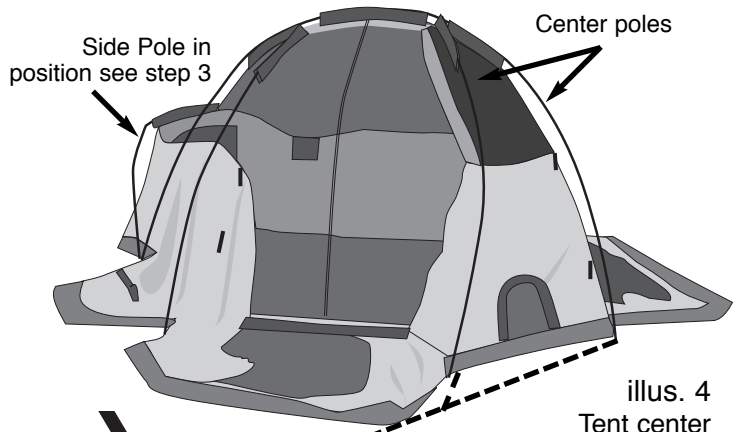


illus. 4 Tent center frame set-up

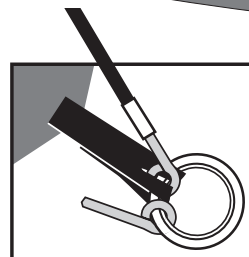

illus. 3 Insert pin into pole end

3 Add Side & Front Poles, Attach Frame Clips



- Insert side poles into pole sleeves above rear doors. Insert front pole into pole (gray) sleeve above front door. (illus. 5)
- Insert pin on stake loops into the end of side and front tent poles. (illus. 3, illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole end. Repeat for remaining poles.
- Attach frame clips to frame poles. (illus. 5, 6)
- Stake out all additional loops.

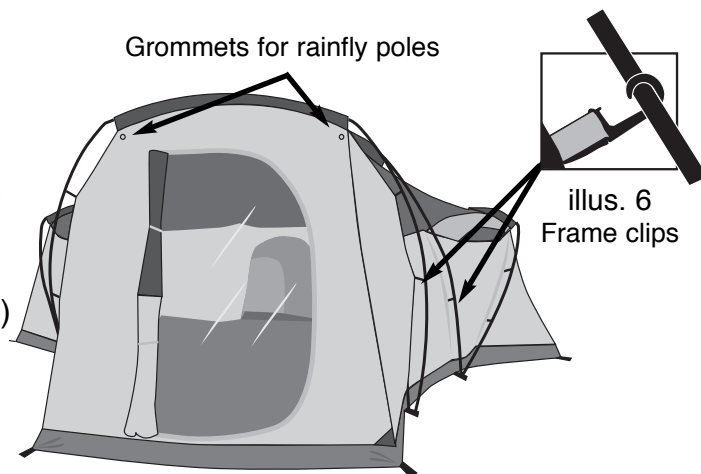


illus. 5 Assembled tent without rainfly. Note the frame clips located on edge of tent.

4 Attach Rainfly

- Drape rainfly over tent frame, with logos on each side of tent. (illus. 7, 8)
- Connect the elastic loops with “S” hooks on the rainfly corners, to the fabric loops on the frame clips.
- Assemble all rainfly poles.
- Insert side (black) rainfly poles through pole sleeve on underside of rainfly above the rear doors. Insert front (gray) rainfly pole in pole sleeve above front door. Gently bend and insert tips of the rainfly poles into the grommets above the doors. (illus. 5, 8)
- Secure rainfly with attachments located on underside of fly. (illus. 8)
- Attach and stake out guylines.
- **Pet room:** Insert pet room pole through pole sleeve and gently bend until you can insert tips into grommets on stake loops. (illus. 9)

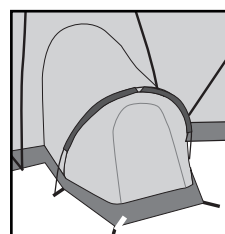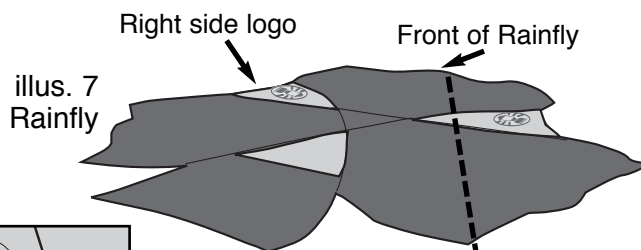

Insert Front Rainfly pole through pole sleeve on underside of rainfly.

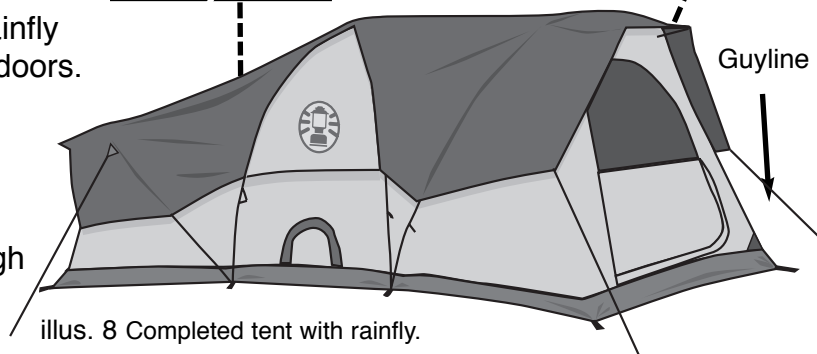

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. For additional protection we recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.
3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA