

Beach Shade™

Instructions apply to Part Number 2000001202

POLE ASSEMBLY PARTS

Part No. 9192-902

Part No. 9192-922

Main Poles
(Black)

Crossover
Pole (Grey)





When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees. -For best results in windy conditions, position the end of tent into the wind.

1 Layout & Position Beach Shade and Pole Assembly

- Layout and position the Beach Shade with door facing desired direction. (illus. 1)
- Unzip door. (illus. 1)
- Stake down shade corners, using the tent stake loops. Keep the floor taut. (illus. 2) *Option: Use sand bags to weight shelter down, see step 4*
- Assemble Main and Crossover Poles by interlocking shock-corded poles. Insert the Main (black) poles into two pole sleeves that run from front to back. Insert the Crossover (Grey) Pole through the pole sleeve running side to side. (illus. 1)

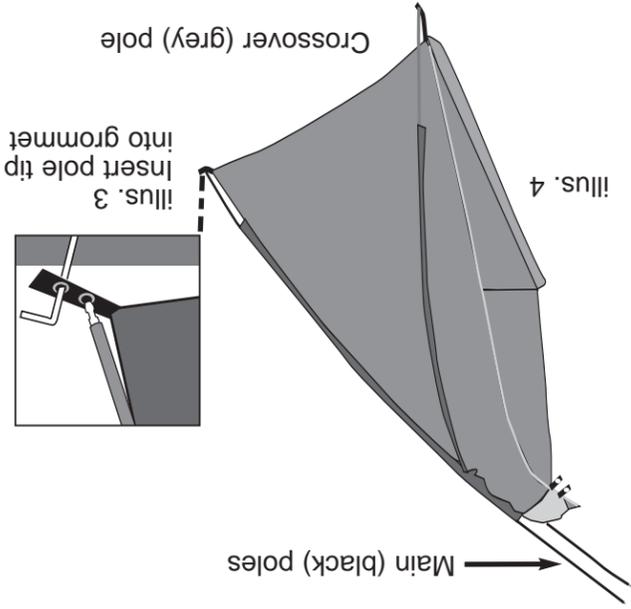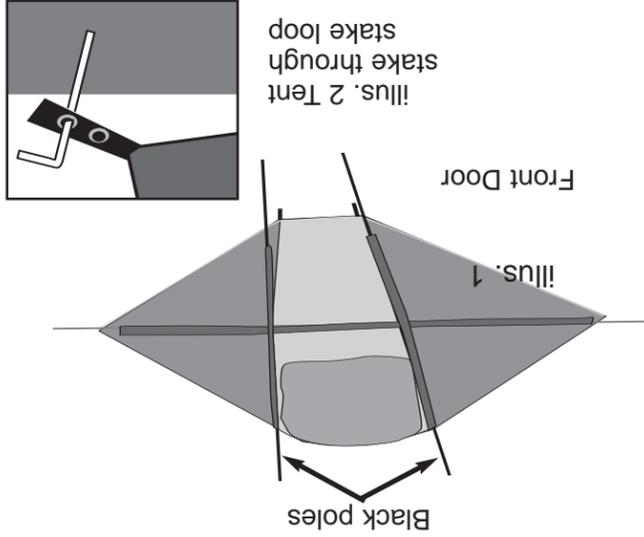


- Insert one end of the grey Crossover Pole into the grommet on tent stake loop on either side of front door. (illus. 3, 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pole tip into the grommet on the stake loop. Go to the back of the Beach Shade insert the black Main pole tip into the grommet on the stake loop. (illus. 3, 4)
- Repeat for the second Main pole.

2 Raise Beach Shade

2 Levez l'abriplage

- Insérez une pointe du mât transversal gris dans l'œillet de l'une ou l'autre des boucles de piquet, de part et d'autre de l'entrée. (ill. 3 et 4)
- Allez à l'autre bout du mât puis arquez progressivement celui-ci jusqu'à ce que vous puissiez introduire la pointe dans l'œillet de la boucle de piquet.
- Allez à l'arrière de l'abri puis insérez la pointe d'un mât principal noir dans l'œillet de la boucle de piquet. (ill. 3, 4)
- Agissez de la même façon avec le deuxième mât principal.

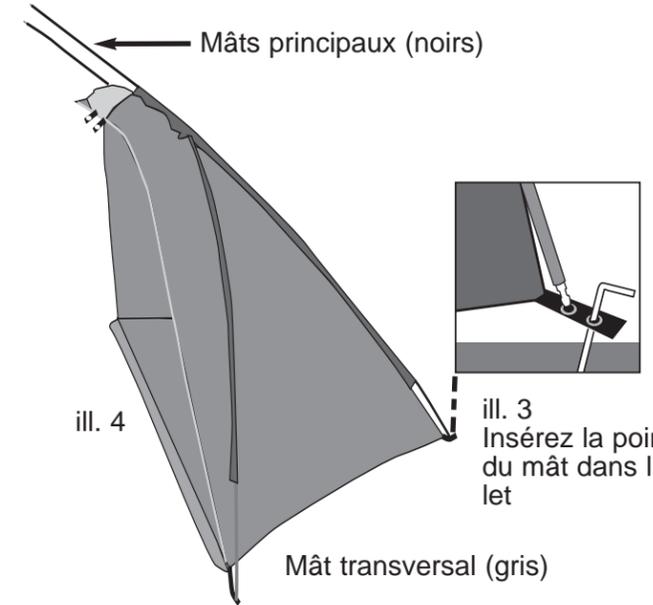

Abriplage

Instructions relatives au modèle 2000001202

PIÈCES DES MÂTS

Pièce n° 9192-902

Pièce n° 9192-922

Mâts principaux
(noirs)


Mât
transversal
(gris)

Quand vous êtes prêt à monter votre tente de plage

- Choisissez un endroit propice: de niveau et sans pierres, branches ou matières dures et pointues
- Ne la placez pas sous les arbres
- Pour obtenir les meilleurs résultats quand il y a du vent, orientez l'arrière de la tente au vent

1 Positionnez l'abriplage et les ensembles des mâts

- Étalez et positionnez l'abri en orientant l'entrée dans la direction désirée. Ouvrez la glissière de l'entrée. (ill. 1)
- Ancrez les coins de l'abri à l'aide des boucles de piquet. Veillez à ce que le tapis de sol soit bien tendu. (ill. 2) *Option: Immobilisez l'abri avec du lest, voyez le quatrième.*
- Emboîtez les sections solidarisées des mâts principaux et transversal.
- Enfilez les mâts principaux (noirs) dans les passants latéraux (avant-arrière) puis le mât transversal (gris) dans le passant frontal. (ill. 1)

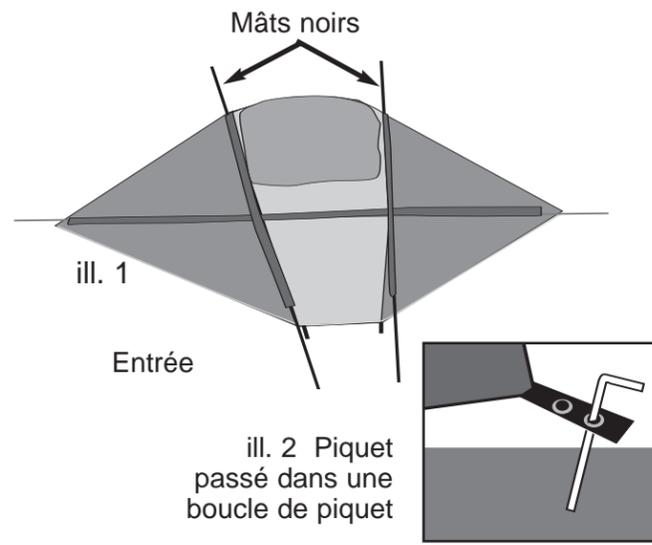


ill. 2 Piquet passé dans une boucle de piquet


ill. 3 Insérez la pointe du mât dans l'œillet

3 Terminez le montage

- De l'avant de l'abri, courbez délicatement l'un des mâts principaux noirs jusqu'à ce que vous puissiez l'insérer dans l'œillet de la sangle avant de l'abri. (ill. 5 et 6)
- Agissez de même avec l'autre mât noir.
- Attachez les haubans à l'avant de l'abri, au-dessus de la grande porte d'entrée, en les insérant dans la sangle, entre l'œillet et la toile. Ancrez les haubans. (ill. 7 et 8)
- Accrochez le vide-poches dans l'abri de plage, vous pourrez garder vos petits objets commodément au-dessus du sol.

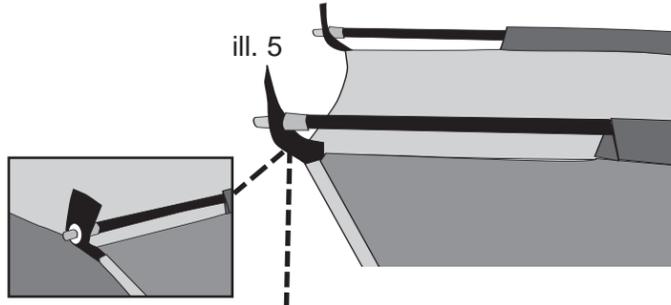

ill. 6

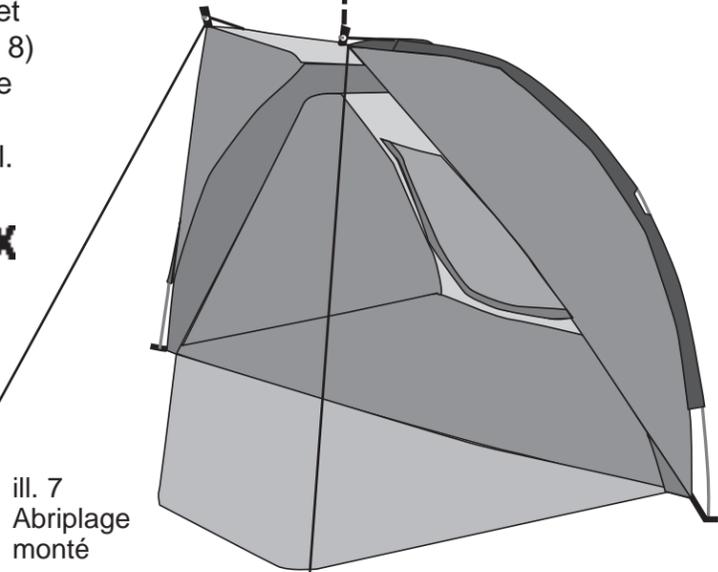

ill. 7
Abriplage monté




ill. 8
Ancrez l'abri à l'aide des haubans réglables

4 Pour terrains sablonneux

- Remplissez les six (6) sacs fournis de sable ou de petits cailloux. (ill. 9)
- Passez l'olive d'un sac lesté dans l'œillet de chacune des 4 boucles de piquet, là où vous auriez normalement placé le piquet. (ill. 10)
- Enterrez les 4 sacs lestés pour immobiliser l'abri. (ill. 10)
- Nouez le bout du hauban au lest, tendez le hauban et enterrez le lest. Agissez de même chose avec le deuxième hauban.

ill. 9 Remplissez les sacs de sable ou de petits cailloux

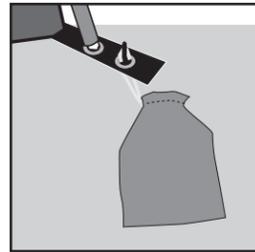

ill. 10
Enterrez le lest pour immobiliser l'abriplage

Renseignements essentiels

- Sous certaines conditions (par temps froid ou humide, par exemple), de la condensation peut se former sur les surfaces intérieures de l'abriplage. Cette condensation est causée par la vapeur d'eau provenant de la respiration, de la transpiration ou de vêtements mouillés, laissés dans l'abri. Il ne s'agit ABSOLUMENT PAS d'humidité ayant pénétré la toile. Vous pouvez la minimiser en gardant les vêtements mouillés hors de votre tente de plage et en assurant une bonne ventilation en tout temps.
- Ne rangez jamais l'abriplage, même temporairement, sans le faire totalement sécher et sans brosser le sable, ou autre, qui y adhère. Ne roulez jamais les mâts ou les piquets dans la toile – utilisez le sac distinct fourni.
- POUR LES DÉTERRER, TIREZ SUR LES PIQUETS MÊMES – NE TIREZ JAMAIS SUR LA TOILE OU SUR LES BOUCLES DE PIQUET.
- NE RANGEZ JAMAIS LES MÂTS DE L'ABRIPLAGE EMBOÎTÉS, DÉBOÎTEZ-LES AVANT DE LES REMISER.

- Ne laissez pas l'abriplage monté pendant des semaines et des semaines car le rayonnement ultraviolet risquerait de sérieusement abîmer le tissu de nylon et de le décolorer.

AVERTISSEMENT : ÉLOIGNEZ LE TISSU DE CETTE TENTE DES FLAMMES ET DE TOUTE SOURCE DE CHALEUR. Cette tente est conforme à la norme d'inflammabilité CPAI-84. Le tissu peut brûler s'il est laissé en contact continu avec une source de flamme. Appliquer toute substance étrangère sur le tissu peut neutraliser les propriétés de résistance aux flammes.


IMPORTÉ PAR
SUNBEAM CORPORATION (CANADA) LIMITED
DBA JARDEN CONSUMER SOLUTIONS
20B Hereford St., Brampton (Ontario) L6Y 0M1
1 800 387-6161 • www.colemancanada.ca

FABRIQUÉ EN CHINE • IMPRIMÉ EN CHINE
Rév. 11/2007

Rev. 11/2007
GSC-IC091107-070642
MADE IN CHINA • PRINTED IN CHINA
1 800 387-6161 • www.colemancanada.ca
20B Hereford St., Brampton, Ontario L6Y 0M1
DBA JARDEN CONSUMER SOLUTIONS
SUNBEAM CORPORATION (CANADA) LIMITED
IMPORTED BY
Coleman

- Do not leave your Beach Shade set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage nylon material and/or cause it to become discolored.
- WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

- #### Things You Should Know
- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your Beach Shade.
 - Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your Beach Shade. It is NOT LEAKAGE through the fabric. It can be minimized by removing wet clothing and by providing good ventilation through the Beach Shade.
 - Never store the Beach Shade, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your Beach Shade. Use separate storage bag.
 - STAKES SHOULD BE REMOVED BY PULLING ON THE STRAKE ITSELF. NEVER PULL ON THE FABRIC OR TENT STRAKE LOOP TO REMOVE STAKE.
 - BEACH SHADE POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.

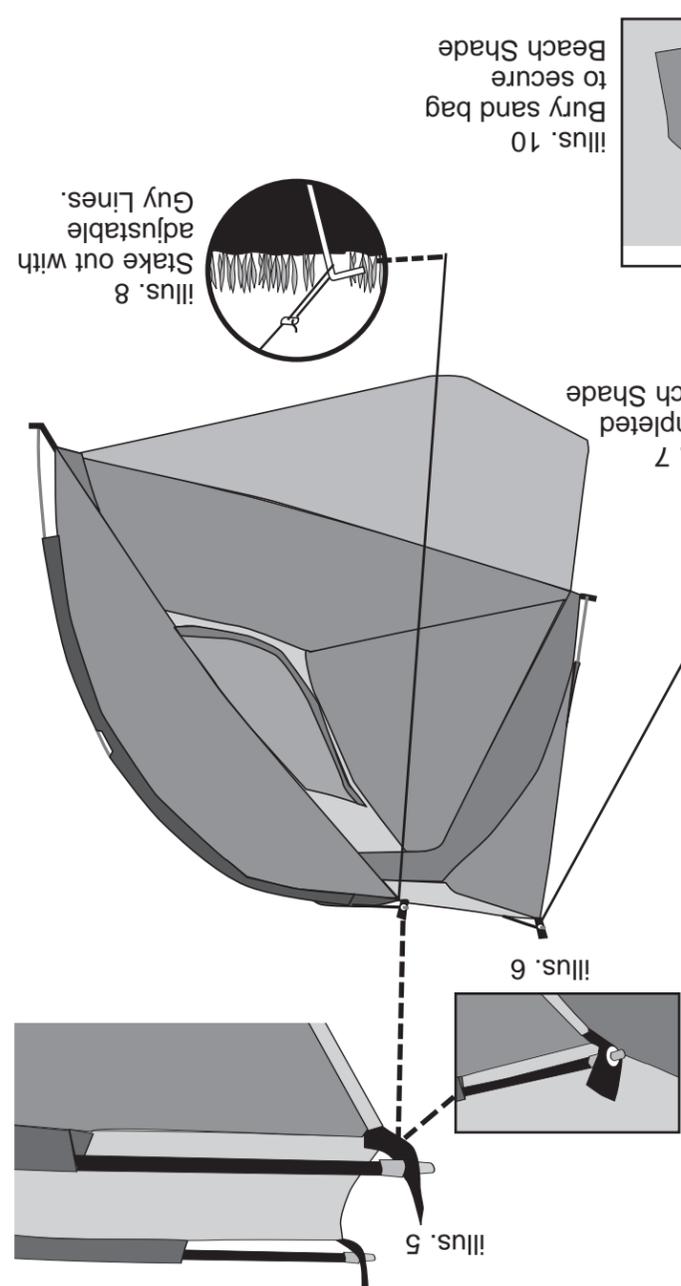

- ### 3 Complete Set up
- From the front of the Beach Shade gently pull the black Main pole down until you can insert it into the grommet on the webbing at the front of the Beach Shade. (illus. 5, 6)
 - Repeat for second main pole.
 - Attach guy lines to the front of the Beach Shade above the large door by inserting the guy line through the webbing between the grommet and the tent. Then stake out. (illus. 7, 8)
 - Hang the storage bag inside the Beach Shade to keep small items off the floor.
- ### 4 For Sandy Conditions
- Fill the (6) sand bags with sand or small rocks. (illus. 9)
 - Insert the toggle of the filled sand bag through the grommet on the stake loop where the stake would have been. Repeat for all (4) stake loops. (illus. 10)
 - Bury the (4) sand bag to secure the Beach Shade. (illus. 10)
 - Tie the end of the guy line to the sand bag, extend and bury.
 - Repeat for Second guy line.