contigo®

Spill-Proof Tumbler
Care and Use Instructions

⚠CAUTION

- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.

CLEANING INSTRUCTIONS:

- Wash thoroughly before first use.
- RINSE IMMEDIATELY AFTER EACH USE with warm water.
  - Remove straw for best results.
- Lid, body and straw are TOP-RACK DISHWASHER SAFE or can be hand-washed.
  - When washing by hand, soak lid, body and straw for 10 minutes in hot soapy water.
  - Hand wash body, lid and straw with warm water in a mild detergent.
  - Rinse thoroughly.

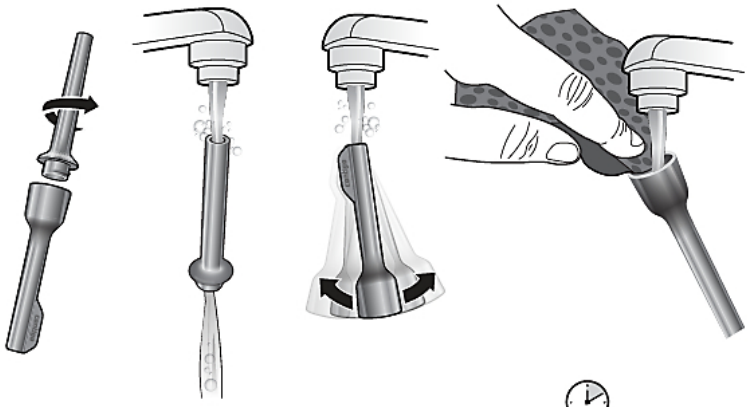

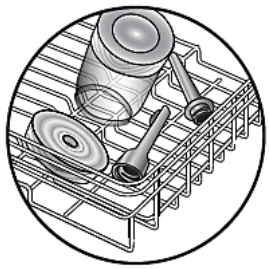

OR



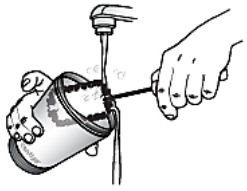

- ALWAYS STORE PRODUCT WITH LID REMOVED AND STRAW UNTWISTED to open position to allow parts to dry completely.



- Reassemble the lid prior to use.

LIFETIME GUARANTEE

For complete warranty information, see www.GoContigo.com.
www.GoContigo.com

©2017 Ignite USA. All Rights Reserved.

Should you have any questions about your purchase, please contact us at 1-888-262-0622 or GoContigo.com.