



DOOR DETAIL

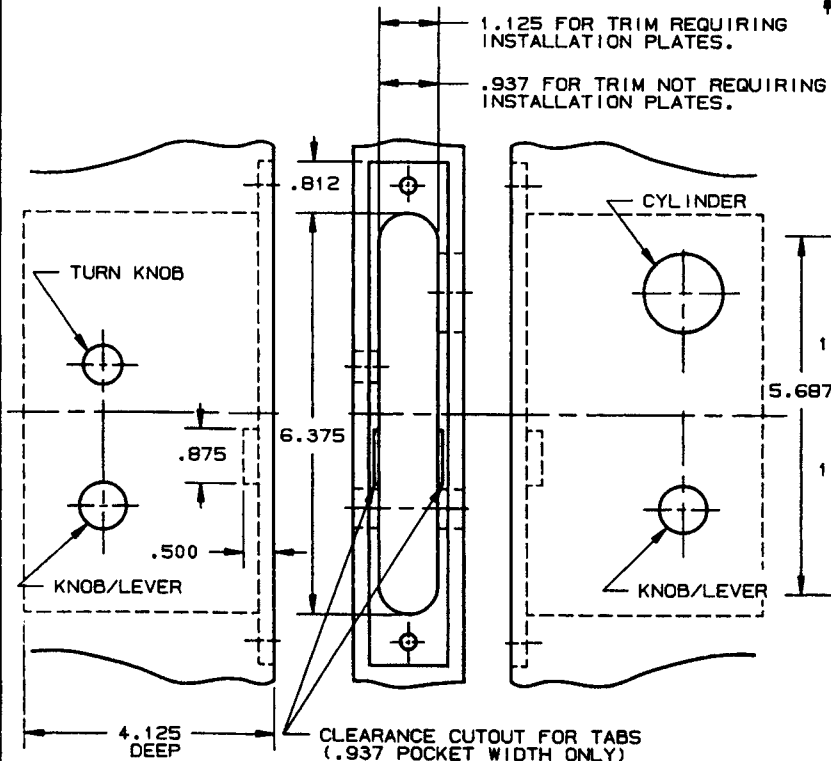

LOCK DETAIL

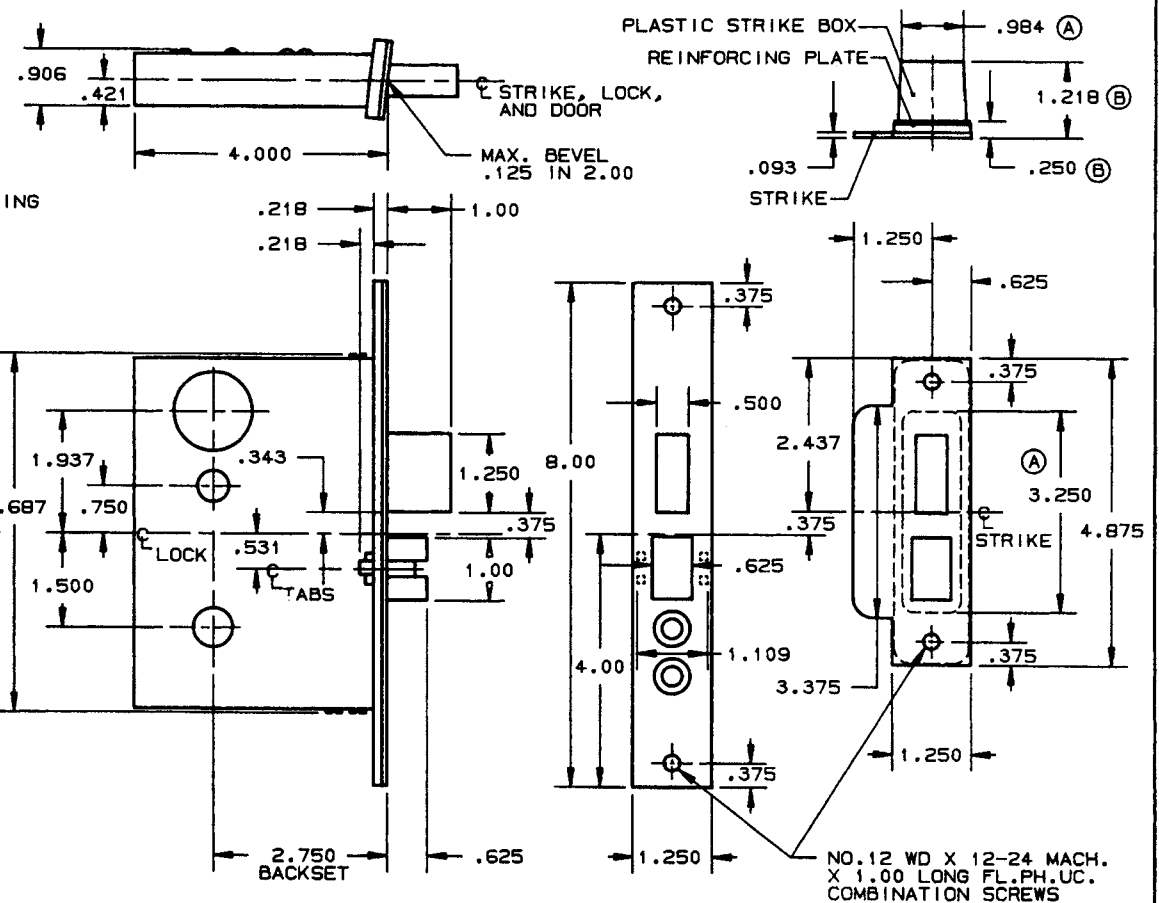

INSIDE

OUTSIDE

NOTE:

- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
- 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS.

SUITABLE REINFORCEMENT BY OTHERS MAY BE REQUIRED FOR METAL AND COMPOSITE CORE DOOR INSTALLATION.

DO NOT SCALE DRAWING

BALDWIN

6001 AND 6001-LS LOCK

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

H001-B

©1991 by Baldwin Hardware Corporation

EFFECTIVE 131911005