
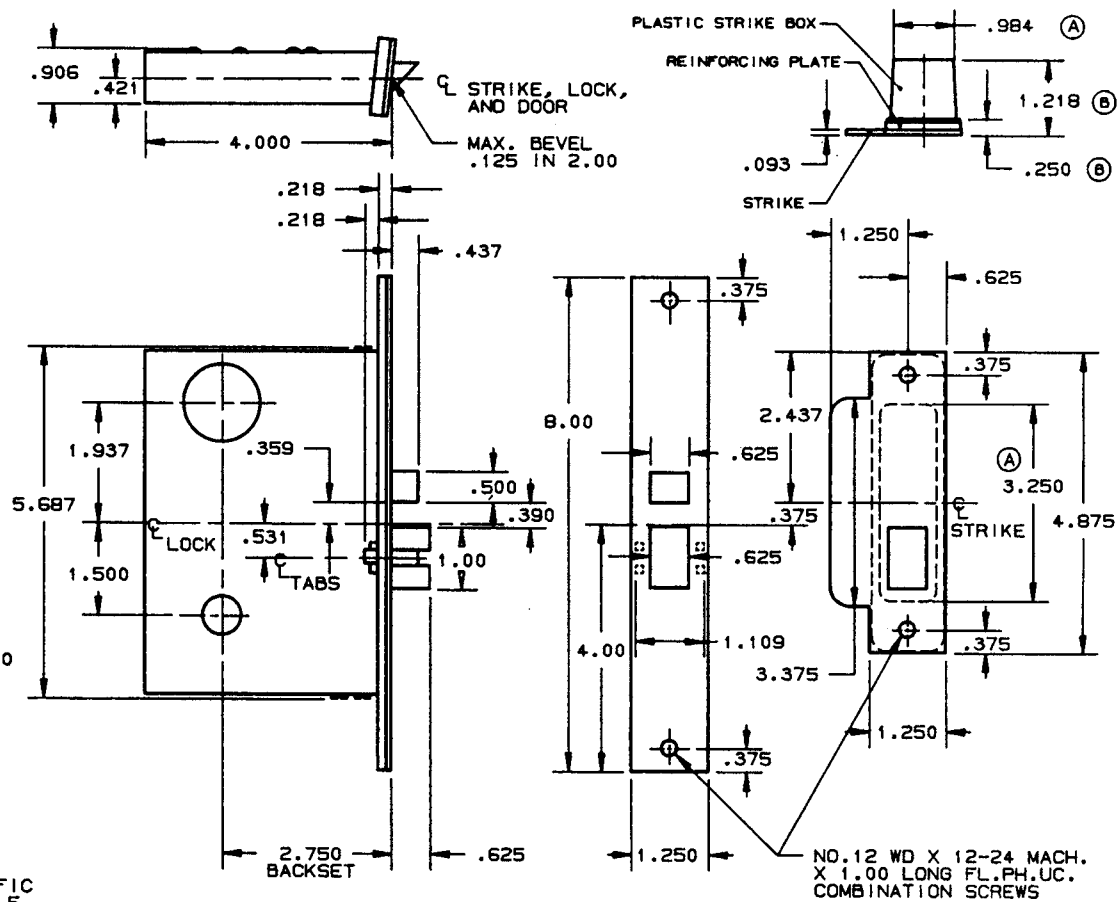


LOCK DETAIL

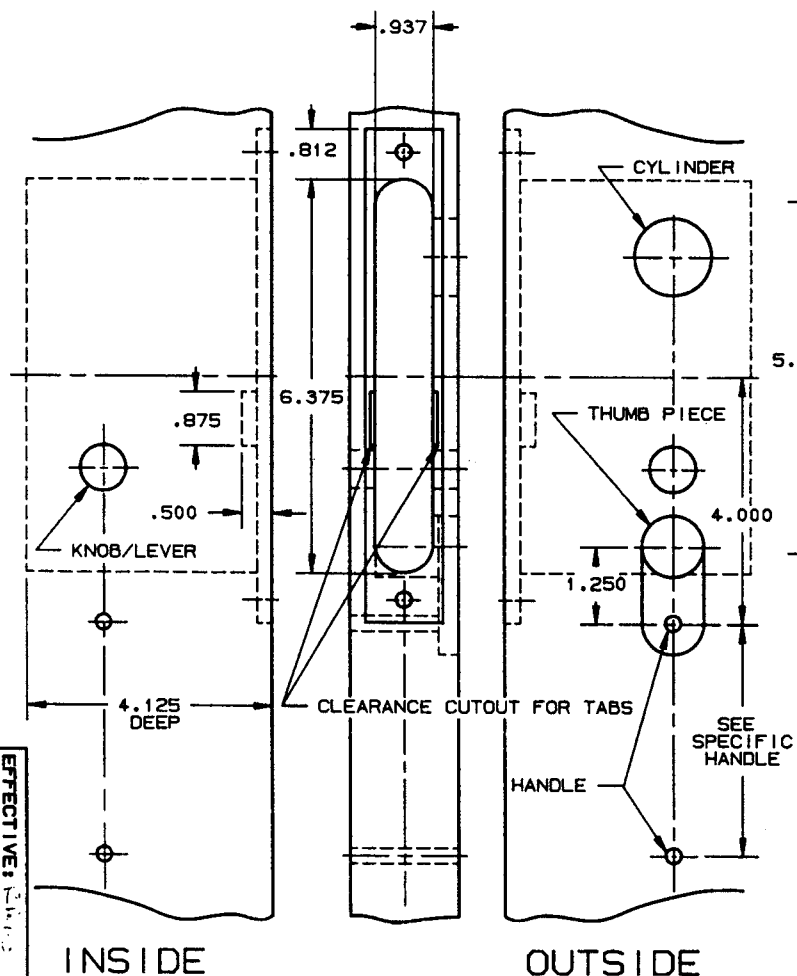

NOTE:

- NOTE:
- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
 - 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS

DO NOT SCALE DRAWING

B. BALDWIN

6066 AND 6066-LS LOCK

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

H055-B