
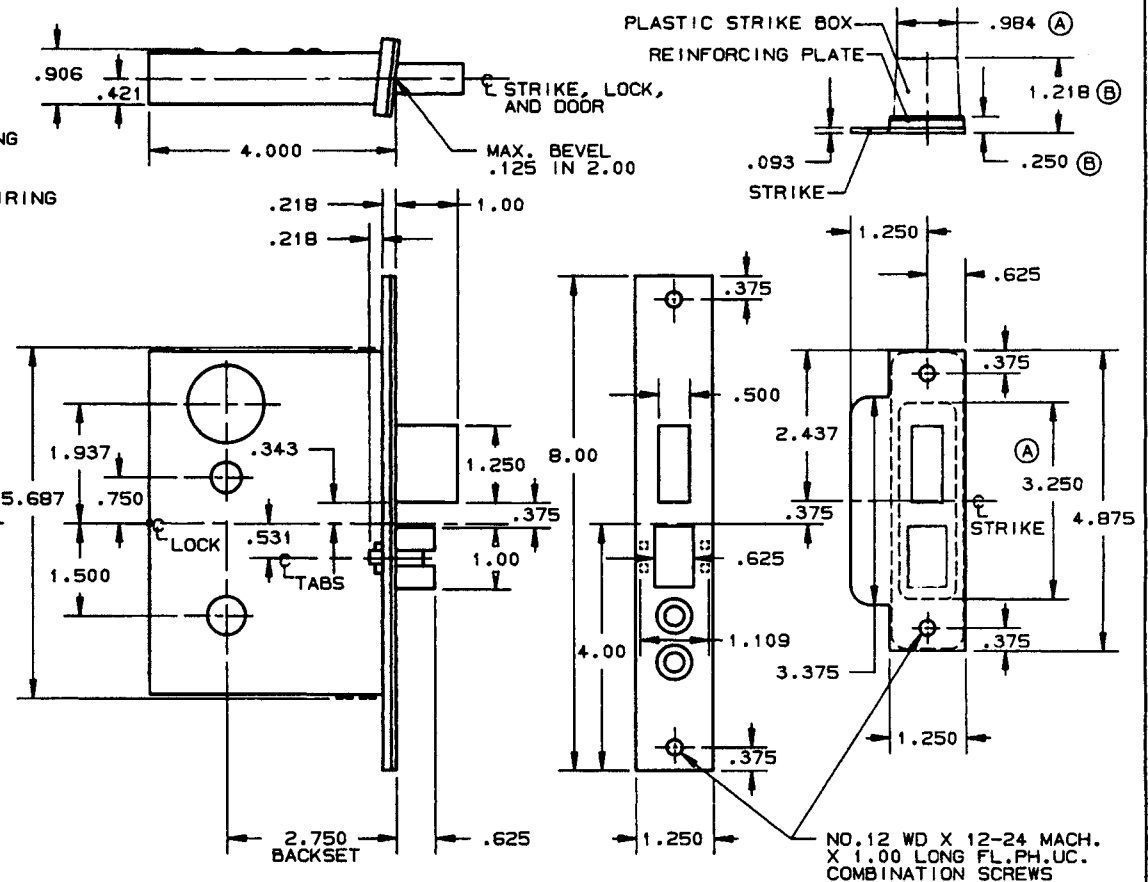


## DOOR DETAIL

## LOCK DETAIL

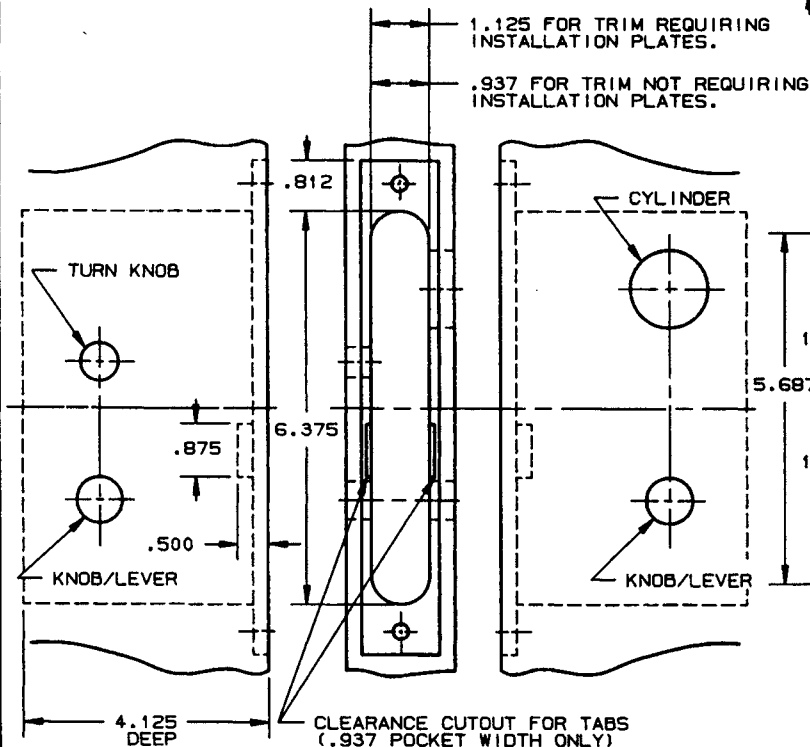

INSIDE

OUTSIDE

### NOTE:

- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
- 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS.

DO NOT SCALE DRAWING

**BALDWIN**

6075 AND 6075-LS LOCK

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

H065-B

©1991 by Baldwin Hardware Corporation

EFFECTIVE 1-31-91

SUITABLE REINFORCEMENT BY OTHERS MAY BE REQUIRED FOR METAL AND COMPOSITE CORE DOOR INSTALLATION.