



DOOR DETAIL

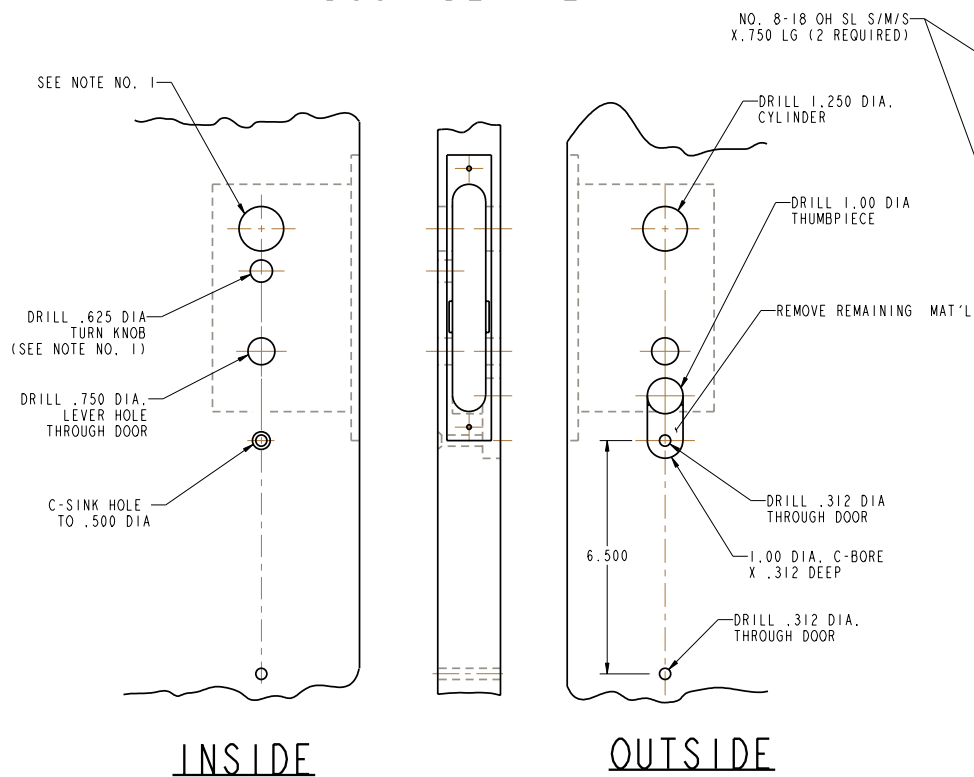

TRIM DETAIL

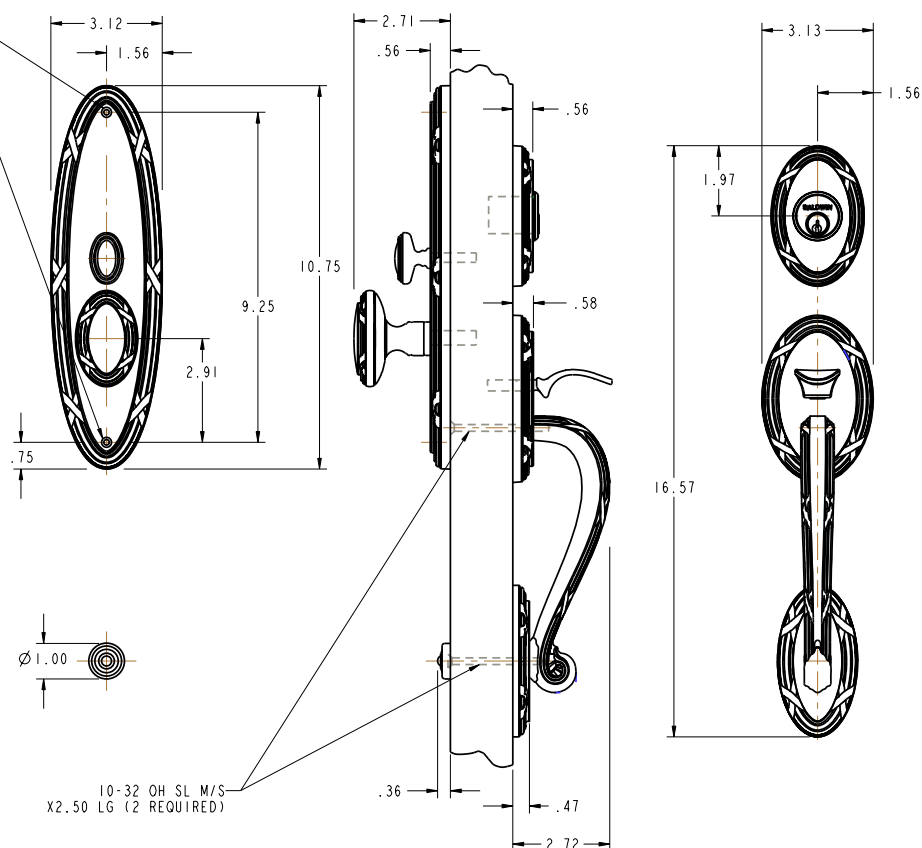

NOTE:

- 1) WHEN PREPARING DOOR FOR DBLC FUNCTION, OMIT DRILLING OF Ø.625 TURN KNOB HOLE (INSIDE). DRILL A Ø1.250 CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 3) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

DO NOT SCALE DRAWING

 BALDWIN HARDWARE CORPORATION READING, PENNSYLVANIA		BLACK & DECKER COMPANY	
6515 OVAL EDINBURGH			
TEMPLATE: NO VARIATIONS		TEMPLATE NO.	
© 2006 BY BALDWIN HARDWARE CORPORATION		I-515	