



DOOR DETAIL

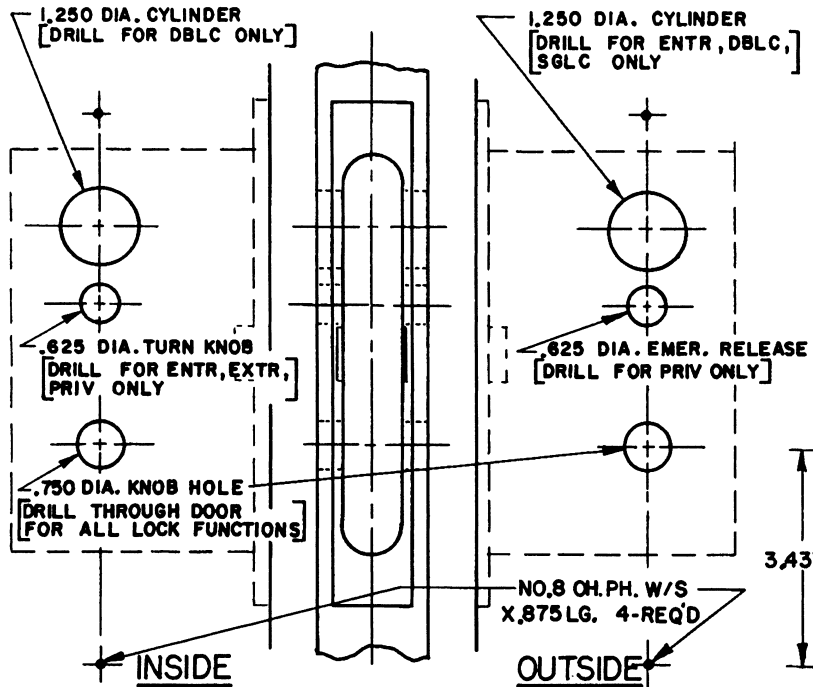






NOTE:

- 1) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE LOCK TEMPLATE.
- 2) DRILL ALL HOLES HALFWAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALFWAY THROUGH THE LOCK.
- 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

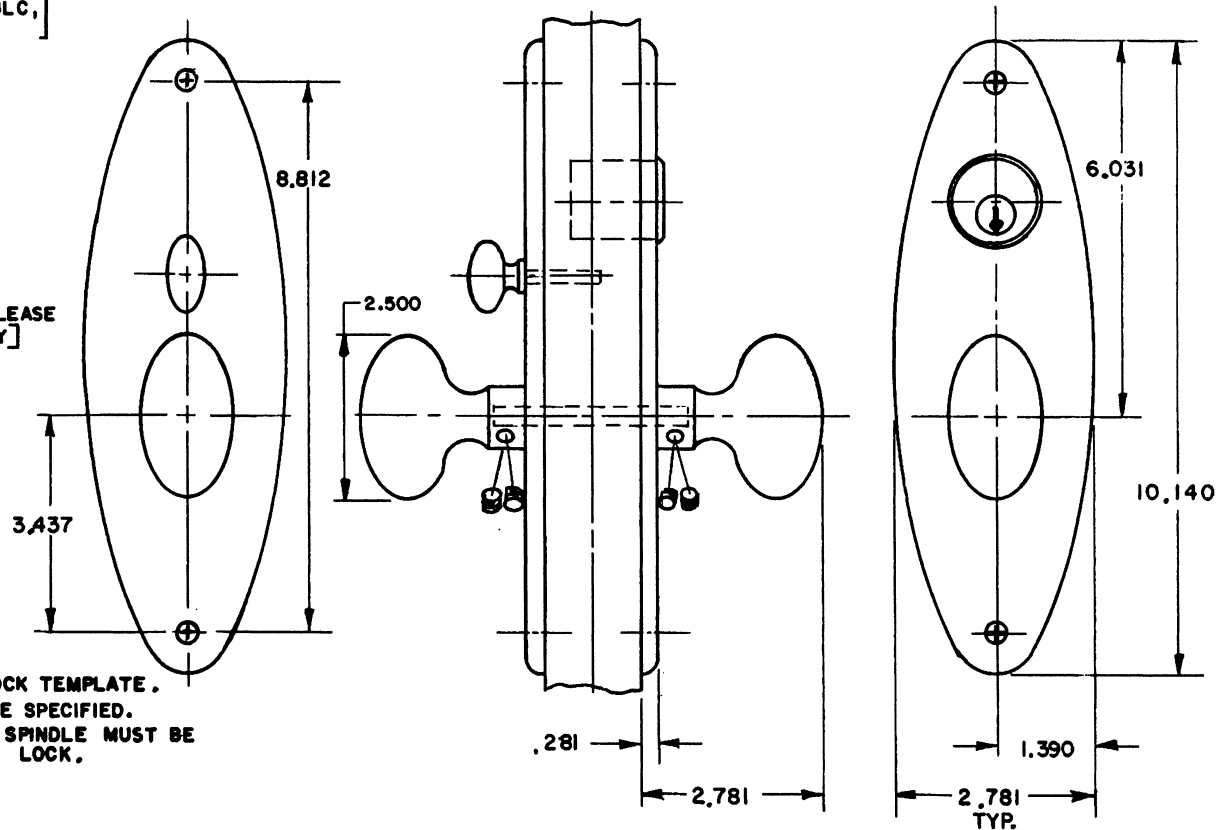

EFFECTIVE: 2-1-90 R44.9

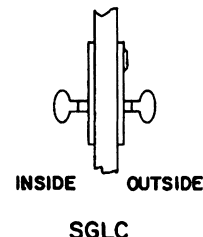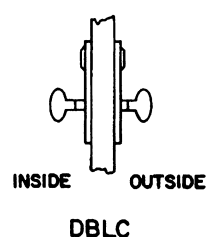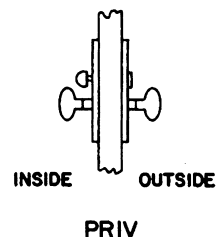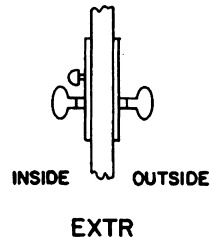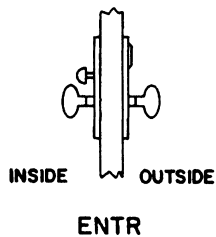

B. BALDWIN	
6546 WILMINGTON TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	I546

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation