


DOOR DETAIL

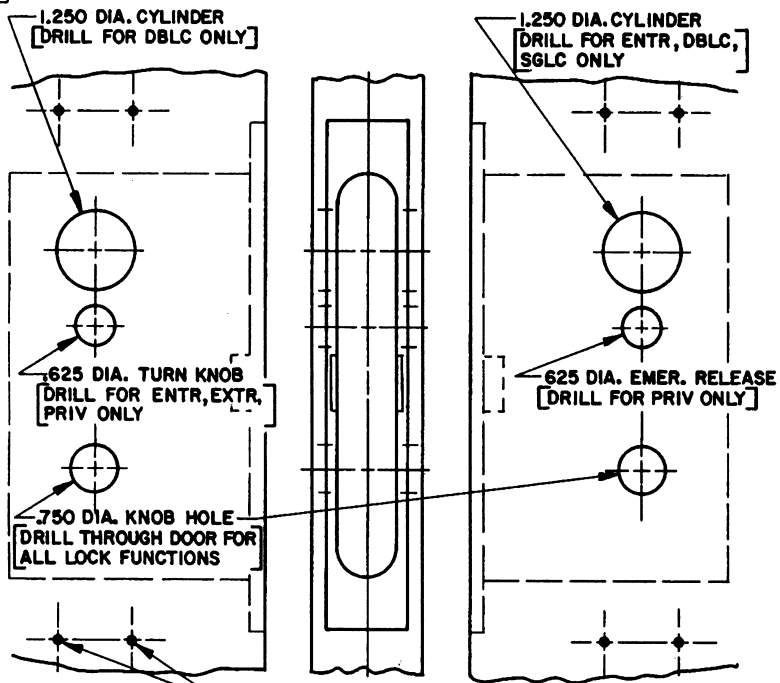



INSIDE

OUTSIDE

NOTE:


- 1.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 2.) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
- 4.) INSTALLATION PLATES AND NOT REQUIRED FOR THIS TRIM.

TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

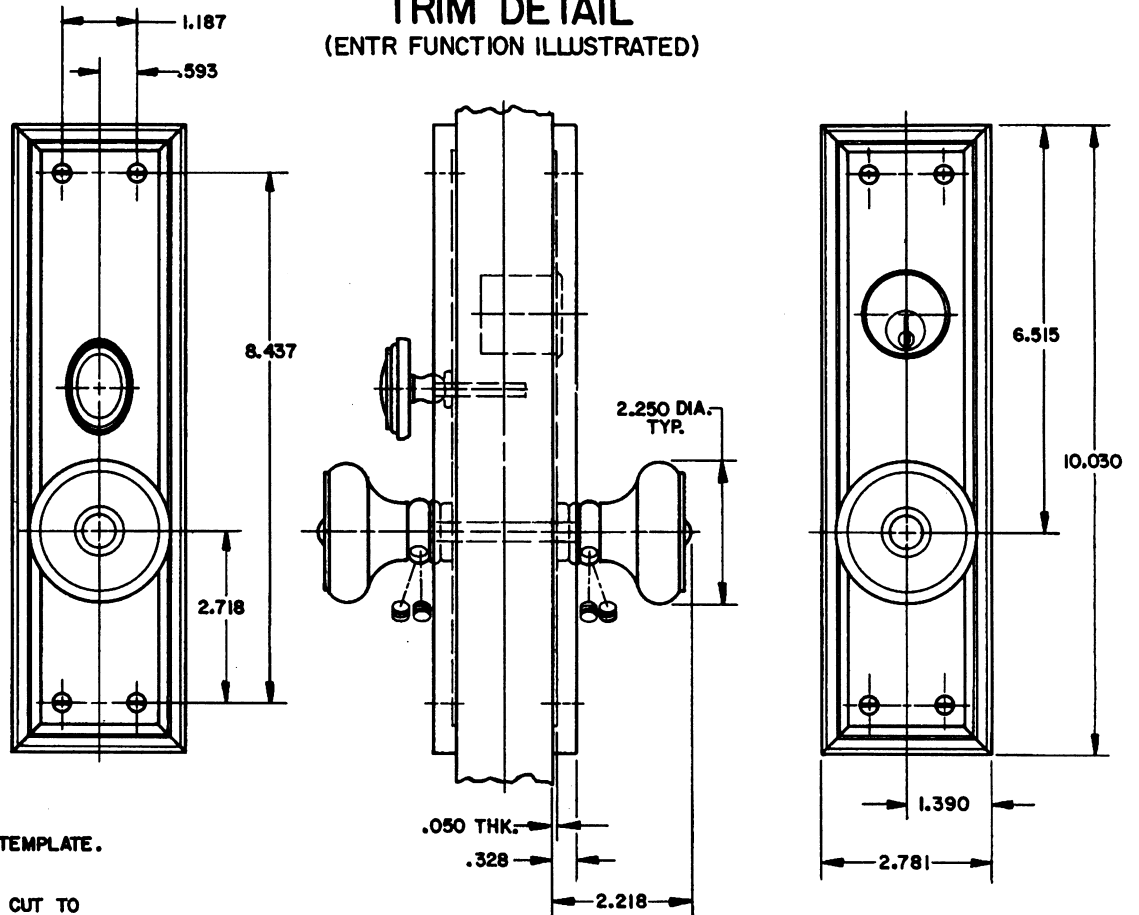


INSIDE OUTSIDE

ENTR




INSIDE OUTSIDE

EXTR



INSIDE OUTSIDE

PRIV



INSIDE OUTSIDE

DBLC



INSIDE OUTSIDE

SGLC

B. BALDWIN	
6547 NASHVILLE TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	I547

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation