


# TRIM DETAIL

(LENT FUNCTION ILLUSTRATED)


# DOOR DETAIL

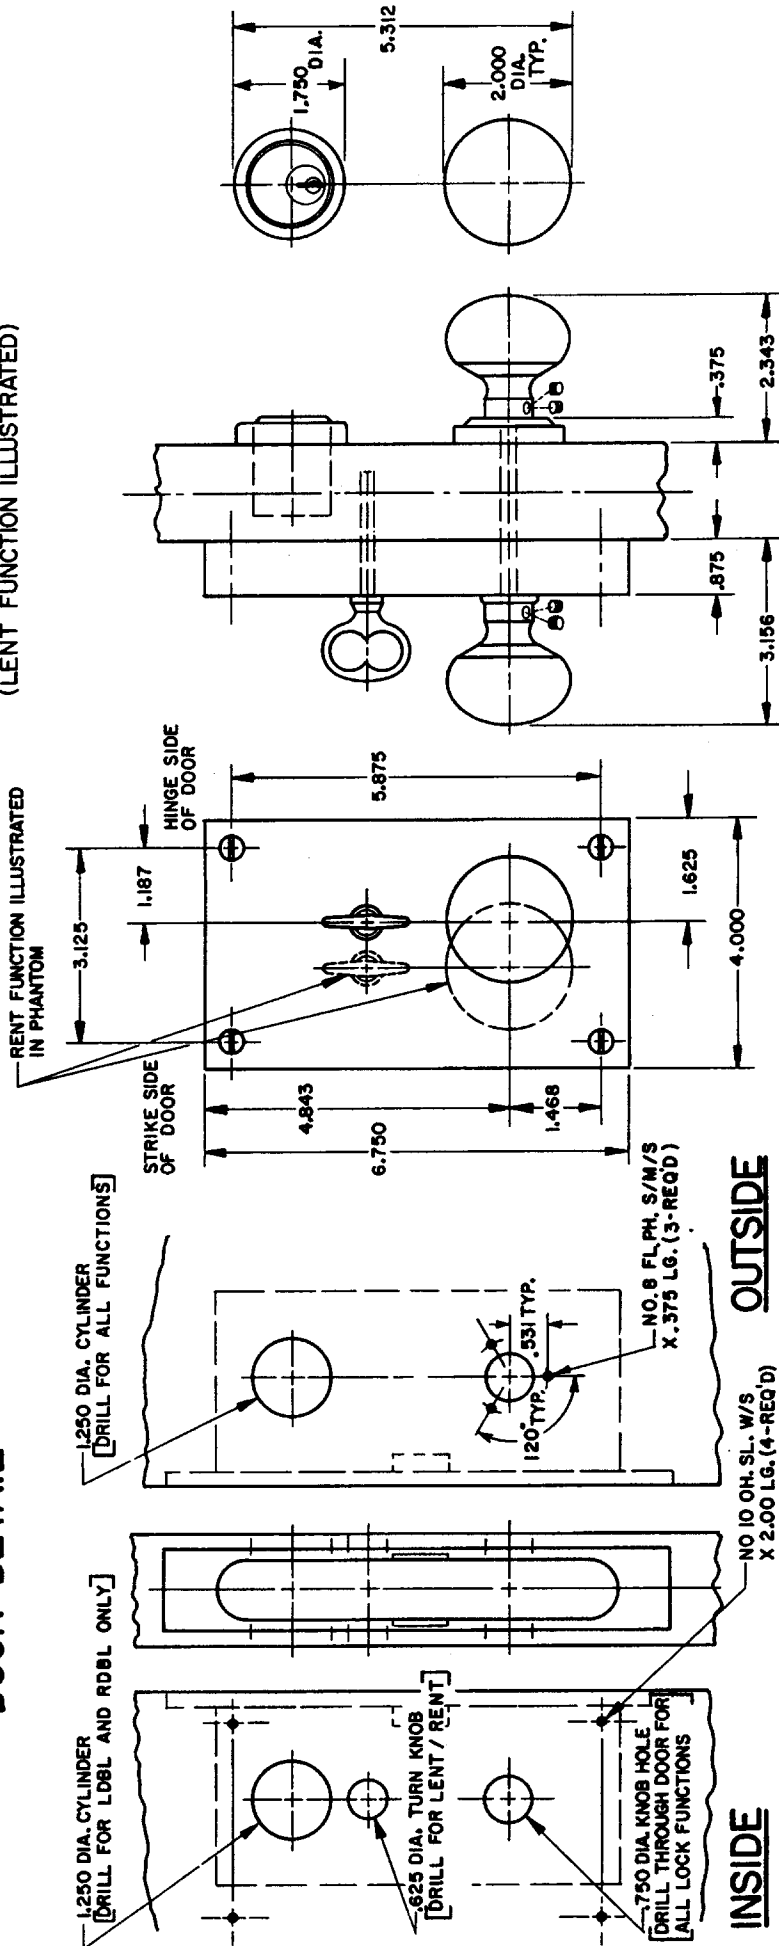

**OUTSIDE**

**INSIDE**

- NOTE:
- 1.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
  - 2.) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
  - 3.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
  - 4.) INSTALLATION PLATES ARE NOT REQ'D.

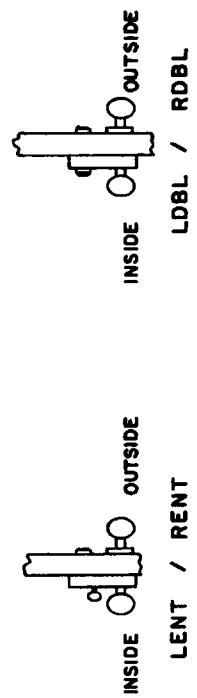

<b>BALDWIN</b>	
<b>6550 GEORGETOWN TRIM</b>	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	<b>I550</b>

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation