



DOOR DETAIL

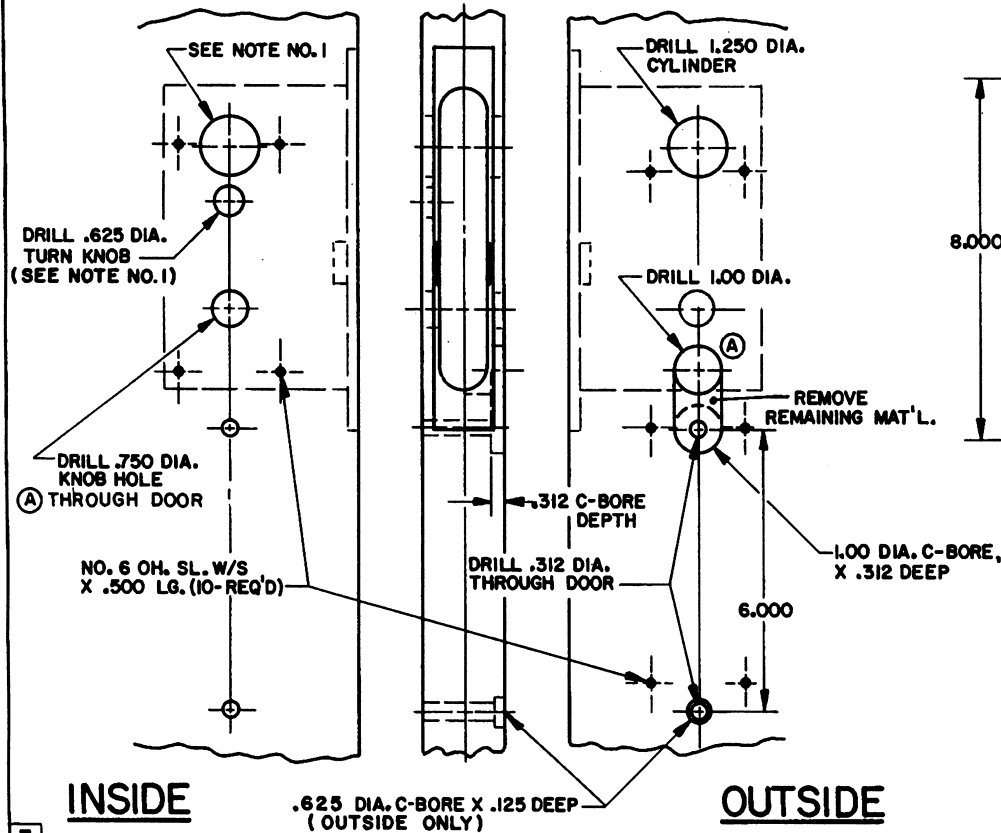

NOTE:

- 1.) WHEN PREPARING DOOR FOR DBLC FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE (INSIDE).
DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2.) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 4.) INSTALLATION PLATES ARE NOT REQ'D. FOR THIS TRIM.

TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

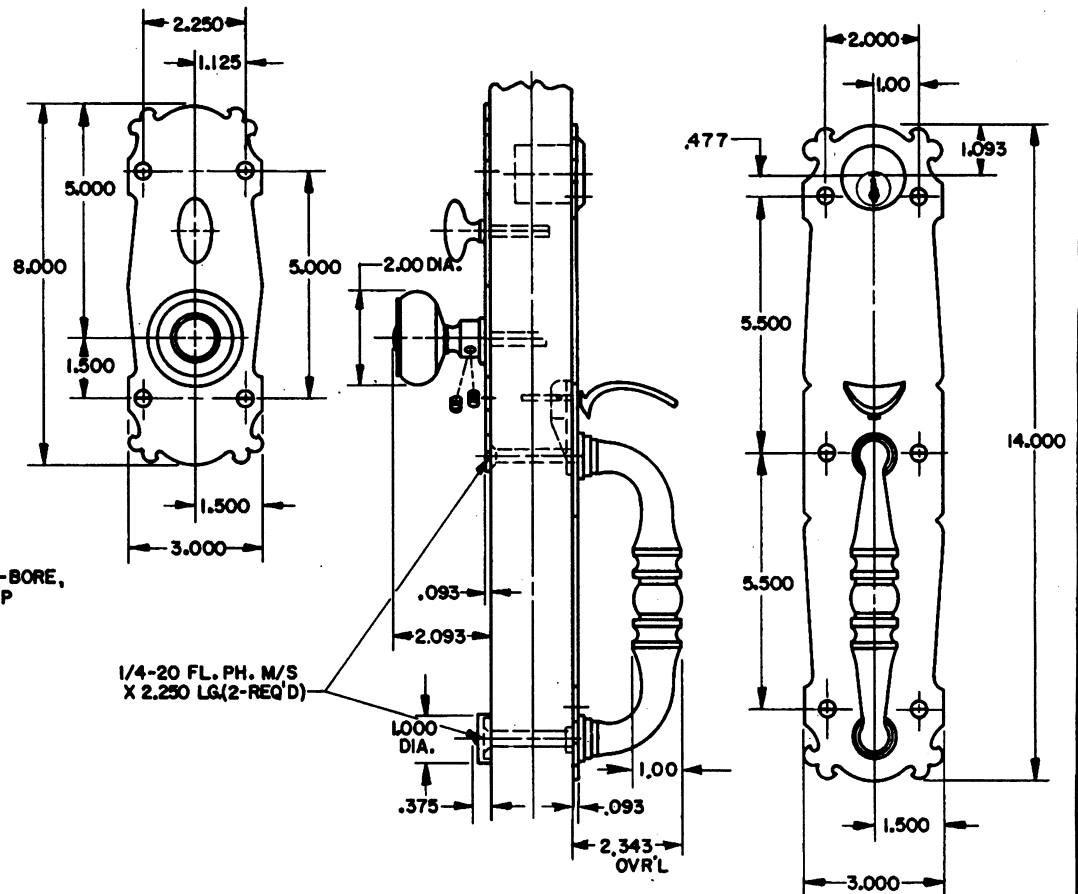

BALDWIN

6556 CHARLESTON TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

I556-A

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation