



DOOR DETAIL

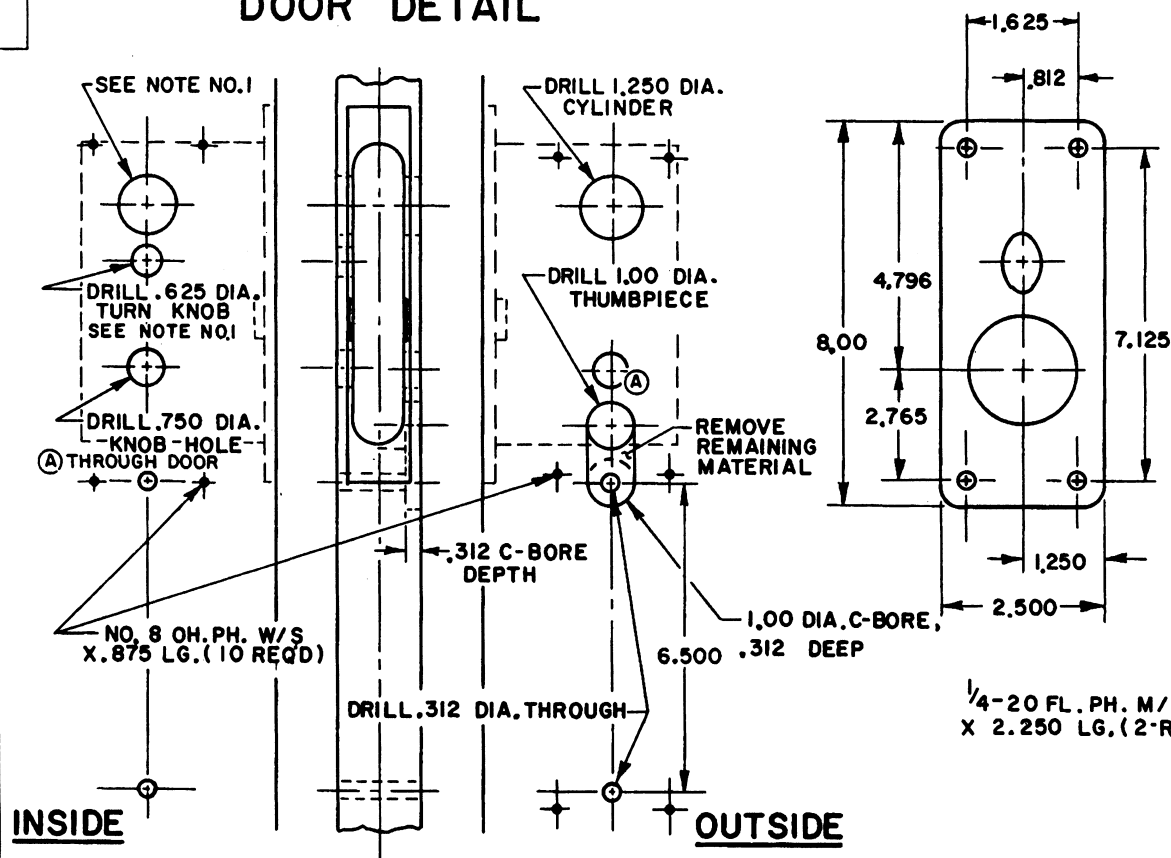

TRIM DETAIL

ENTR FUNCTION ILLUSTRATED

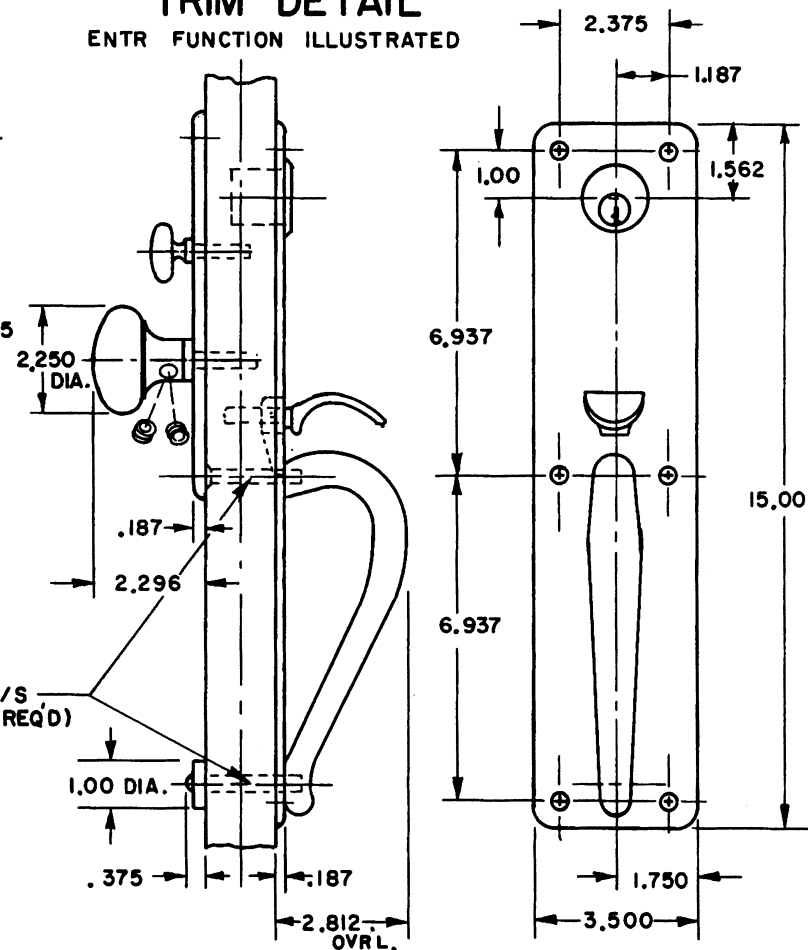

NOTE:

- 1) WHEN PREPARING DOOR FOR DBLC FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE (INSIDE). DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2) DRILL ALL HOLES HALF WAY THROUGH DOOR, UNLESS OTHERWISE SPECIFIED.
- 3) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 4) INSTALLATION PLATES ARE NOT REQUIRED.

EFFECTIVE: 1-31-91 2A-9

B. BALDWIN	
6567 TRENTON TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	I567A

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation