



DOOR DETAIL

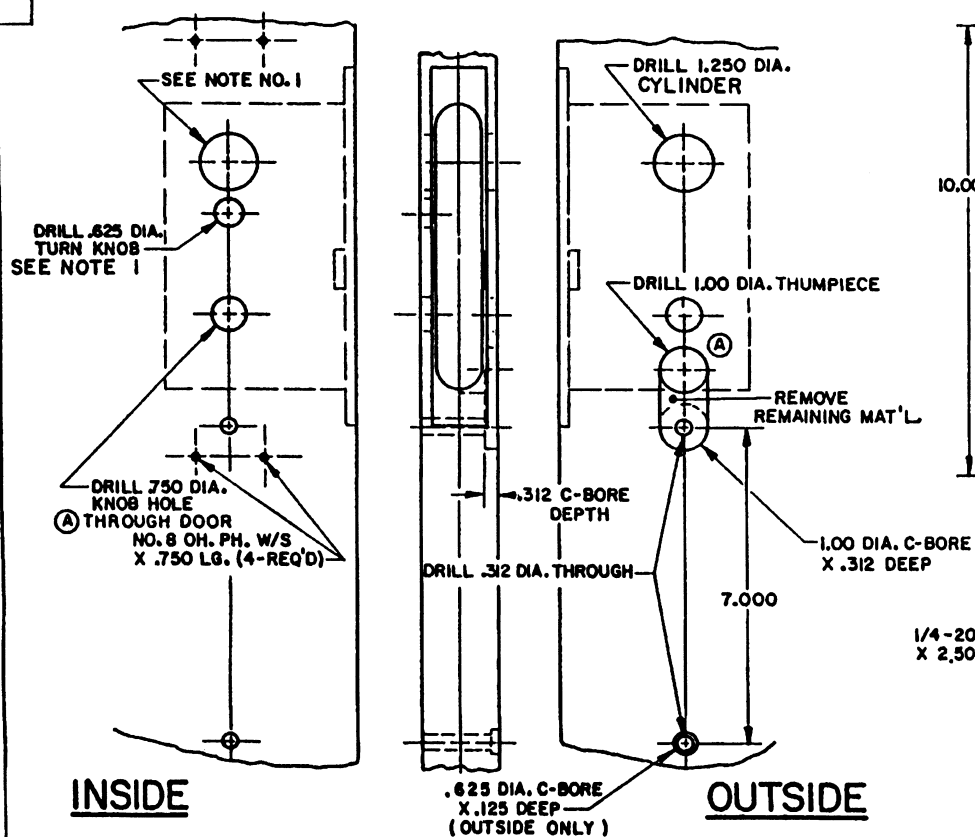

NOTE:

- 1.) WHEN DOOR FOR DBLC FUNCTION OMIT DRILLING OF .625 DIA. TURN KNOB HOLE (INSIDE).
DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2.) DRILL ALL HOLES HALFWAY THRU DOOR, UNLESS OTHERWISE SPECIFIED.
- 3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS SEE APPROPRIATE LOCK TEMPLATE.
- 4.) INSTALLATION PLATES ARE NOT REQ'D.

TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

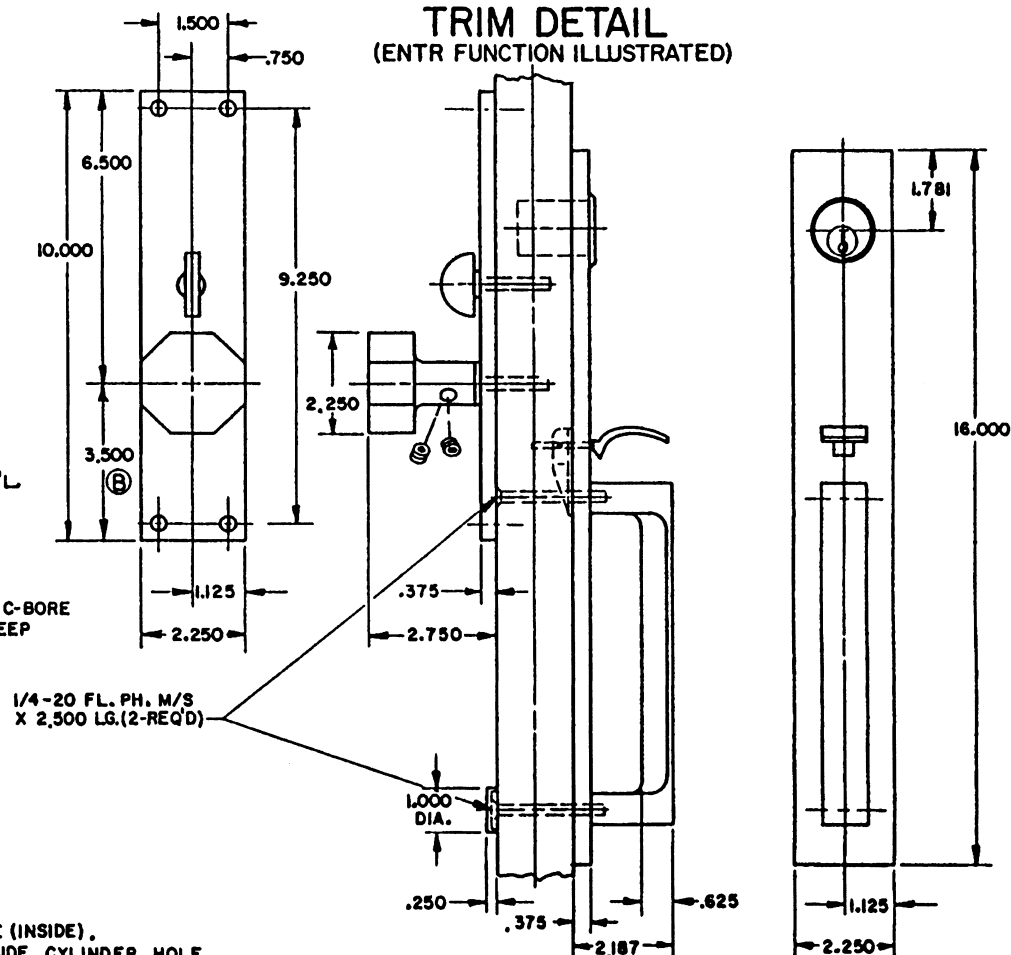

B. BALDWIN

6570 ATLANTA TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

I570B

DO NOT SCALE DRAWING

© 1990 by Baldwin Hardware Corporation