



DOOR DETAIL

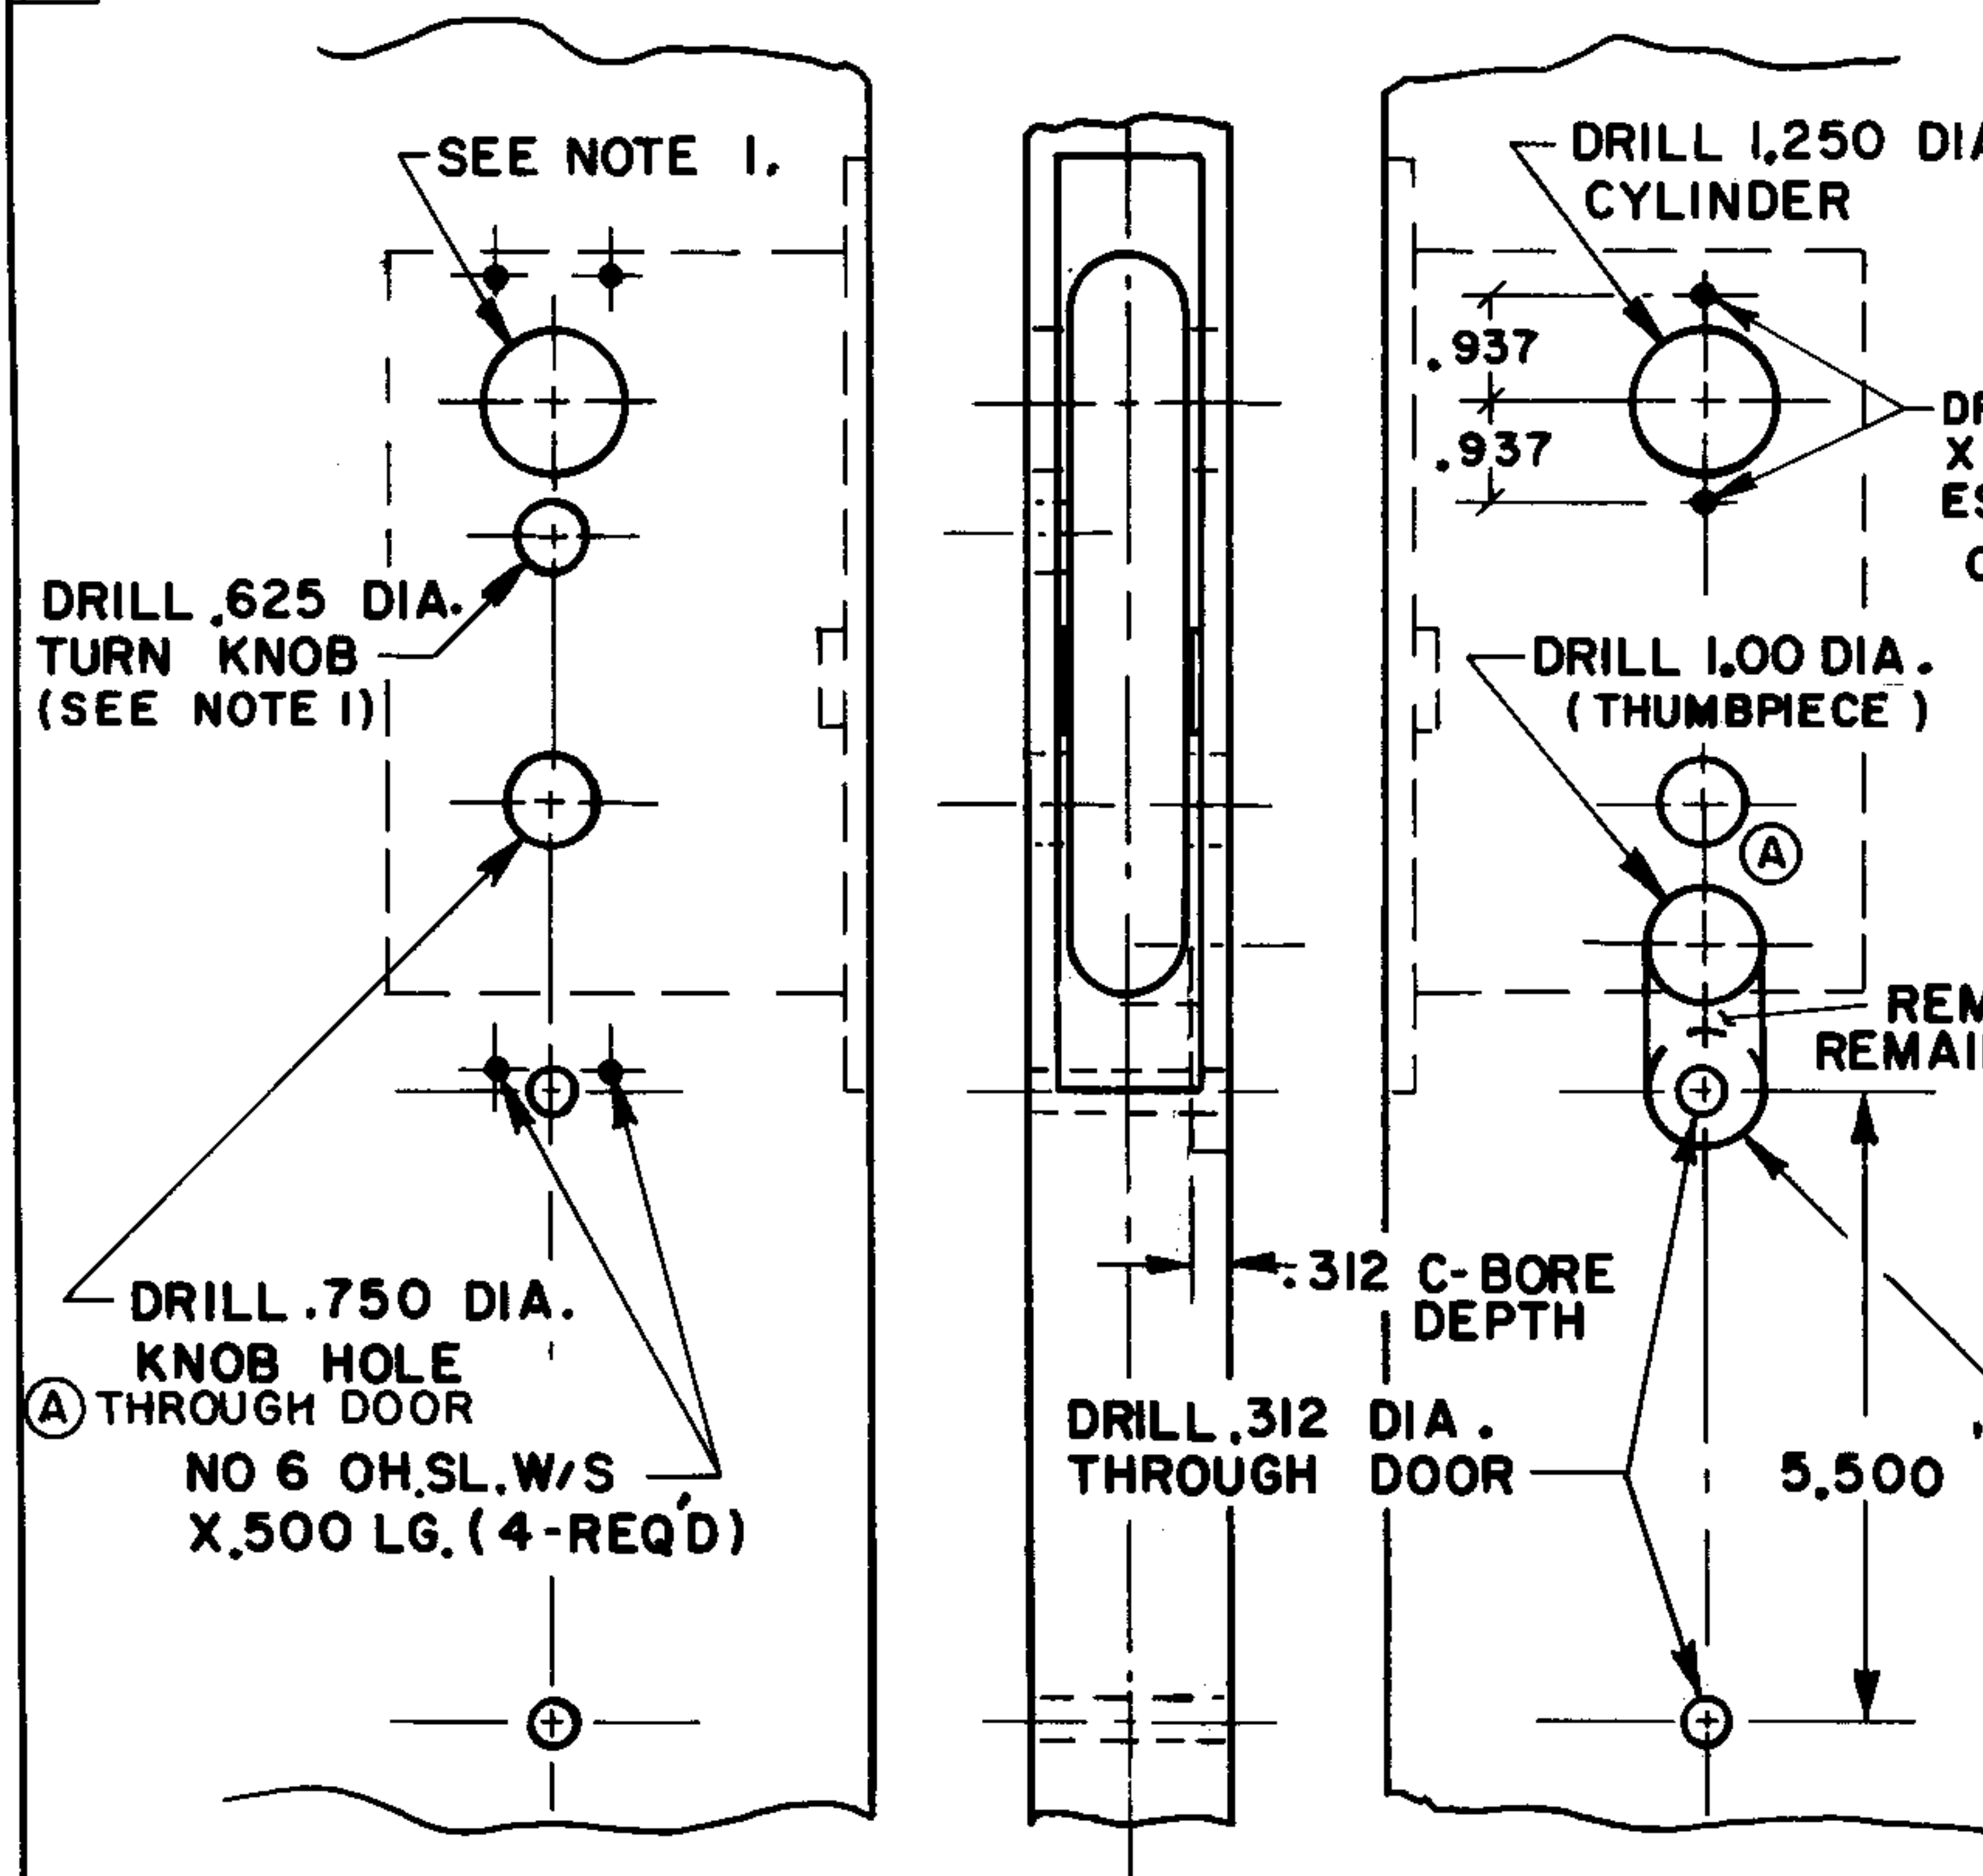

INSIDE

OUTSIDE

TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

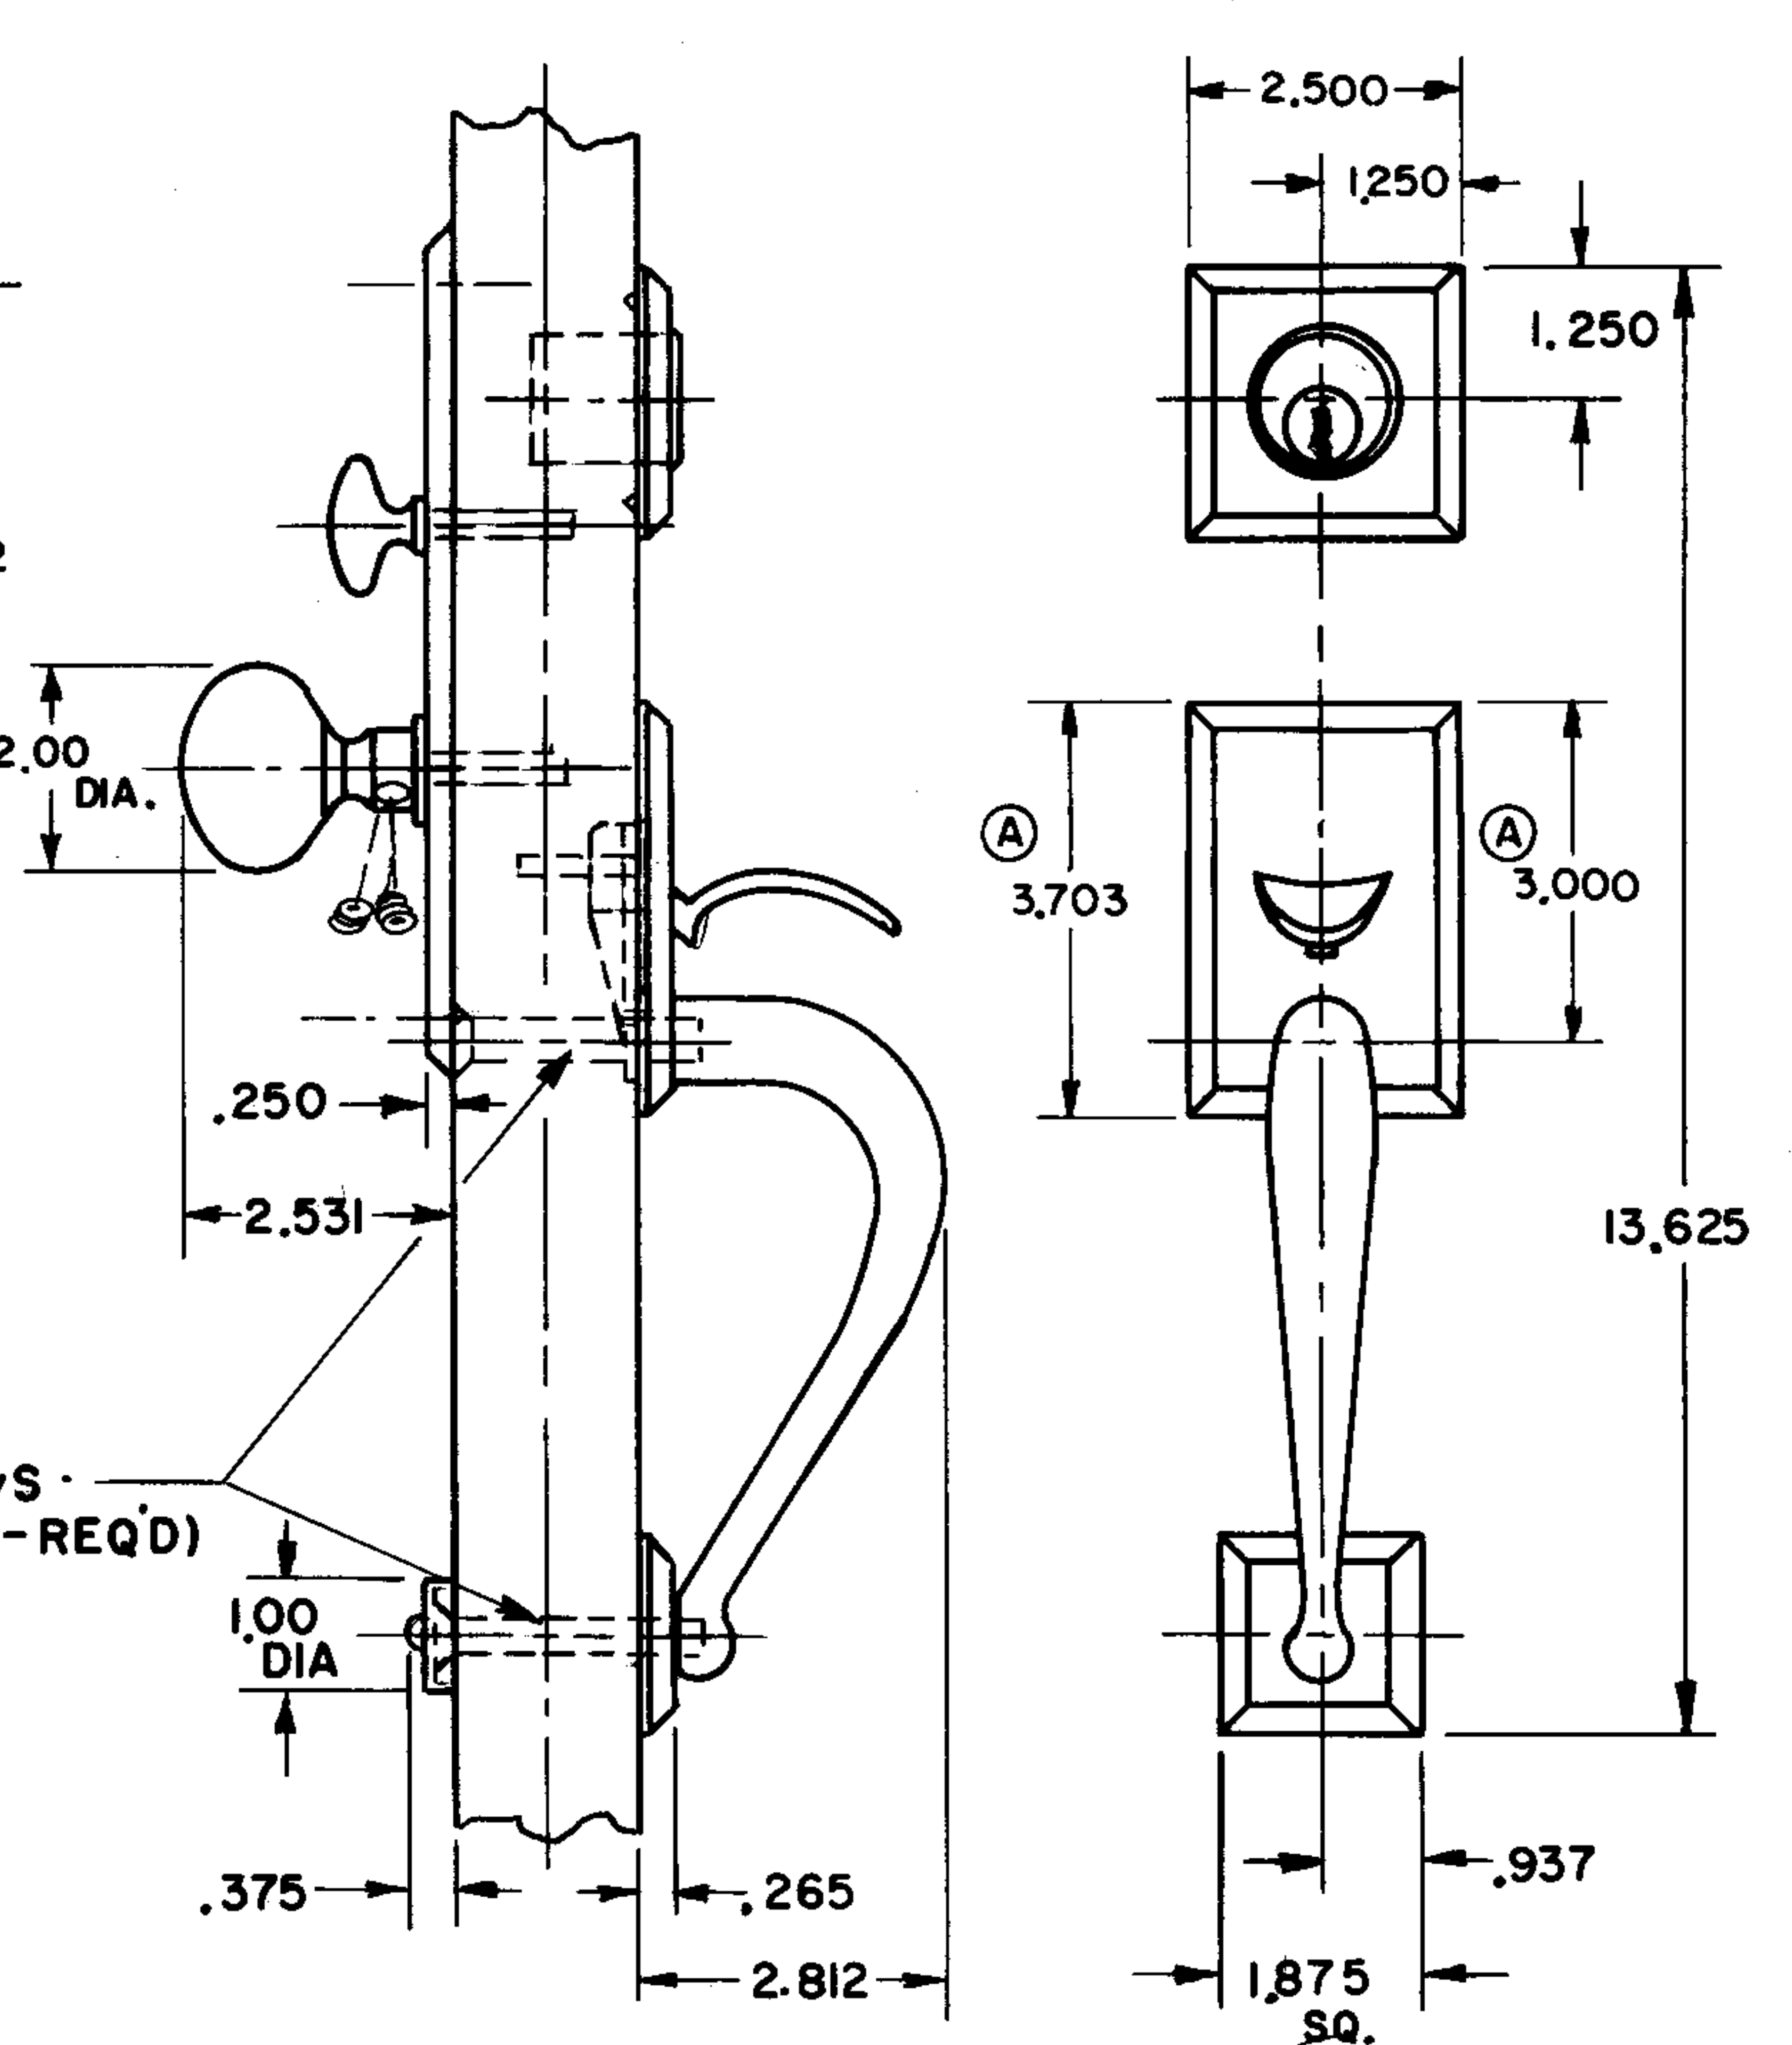

NOTE

- 1.) WHEN PREPARING DOOR FOR DBLC FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE (INSIDE). DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2.) DRILL ALL HOLES HALFWAY THRU DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS SEE APPROPRIATE LOCK TEMPLATE.
- 4.) INSTALLATION PLATES ARE NOT REQUIRED.

EFFECTIVE: 1-31-91



BALDWIN HARDWARE CORPORATION

6571 CONCORD TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

I571-A

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation