



DOOR DETAIL

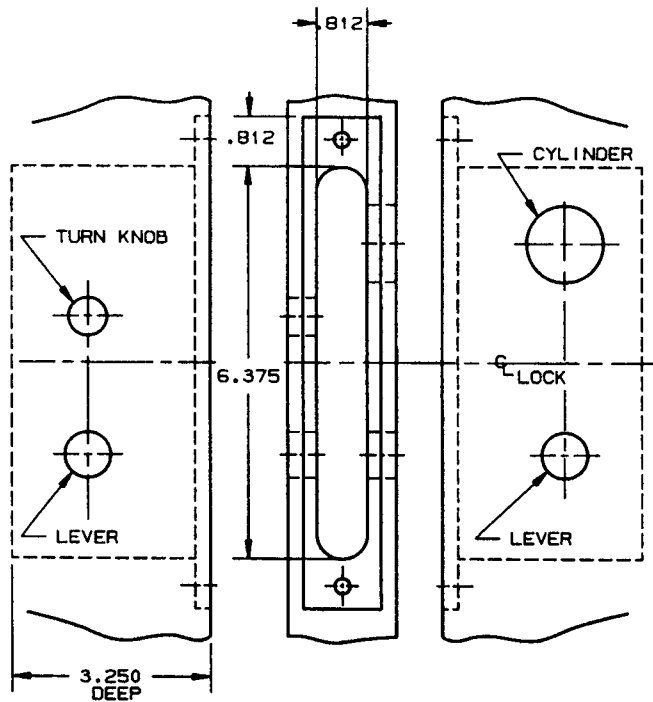

INSIDE

OUTSIDE

LOCK DETAIL

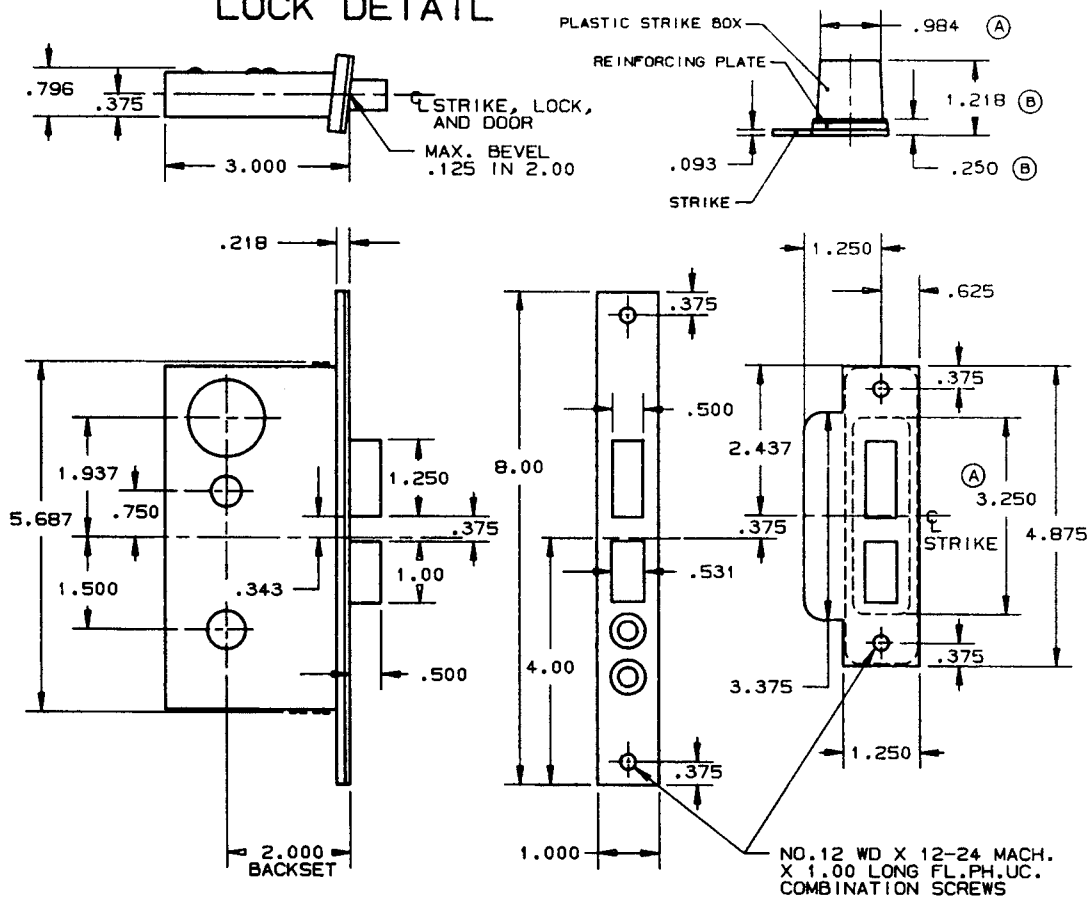

NOTE:

- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
- 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS.

DO NOT SCALE DRAWING

BALDWIN	
6802 LEVER LOCK	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	H802-B

©1991 by Baldwin Hardware Corporation

EFFECTIVE 1-31-91