



DOOR DETAIL

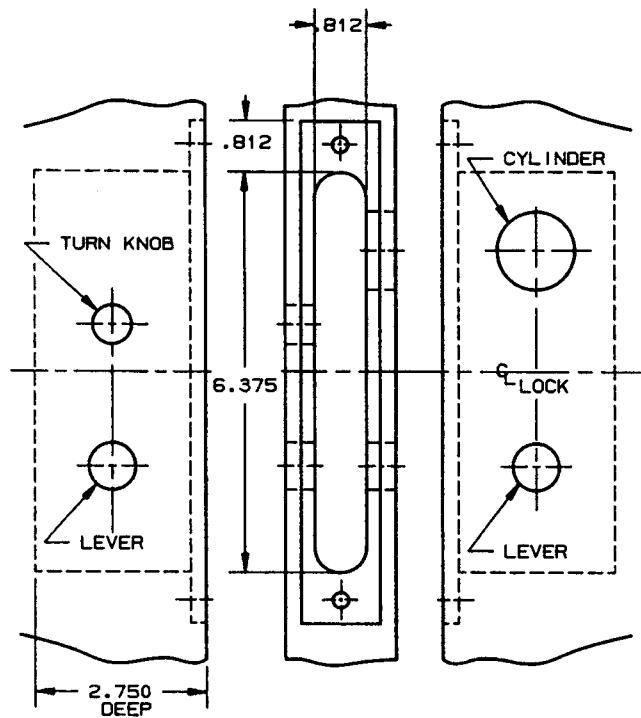

INSIDE

OUTSIDE

LOCK DETAIL

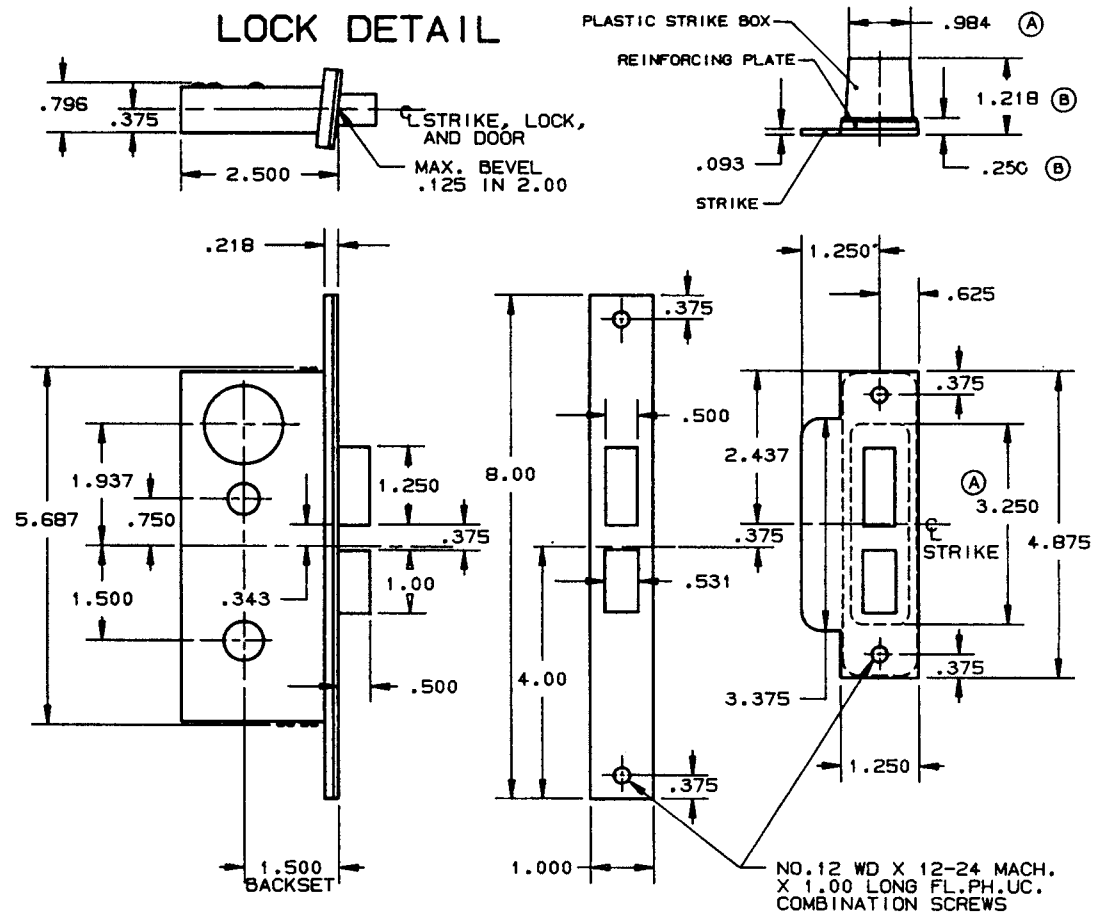

NOTE:

- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
- 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS.

DO NOT SCALE DRAWING



BALDWIN

6810 LEVER LOCK

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

H810-B

©1991 by Baldwin Hardware Corporation