



DOOR DETAIL

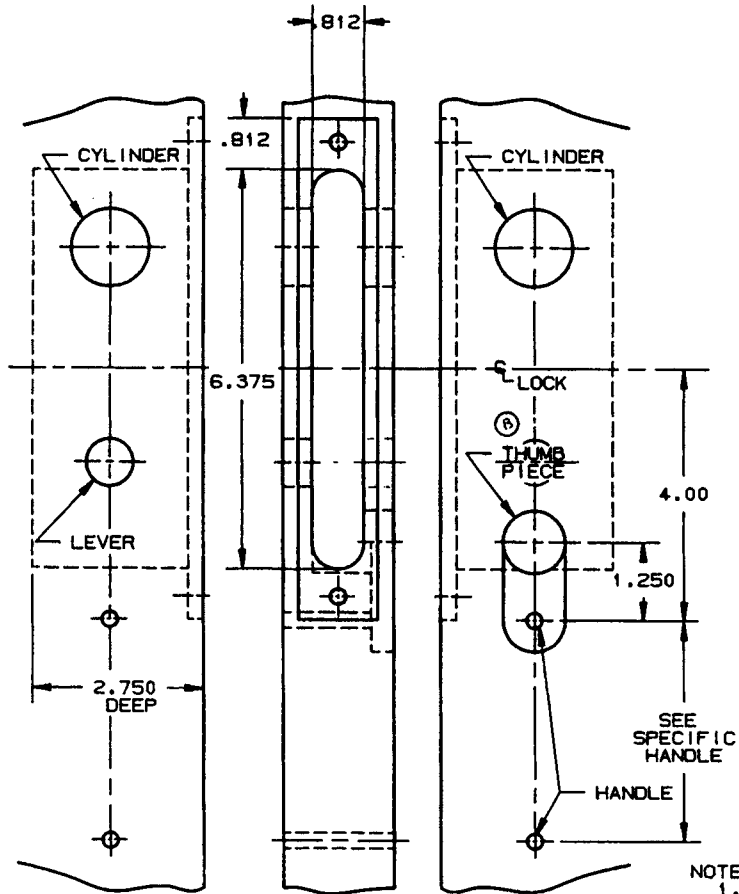

LOCK DETAIL

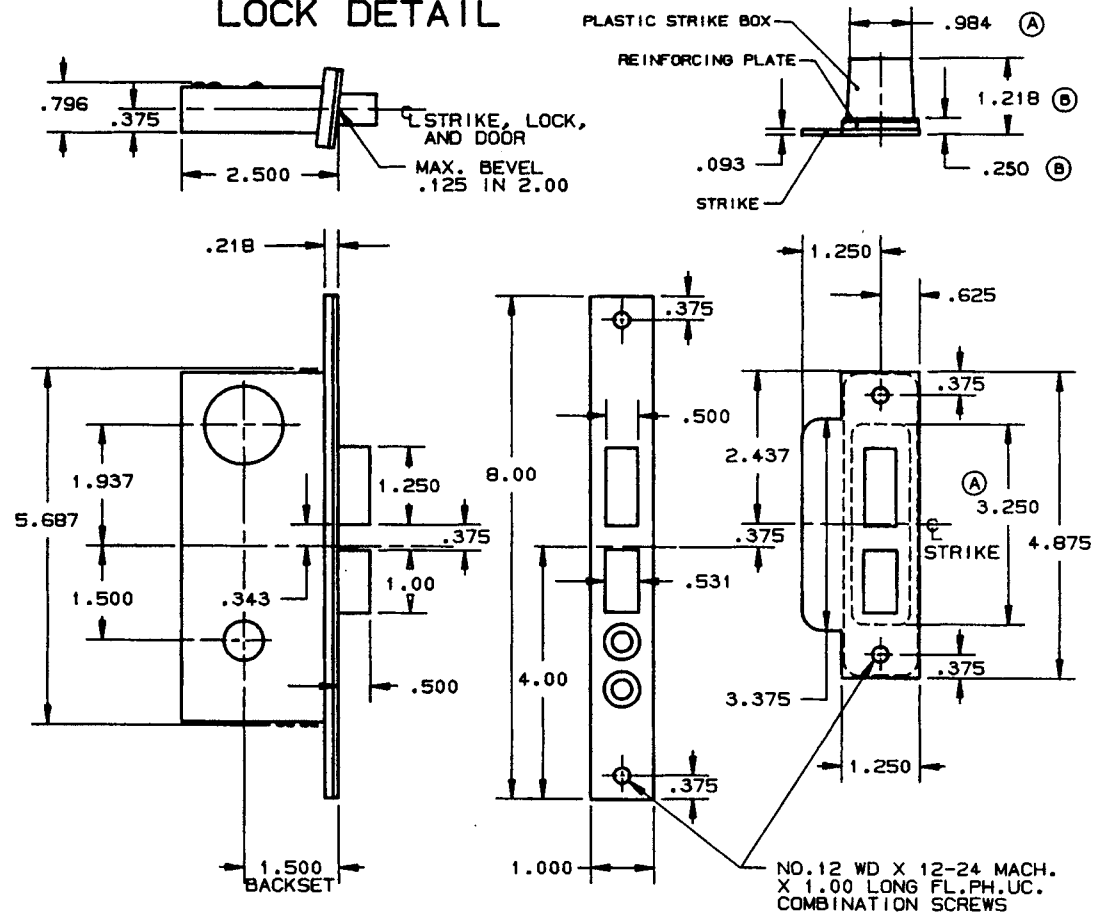

- NOTE:
- 1.) SEE SPECIFIC TRIM TEMPLATE FOR ADDITIONAL DOOR CUTOUT DETAILS.
 - 2.) DISCARD REINFORCING PLATE WHEN INSTALLING ON METAL DOORS & JAMBS.

DO NOT SCALE DRAWING

EFFECTIVE 1-31-91 (A) (4)

| | |
|------------------------------|---------------|
| BALDWIN | |
| 6835 LEVER, HANDLESET | |
| TEMPLATE NO. VARIATIONS | TEMPLATE NO. |
| | H835-B |