



DOOR DETAIL




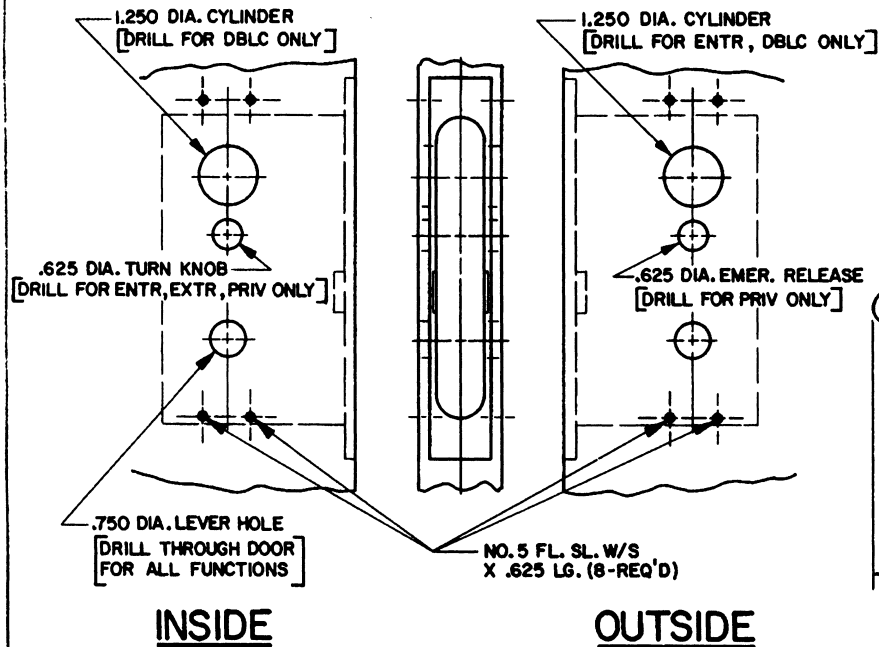


TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

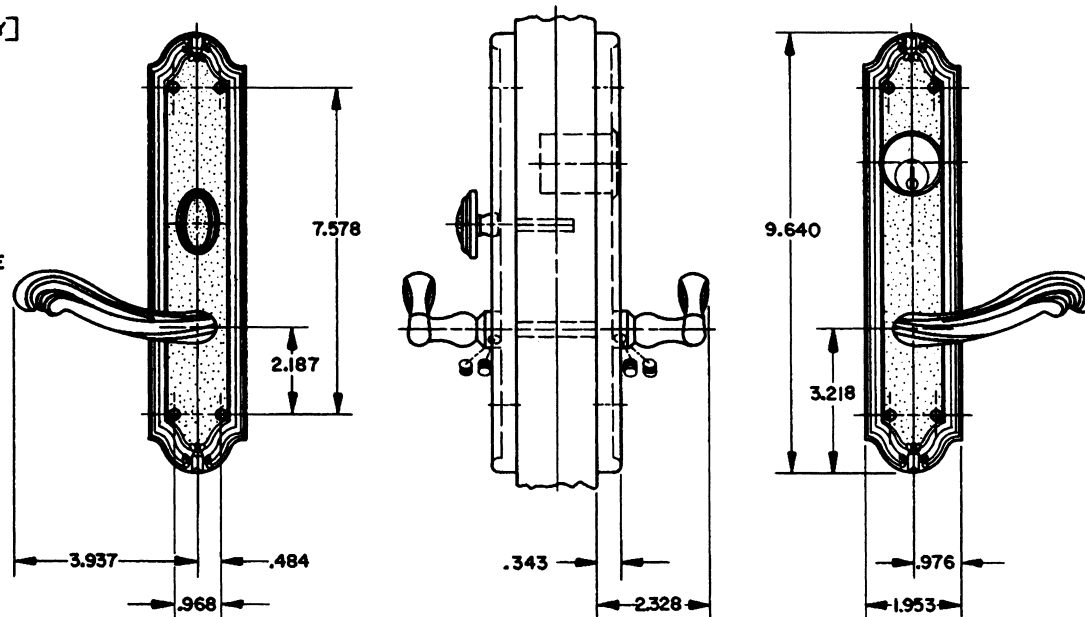

NOTE

- 1.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 2.) DRILL ALL HOLES HALFWAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
- 4.) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

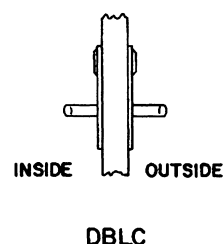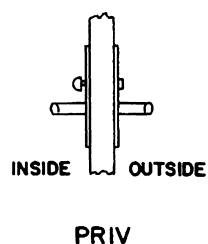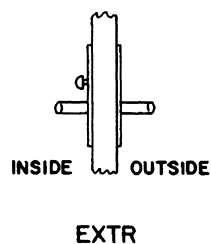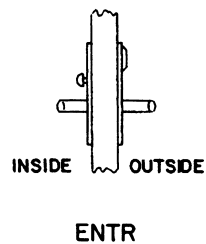

B. BALDWIN	
6932 NASSAU TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	1084

DO NOT SCALE DRAWING

©1986 by Baldwin Hardware Corporation