


DOOR DETAIL

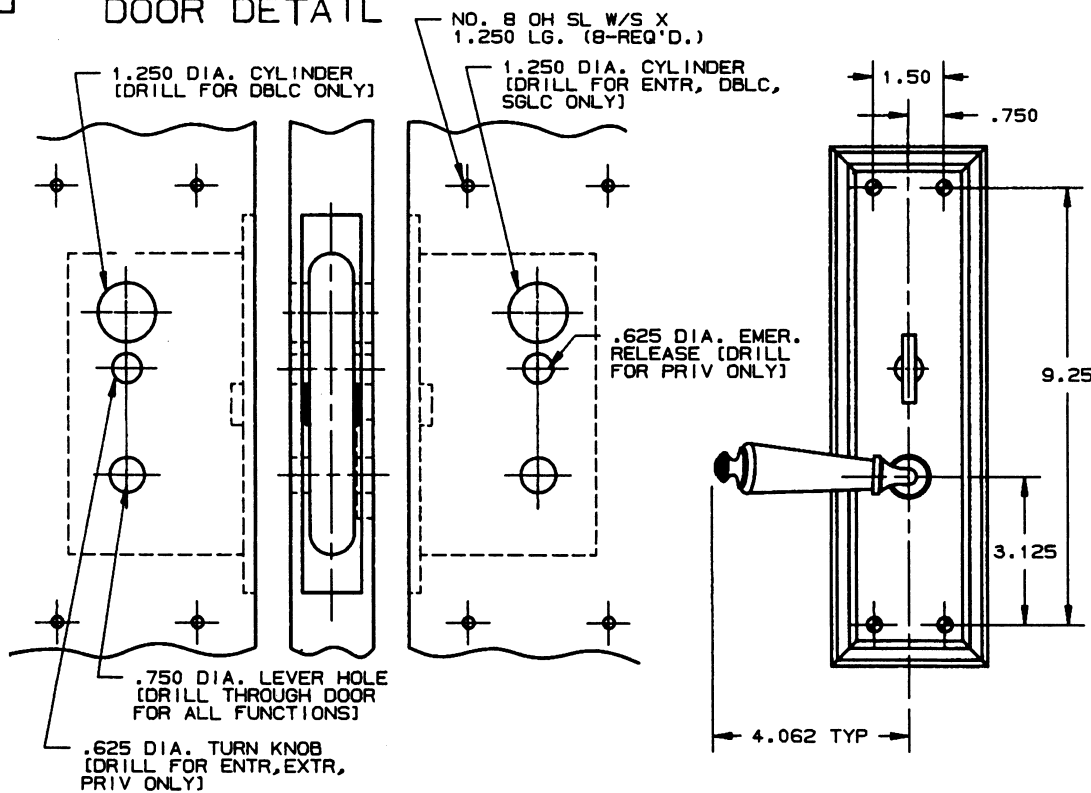


INSIDE

OUTSIDE


TRIM DETAIL

(ENTR FUNCTION ILLUSTRATED)

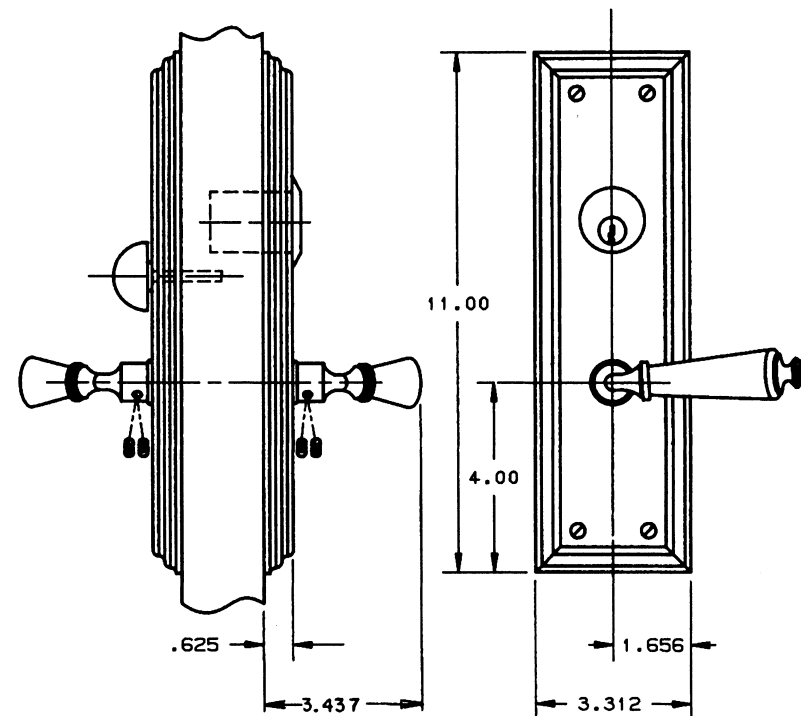

NOTE:

- 1) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 2) DRILL ALL HOLES HALFWAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
- 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

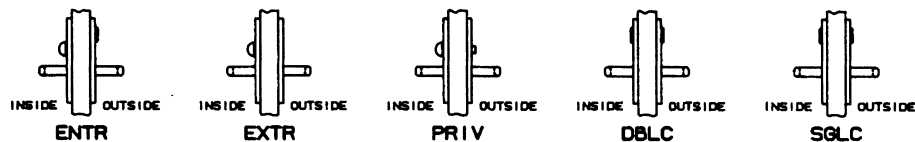

DO NOT SCALE DRAWING



BALDWIN

6935 REPUBLIC TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

I 100

©1989 by Baldwin Hardware Corporation

EFFECTIVE: 11-1-89 2445