



DOOR DETAIL

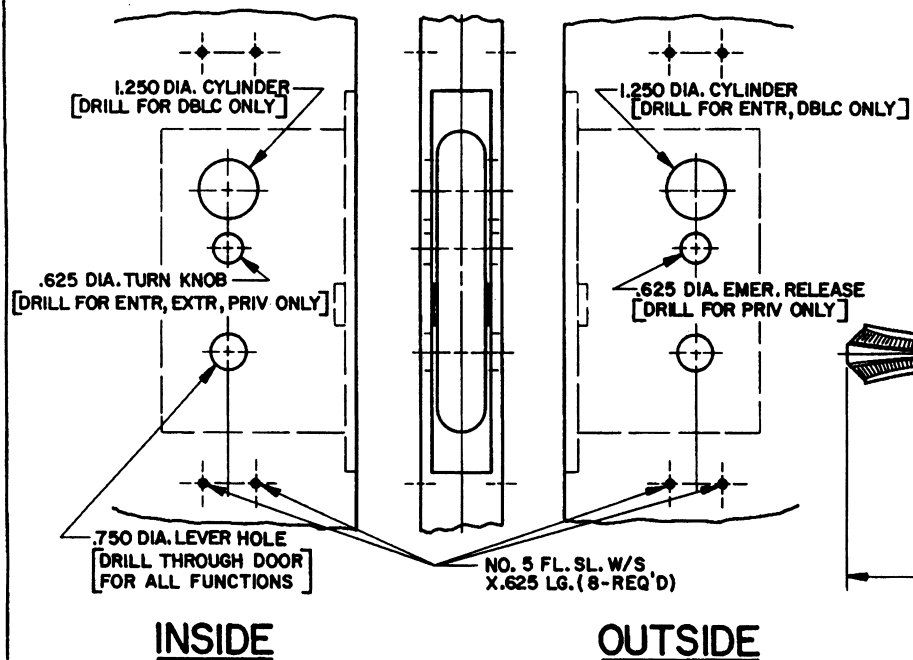


TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

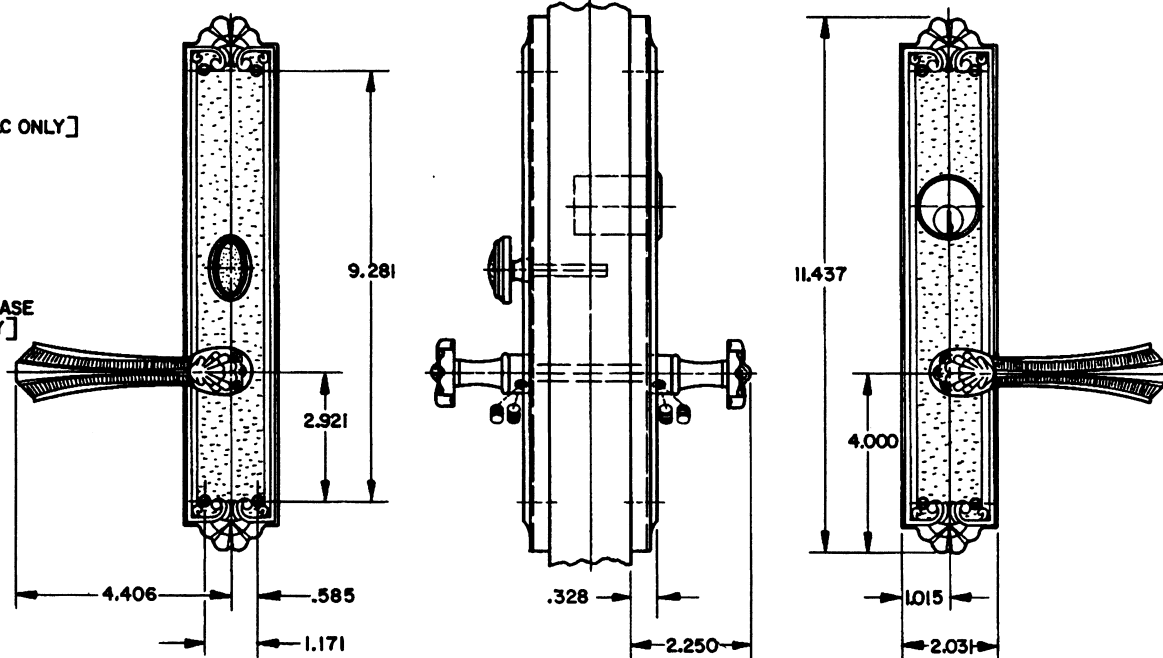


NOTE:

- 1.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 2.) DRILL ALL HOLES HALFWAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
- 4.) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.


EFFECTIVE: 9-1-86 R.A.A-S

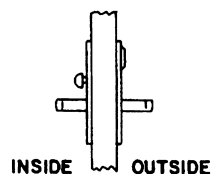


ENTR

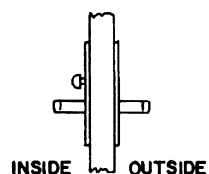

EXTR

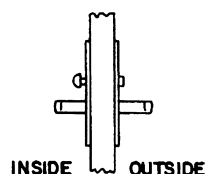

PRIV

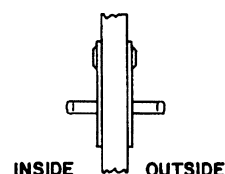

DBLC

DO NOT SCALE DRAWING

B. BALDWIN	
6938 MOBILE TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	1087

©1986 by Baldwin Hardware Corporation