



DOOR DETAIL

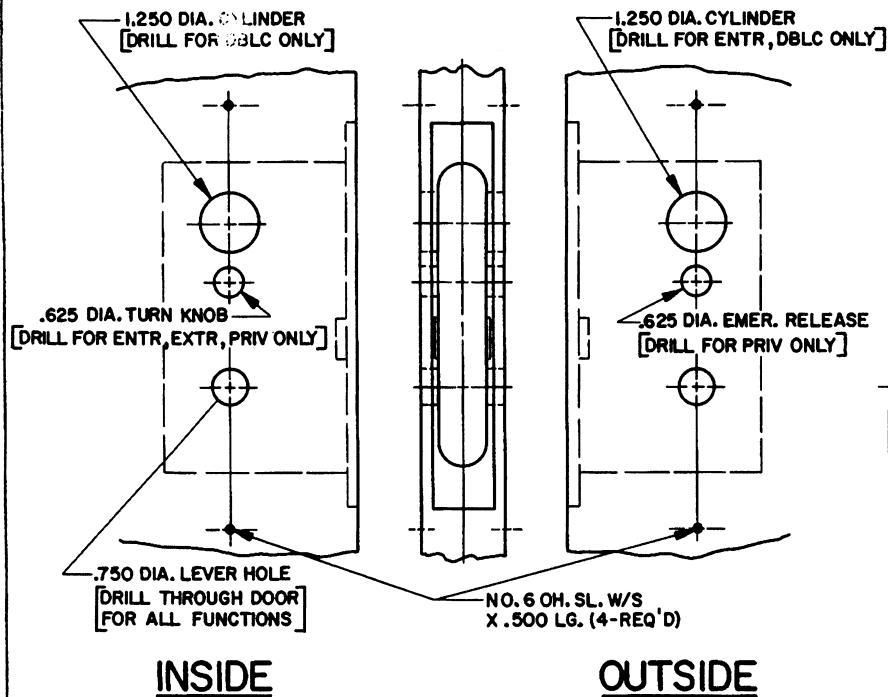


TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

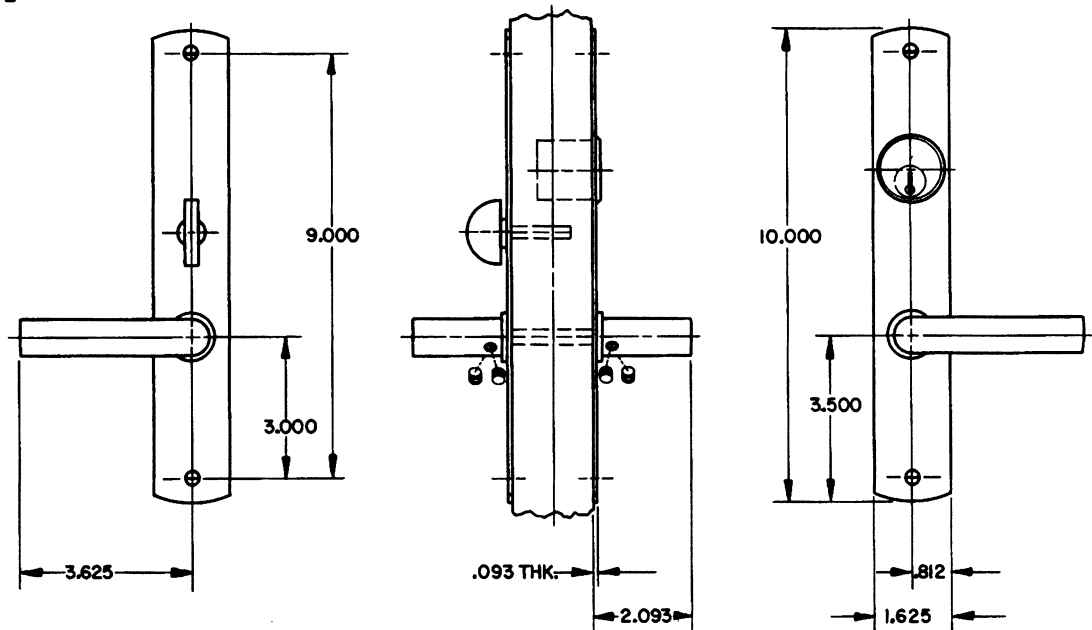


NOTE:


- 1.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 2.) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
- 4.) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

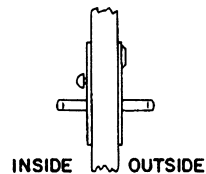


ENTR

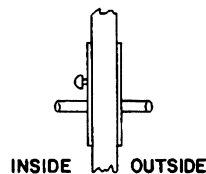

EXTR

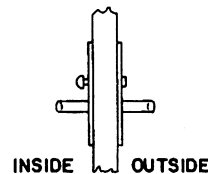

PRIV

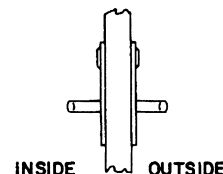

DBLC

B. BALDWIN	
6940 DENVER TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO
	I089

DO NOT SCALE DRAWING

©1986 by Baldwin Hardware Corporation