



DOOR DETAIL

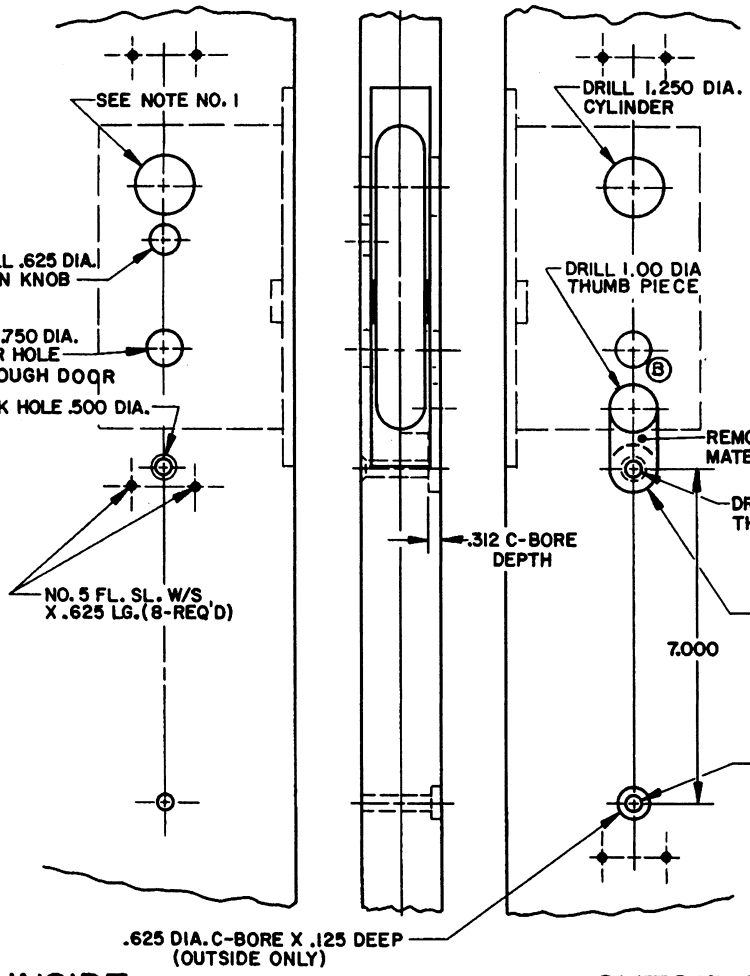

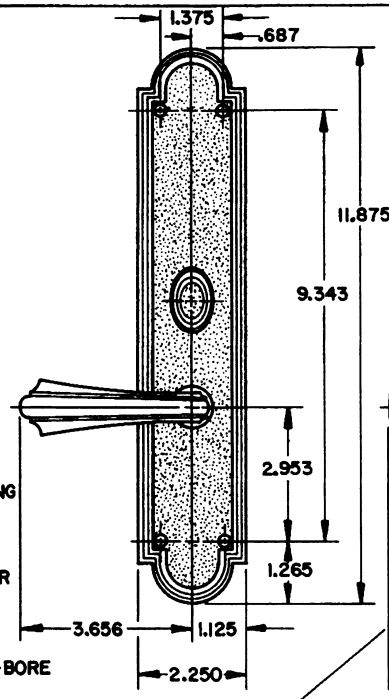

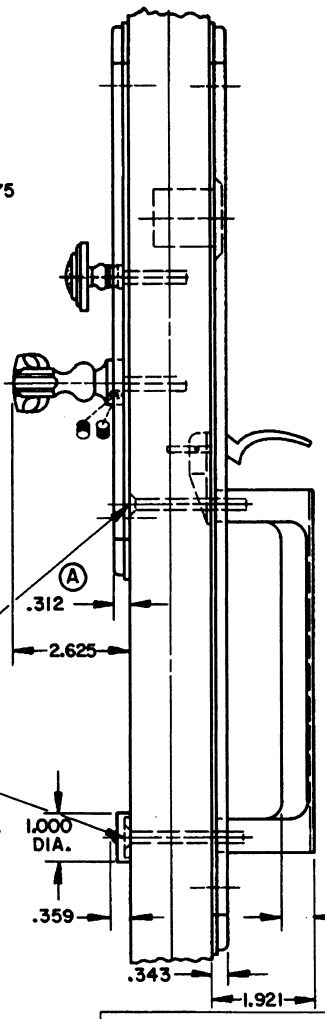

TRIM DETAIL
(RENT FUNCTION ILLUSTRATED)

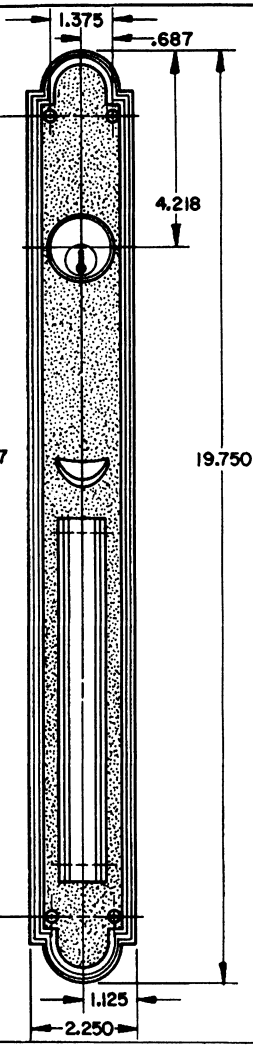

INSIDE

OUTSIDE

NOTE:

1.) WHEN PREPARING DOOR FOR L RDBL FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE. (INSIDE) DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.

2.) DRILL ALL HOLES HALFWAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.

3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.

4.) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

EFFECTIVE: 1-31-91 R.A.A-g

BALDWIN

6946 WASHINGTON TRIM

TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	1092B

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation