


# DOOR DETAIL

# TRIM DETAIL

(RENT FUNCTION ILLUSTRATED)

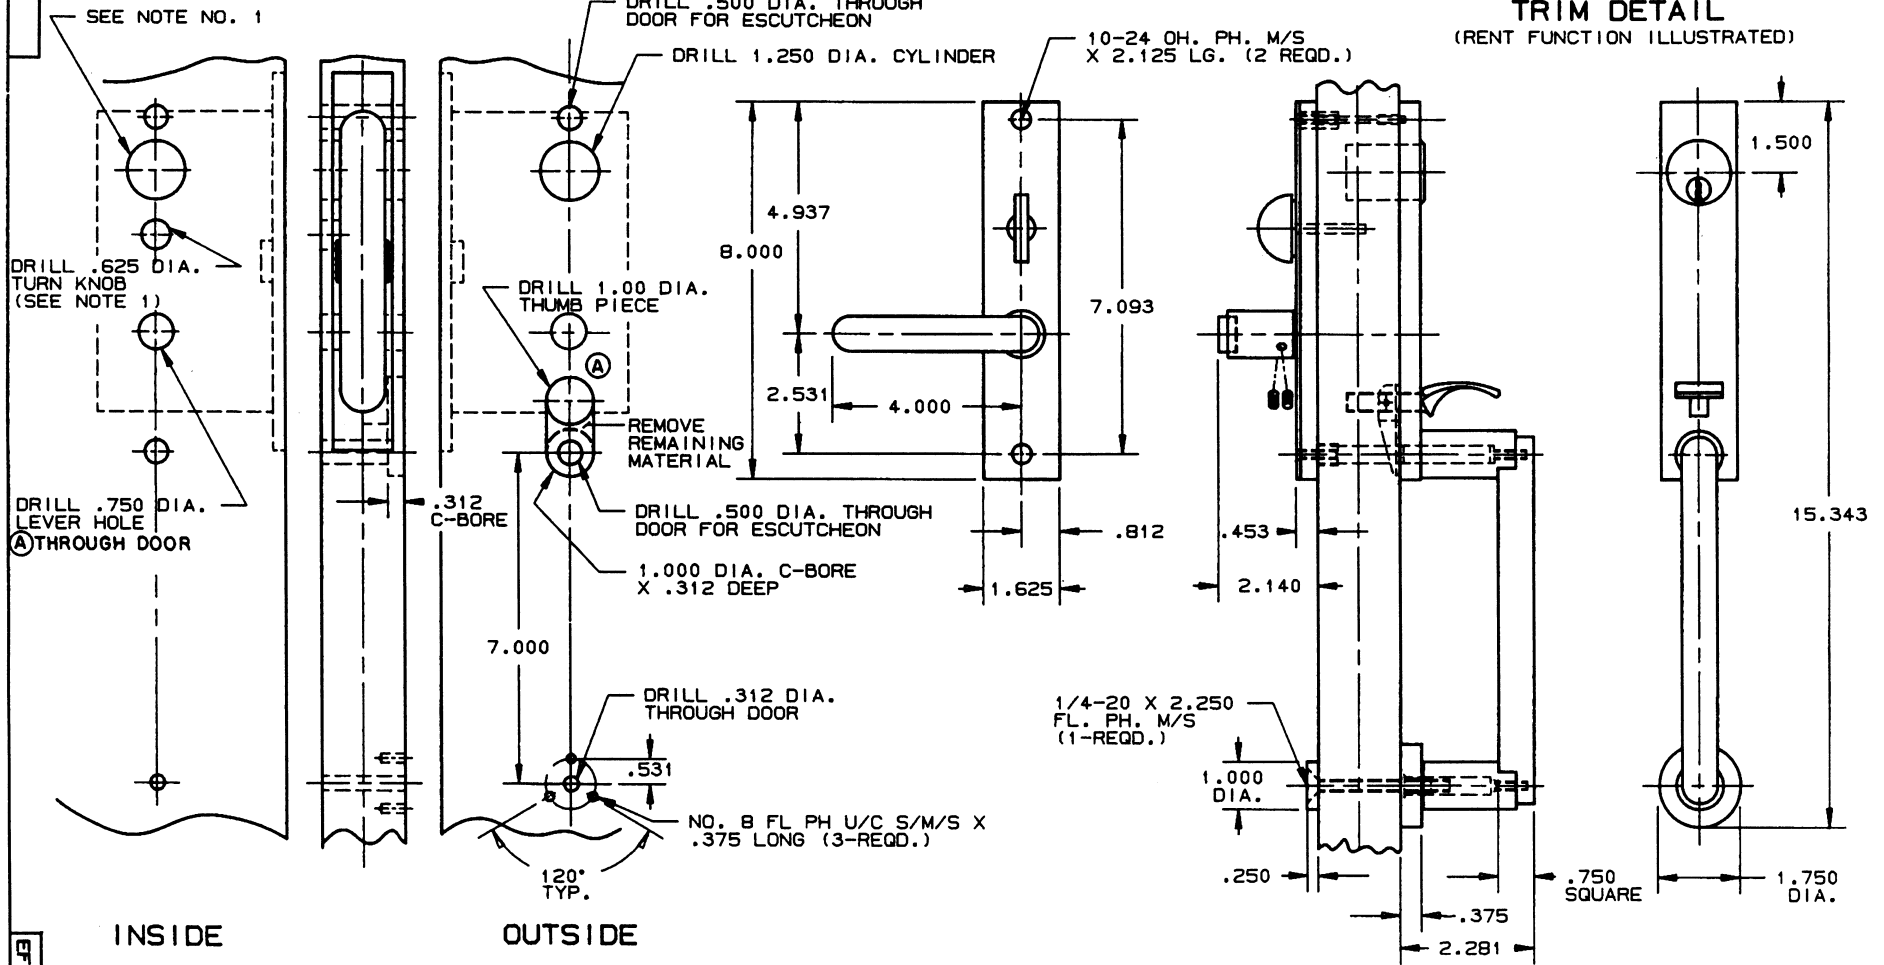

NOTE:

- 1) WHEN PREPARING DOOR FOR ROBL FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE (INSIDE). DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE ESCUTCHEON.
- 2) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS SEE APPROPRIATE LOCK TEMPLATE.
- 4) INSTALLATION PLATES ARE NOT REQ'D. FOR THIS TRIM.

DO NOT SCALE DRAWING

**BALDWIN**

6949 METROPOLITAN TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

I 114-A

EFFECTIVE: 1-31-91 RAL