



DOOR DETAIL

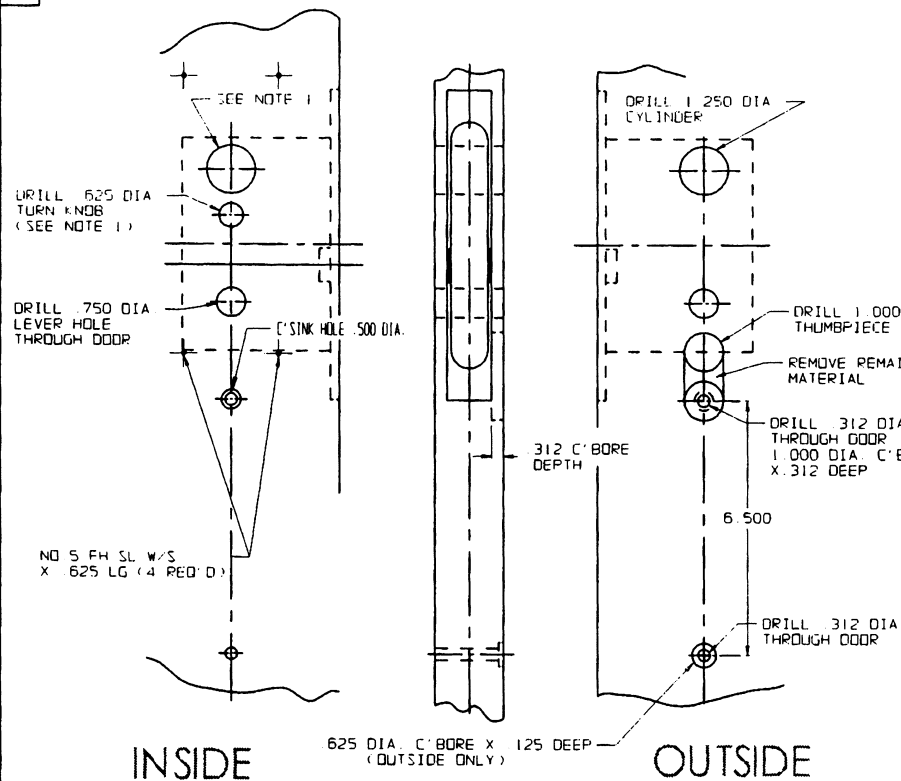

TRIM DETAIL

(ENTRY PLATE NOT ILLUSTRATED)

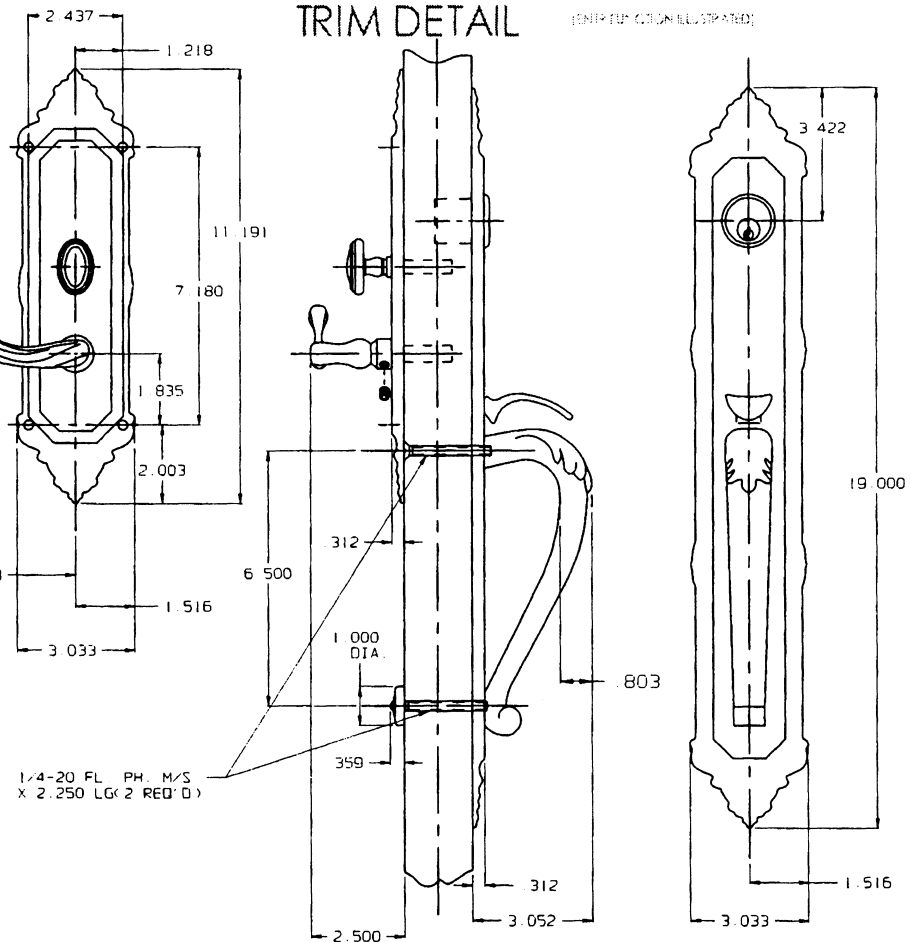

NOTE:

1. WHEN PREPARING DOOR FOR DBL FUNCTION, OMIT DRILLING OF .625 DIA TURN KNOB HOLE. (INSIDE)
DRILL A 1.250 DIA CYLINDER HOLE INSTEAD, USING THE SAME CENTER LINE AS THE OUTSIDE CYLINDER HOLE.
2. DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
3. FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
4. INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

DO NOT SCALE DRAWING

B. BALDWIN

6950 KENSINGTON

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

© 1994 BY BALDWIN HARDWARE CORPORATION

1115