



DOOR DETAILS

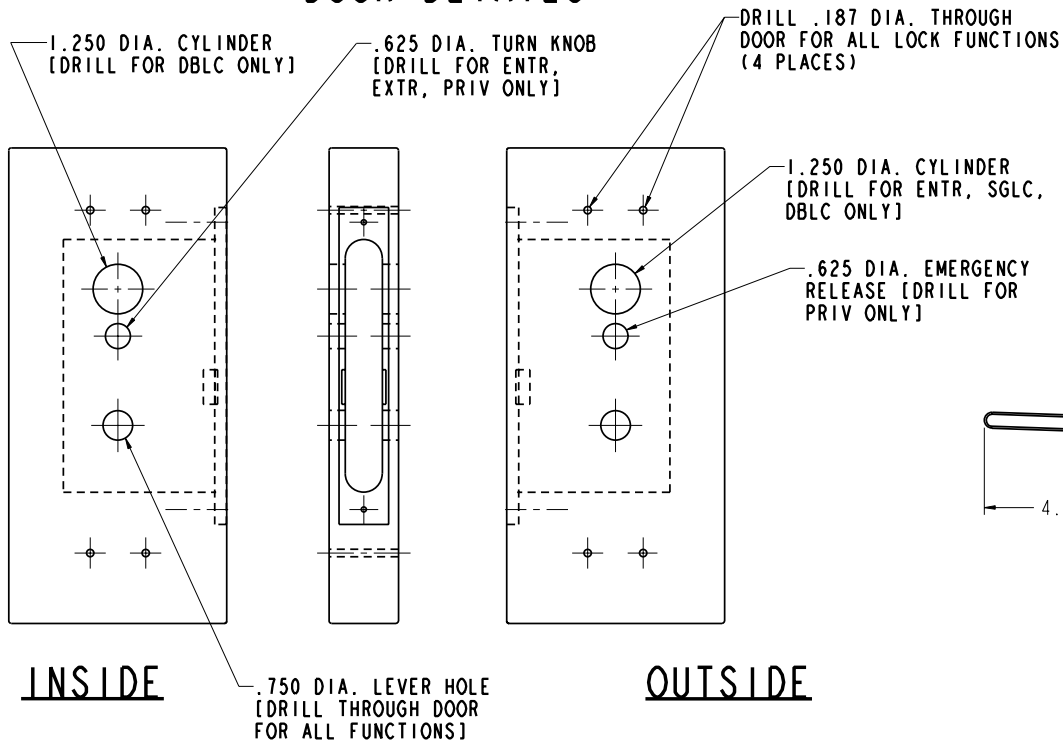


TRIM DETAIL

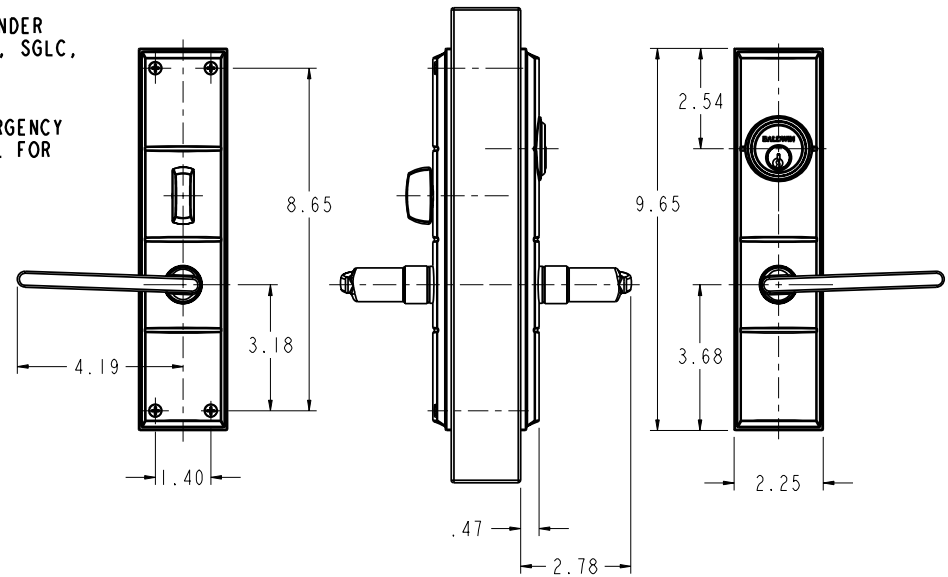

NOTE:

- 1) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 2) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THROUGH THE LOCK.
- 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

EFFECTIVE 02/21/07

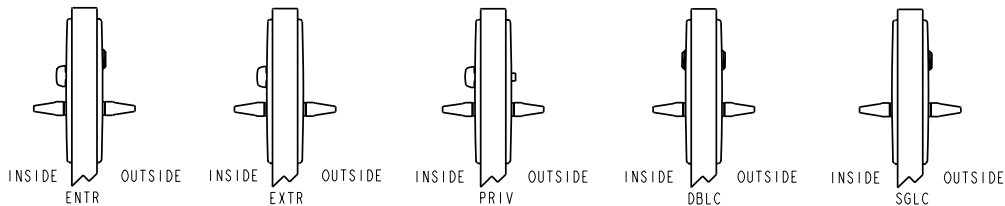

DO NOT SCALE DRAWING

 BALDWIN HARDWARE CORPORATION READING, PENNSYLVANIA		A BLACK & DECKER COMPANY	
6973 HOUSTON ENTRY TRIM			
TEMPLATE: NO VARIATIONS		TEMPLATE NO.	
©2006 BY BALDWIN HARDWARE CORPORATION		I-973	