



DOOR DETAIL

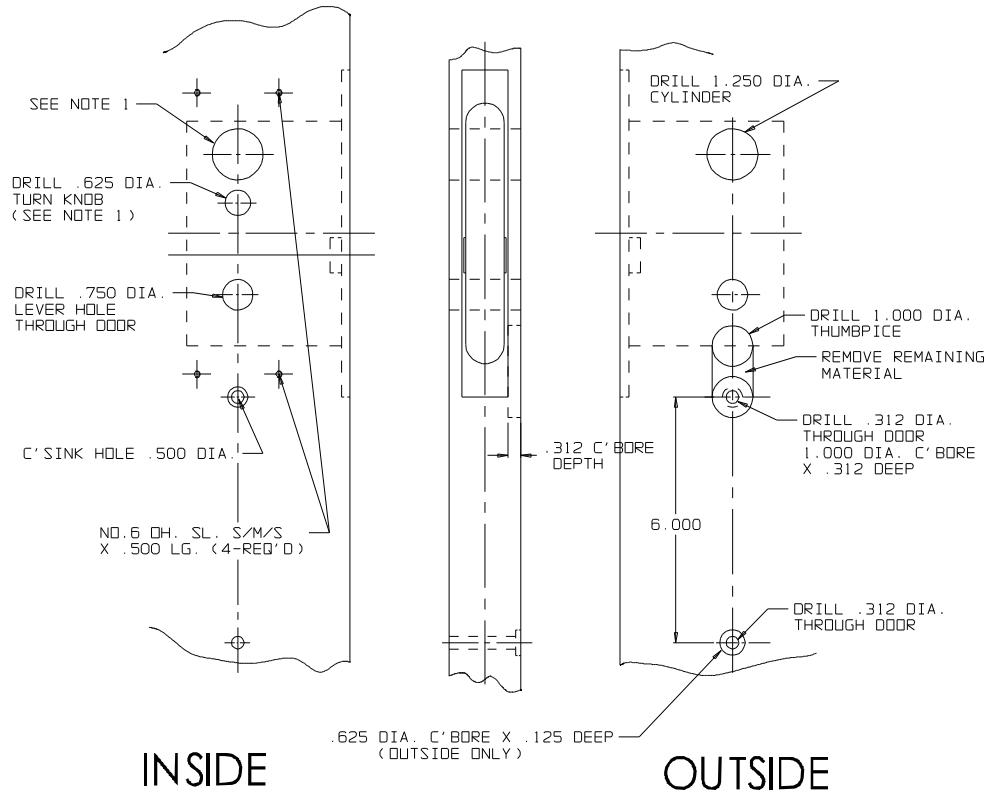

TRIM DETAIL

(ENTR FUNCTION ILLUSTRATED)

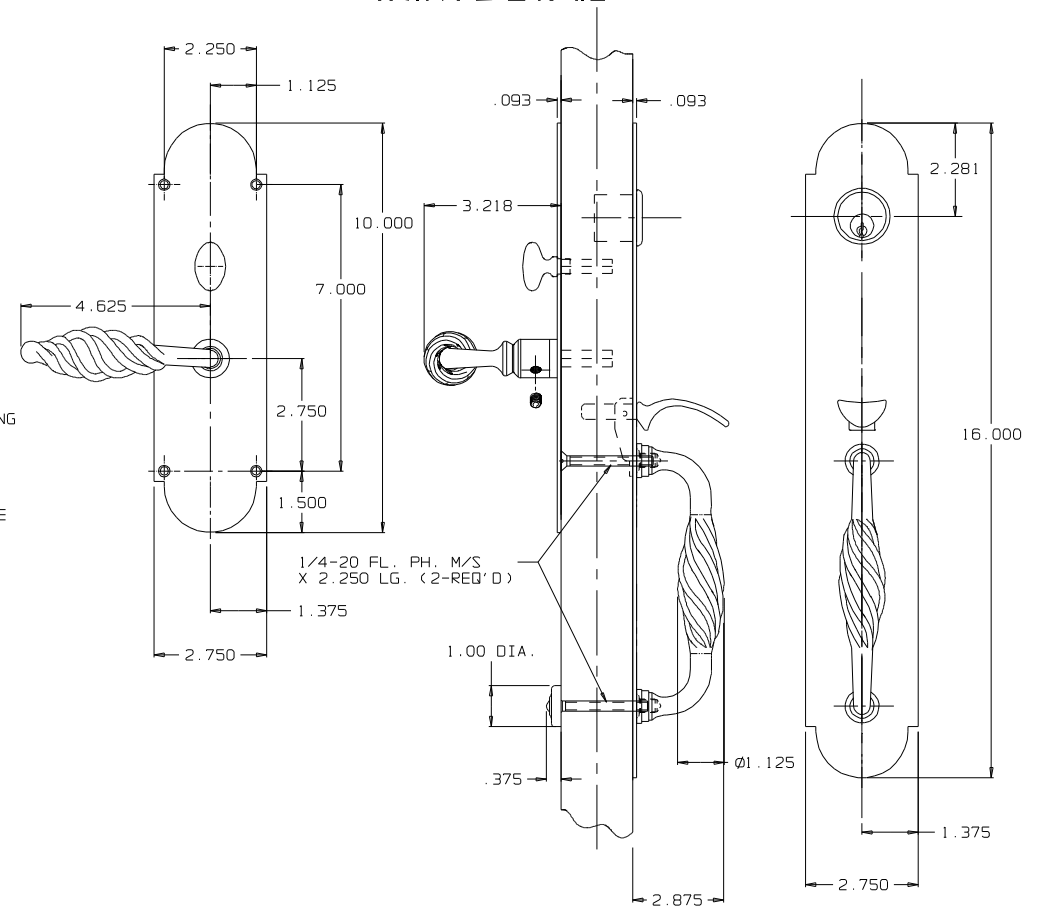

NOTE:

- 1.) WHEN PREPARING DOOR FOR OBL FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE. (INSIDE)
DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING THE SAME CENTER LINE AS THE OUTSIDE CYLINDER HOLE.
- 2.) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 4.) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

DO NOT SCALE DRAWING



BALDWIN HARDWARE CORPORATION

6981 MELBOURNE TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

© 2003 BY BALDWIN HARDWARE CORPORATION

I-1 31