



DOOR DETAIL

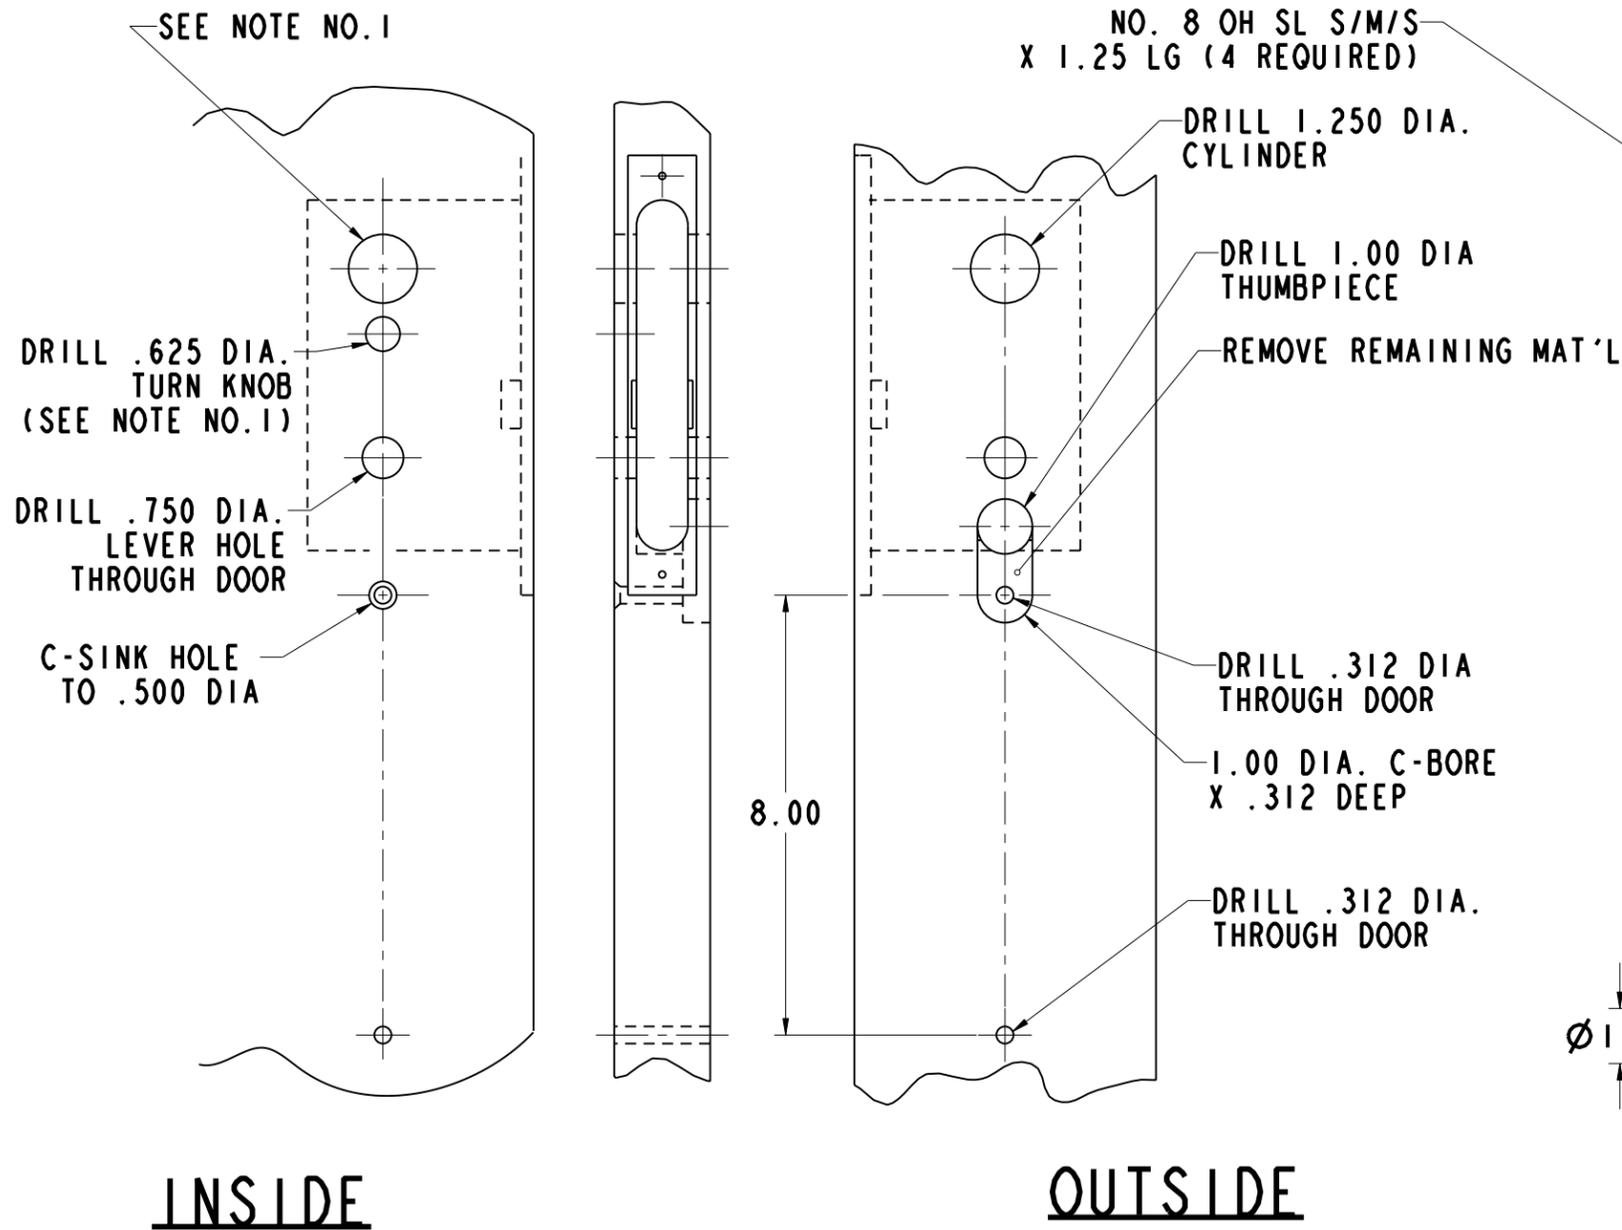

TRIM DETAIL

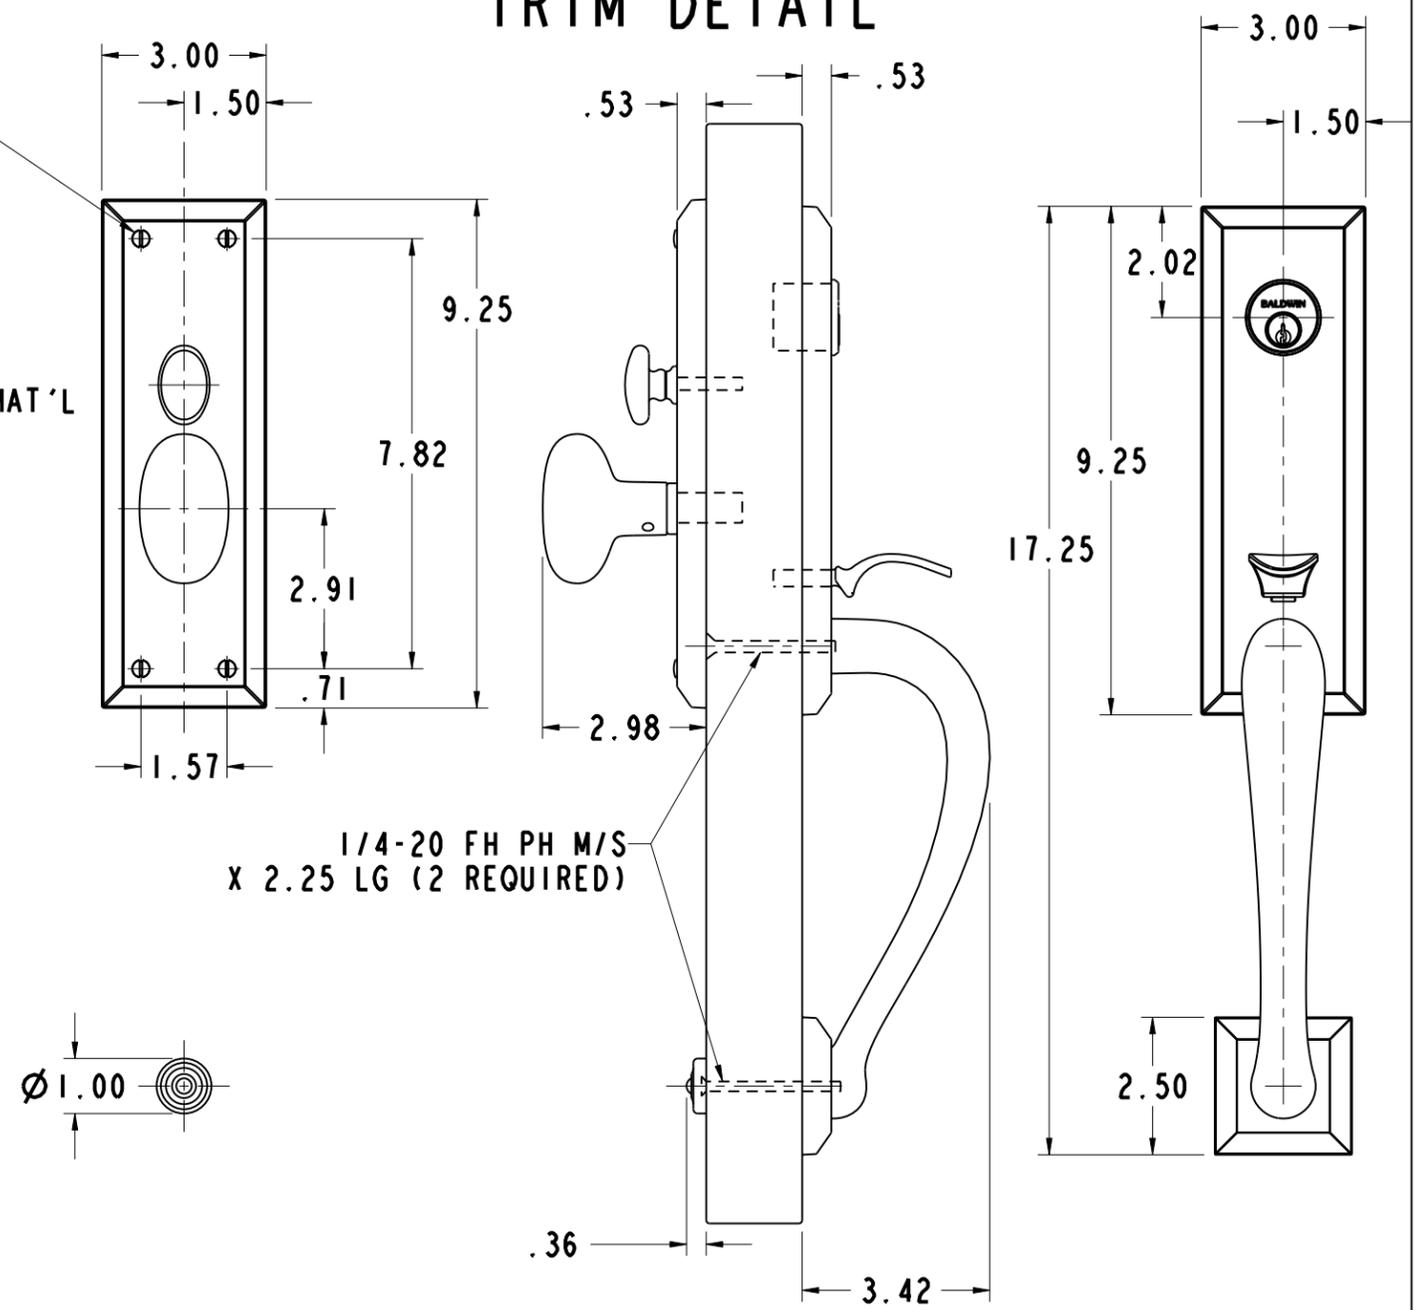

- NOTE:**
- 1) WHEN PREPARING DOOR FOR $\frac{L}{R}$ DBL FUNCTION, OMIT DRILLING OF Ø .625 TURN KNOB HOLE (INSIDE). DRILL A Ø 1.250 CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
 - 2) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
 - 3) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
 - 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

BALDWIN HARDWARE CORPORATION READING, PENNSYLVANIA	BLACK & DECKER COMPANY	
		M502 CODY TRIM
TEMPLATE: NO VARIATIONS		TEMPLATE NO.
© 2006 BY BALDWIN HARDWARE CORPORATION		I-502

DO NOT SCALE DRAWING

EFFECTIVE 10-22-07