
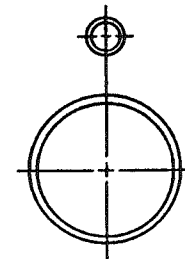
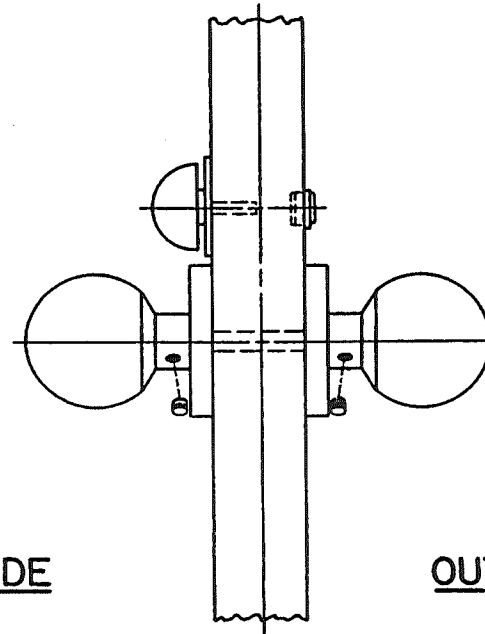
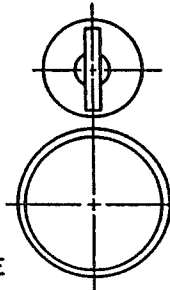


DOOR DETAIL

TYPICAL TRIM DETAIL

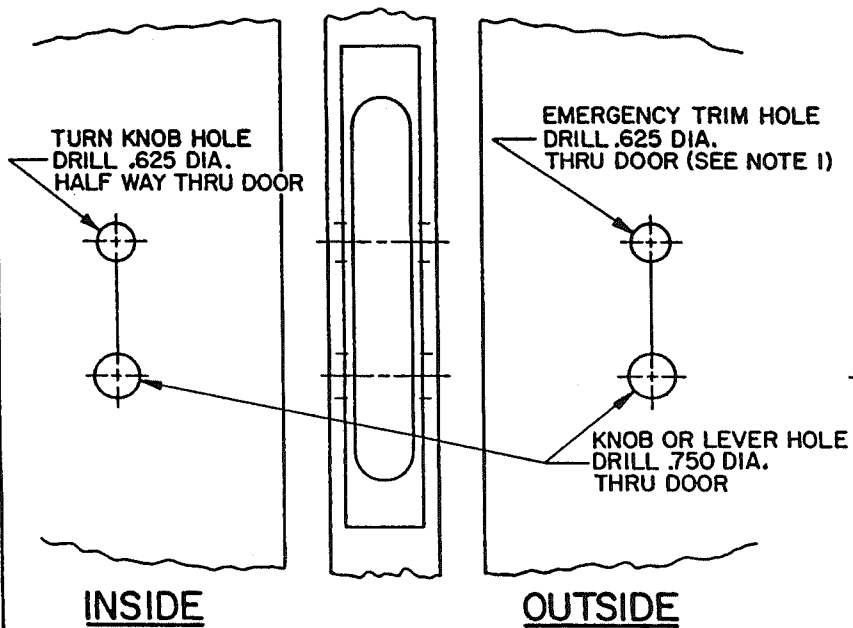

INSIDE

OUTSIDE

NOTE:

- 1.) WHEN USING NO. 6745 EMERGENCY TRIM, DRILL .500 DIA. HOLE HALF WAY THRU DOOR.
- 2.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THRU THE LOCK.
- 3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK AND TRIM TEMPLATES.
- 4.) THIS TEMPLATE IS TEMPORARY ISSUE. TRIM PICTURED IS FOR ILLUSTRATION PURPOSES.

BALDWIN

PRIV FUNCTION

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

F-PRIA

DO NOT SCALE DRAWING

© 1986 by Baldwin Hardware Corporation