



DOOR DETAIL

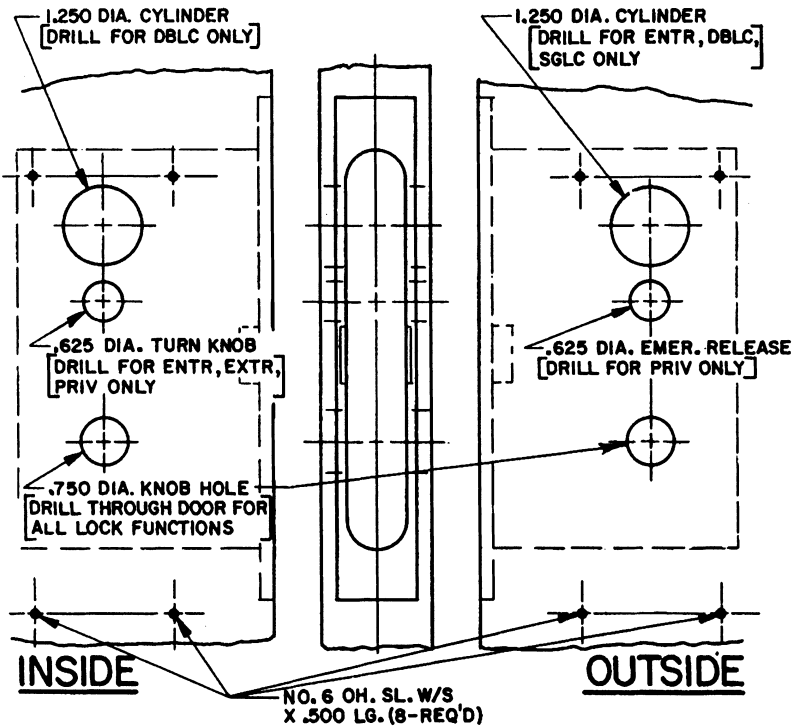


TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

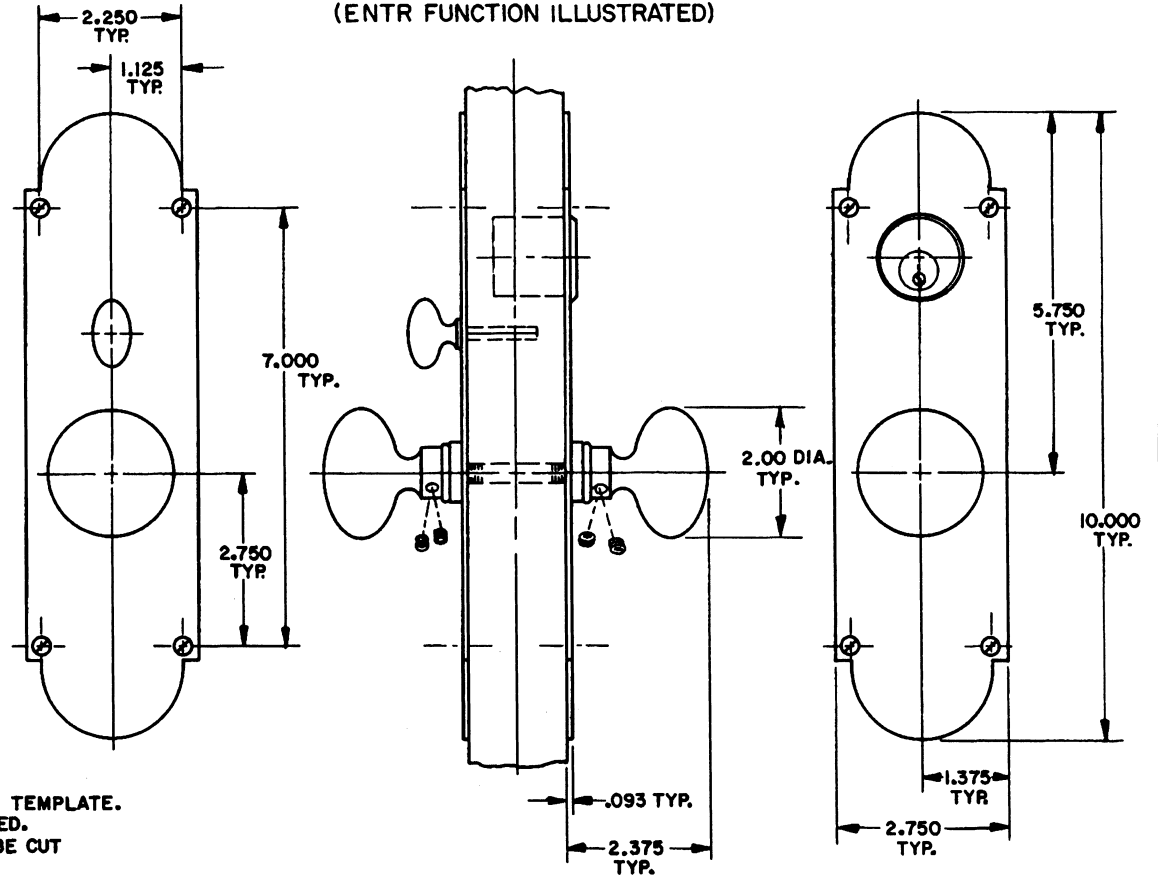

- NOTE:
- 1.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
 - 2.) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
 - 3.) TO ENABLE EMERGENCY TRIM TO FUNCTION, THE TURN PIECE SPINDLE MUST BE CUT TO EXTEND NO FURTHER THAN HALF WAY THRU THE LOCK.
 - 4.) INSTALLATION PLATES ARE NOT REQ'D.

EFFECTIVE: 2-1-90 R.M.-9

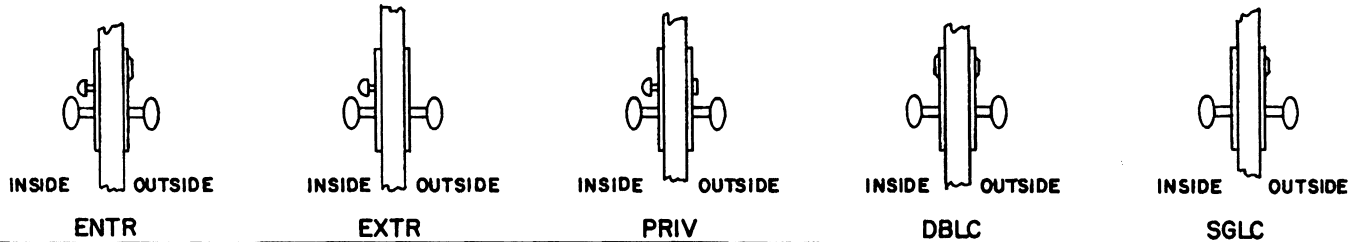

B. BALDWIN	
6555 BOSTON TRIM	
TEMPLATE NO. VARIATIONS	TEMPLATE NO.
	I555

DO NOT SCALE DRAWING

© 1990 by Baldwin Hardware Corporation