







BALDWIN®

RESERVE™


MULTIPOINT 2020

RESERVE MULTIPOINT

STYLES

Style	Function	Interior Lever	Handing	Finish	
 (CHE) Chesapeake	(EN) Entry (PT) Patio (AI) Active Inactive (FD) Full Dummy	(CUR) Curve (FED) Federal (DEC) Decorative	(R) Right Hand (L) Left Hand	(003) Polished Brass (049) Matte Brass & Black (150) Satin Nickel (152) Matte Antique Nickel	(112) Venetian Bronze (260) Polished Chrome (141) Polished Nickel (190) Satin Black
 (DEL) Del Mar	(EN) Entry (PT) Patio (AI) Active Inactive (FD) Full Dummy	(CUR) Curve (FED) Federal (DEC) Decorative	(R) Right Hand (L) Left Hand	(003) Polished Brass (049) Matte Brass & Black (150) Satin Nickel (152) Matte Antique Nickel	(112) Venetian Bronze (260) Polished Chrome (141) Polished Nickel (190) Satin Black
 (SEA) Seattle	(EN) Entry (PT) Patio (AI) Active Inactive (FD) Full Dummy	(SQU) Square (TUB) Tube	(R) Right Hand (L) Left Hand	(150) Satin Nickel (112) Venetian Bronze (260) Polished Chrome	(141) Polished Nickel (190) Satin Black
 (ELK) Elkhorn	(EN) Entry (PT) Patio (AI) Active Inactive (FD) Full Dummy	(ARC) Arch (TAP) Taper	(R) Right Hand (L) Left Hand	(481) Dark Bronze (492) White Bronze	
 (LON) Longview	(EN) Entry (PT) Patio (AI) Active Inactive (FD) Full Dummy	(ARC) Arch (TAP) Taper	(R) Right Hand (L) Left Hand	(481) Dark Bronze (492) White Bronze	

FINISHES

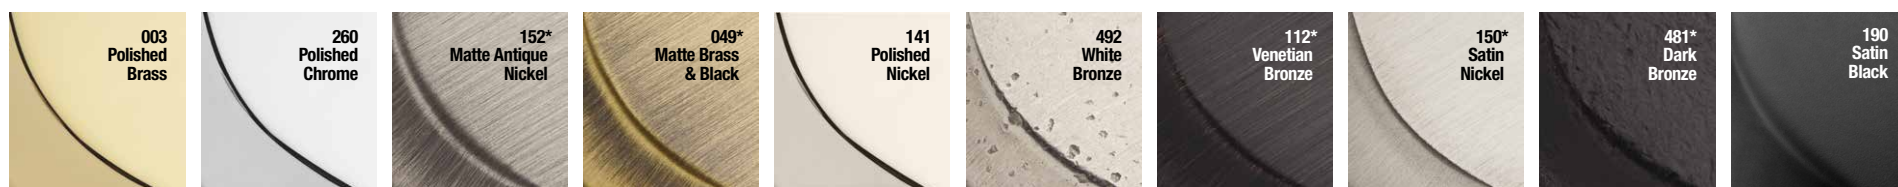


CONFIGURATIONS


CONFIGURATION TABLE

Baldwin Configuration	Baldwin Portfolio	Cylinder	Position	Lock CTC	Mounting CTC	Common Brands
3	Reserve	American	Below	3 5/8" (92 mm)	8 3/8"	Pella
4	Reserve	Profile	Below	3 5/8" (92 mm)	7 7/8"	G-U, Hoppe, Kolbe & Kolbe Loewen, Weathershield
6	Reserve	American	Above	3 5/8" (92 mm)	7 1/4"	Ashland, JELD-WEN, Milgard & Marvin


CONFIGURATION KEY

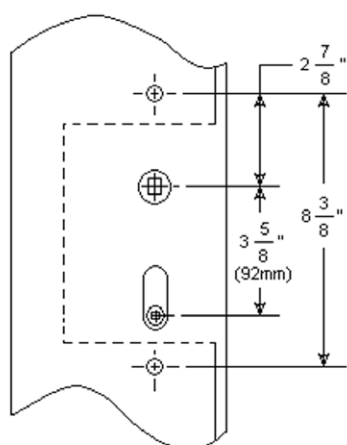

Configuration 3

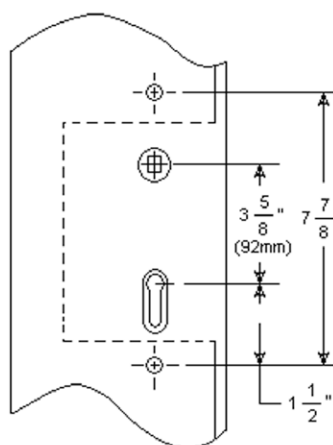

Configuration 4

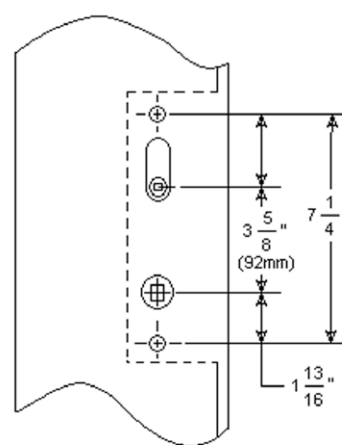

Configuration 6

MULTIPOINT DIMENSIONS


CONFIGURATIONS

TOP MOUNTING SCREWS




Align this point to the top mounting screw of your multipoint product


LOCK CTC BEGINNING

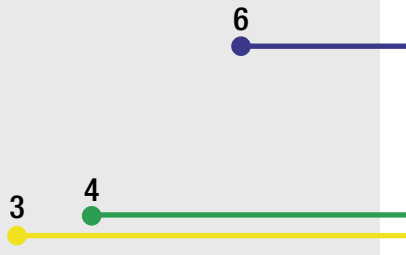

LOCK CTC END

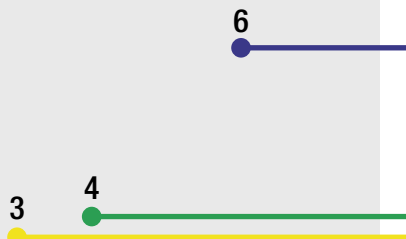

BOTTOM MOUNTING SCREWS

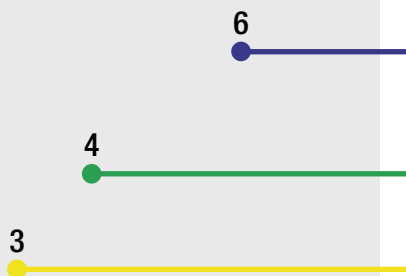

HOW TO DETERMINE YOUR CONFIGURATION

1. Tear off the Multipoint Dimensions sheet
2. Place it beside your Multipoint setup, aligning the top line on the sheet with the top screw on your setup
3. Find the corresponding colored lines that align with the lock, lever, and bottom screw on your product
4. Determine the correct configuration based on color of the lines using the Configuration Table below
5. To double check, you can use the attached ruler to measure the total mounting length. Place the ruler next to your setup, and align the "0" with the top screw on your setup, and confirm where the bottom screw measures (dots included for easy reference).

CONFIGURATION TABLE

Baldwin Configuration	Baldwin Portfolio	Cylinder	Position	Lock CTC	Mounting CTC
3	Reserve	American	Below	3 5/8" (92 mm)	8 3/8"
4	Reserve	Profile	Below	3 5/8" (92 mm)	7 7/8"
6	Reserve	American	Above	3 5/8" (92 mm)	7 1/4"