



DOOR DETAIL

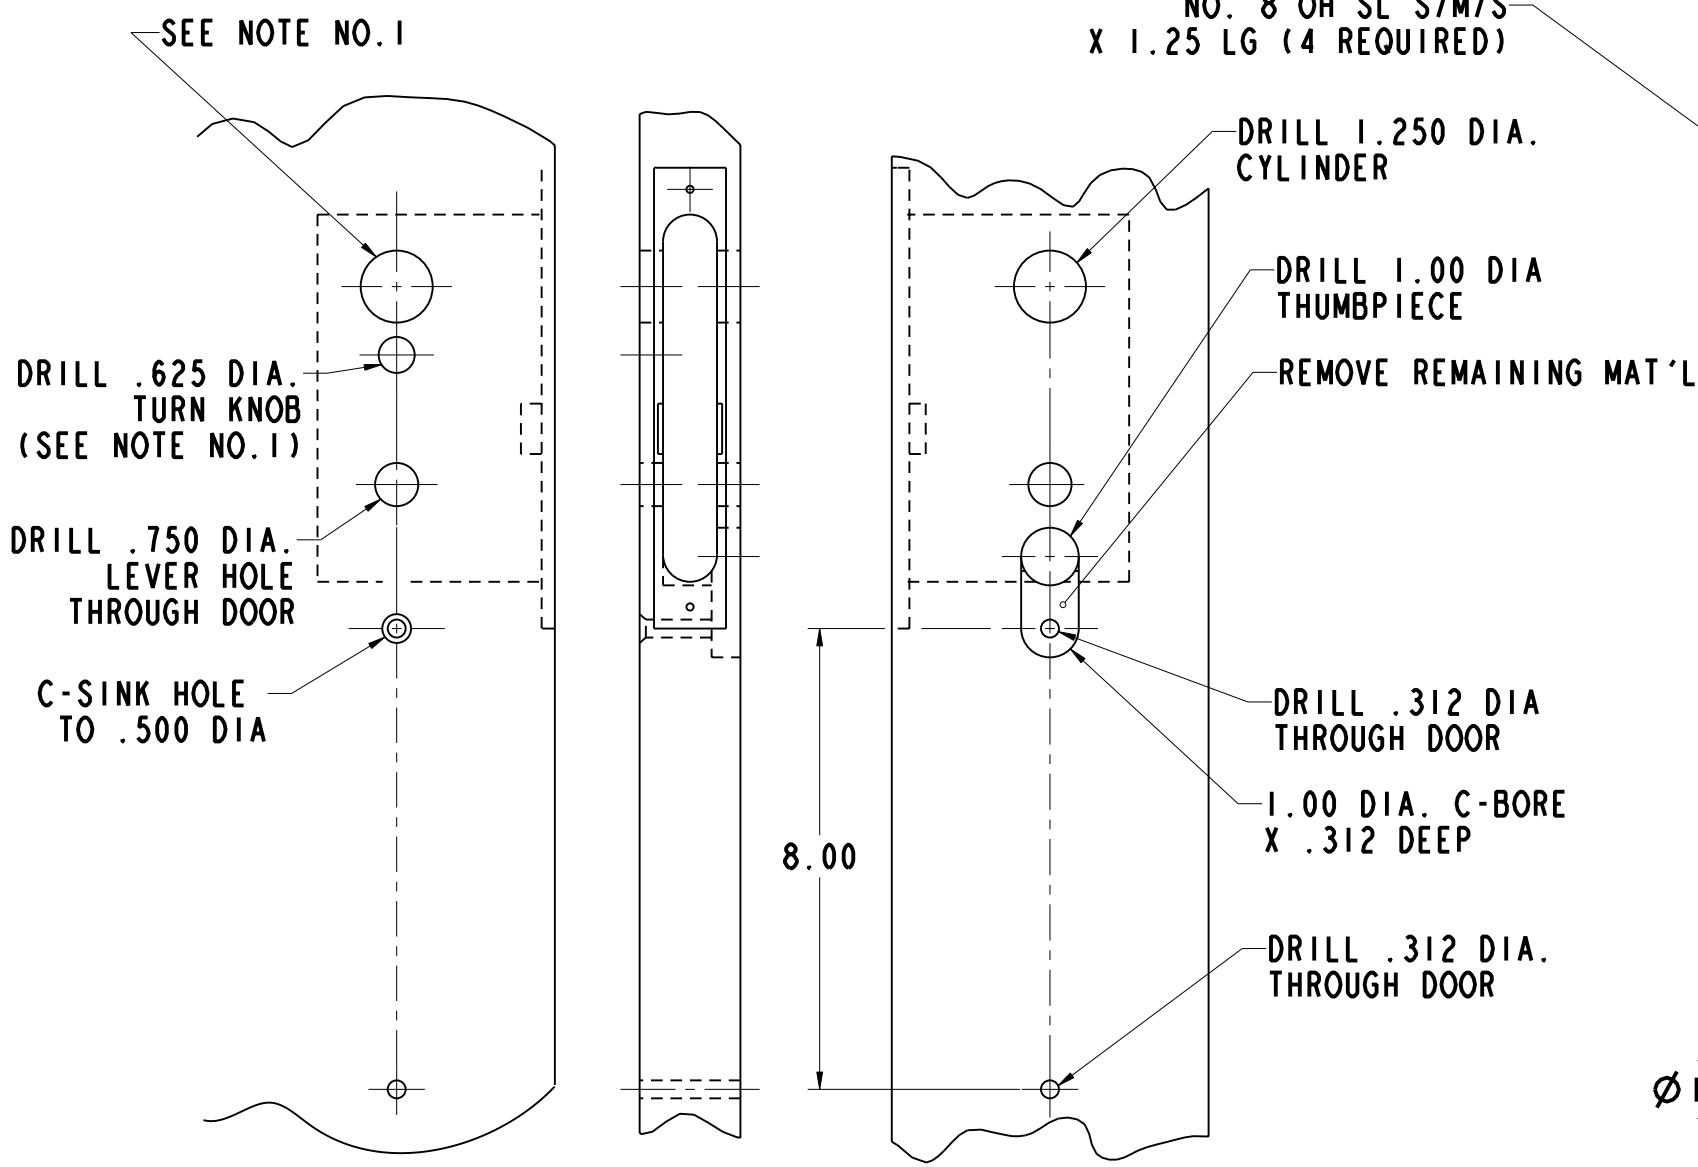

INSIDE

OUTSIDE

TRIM DETAIL

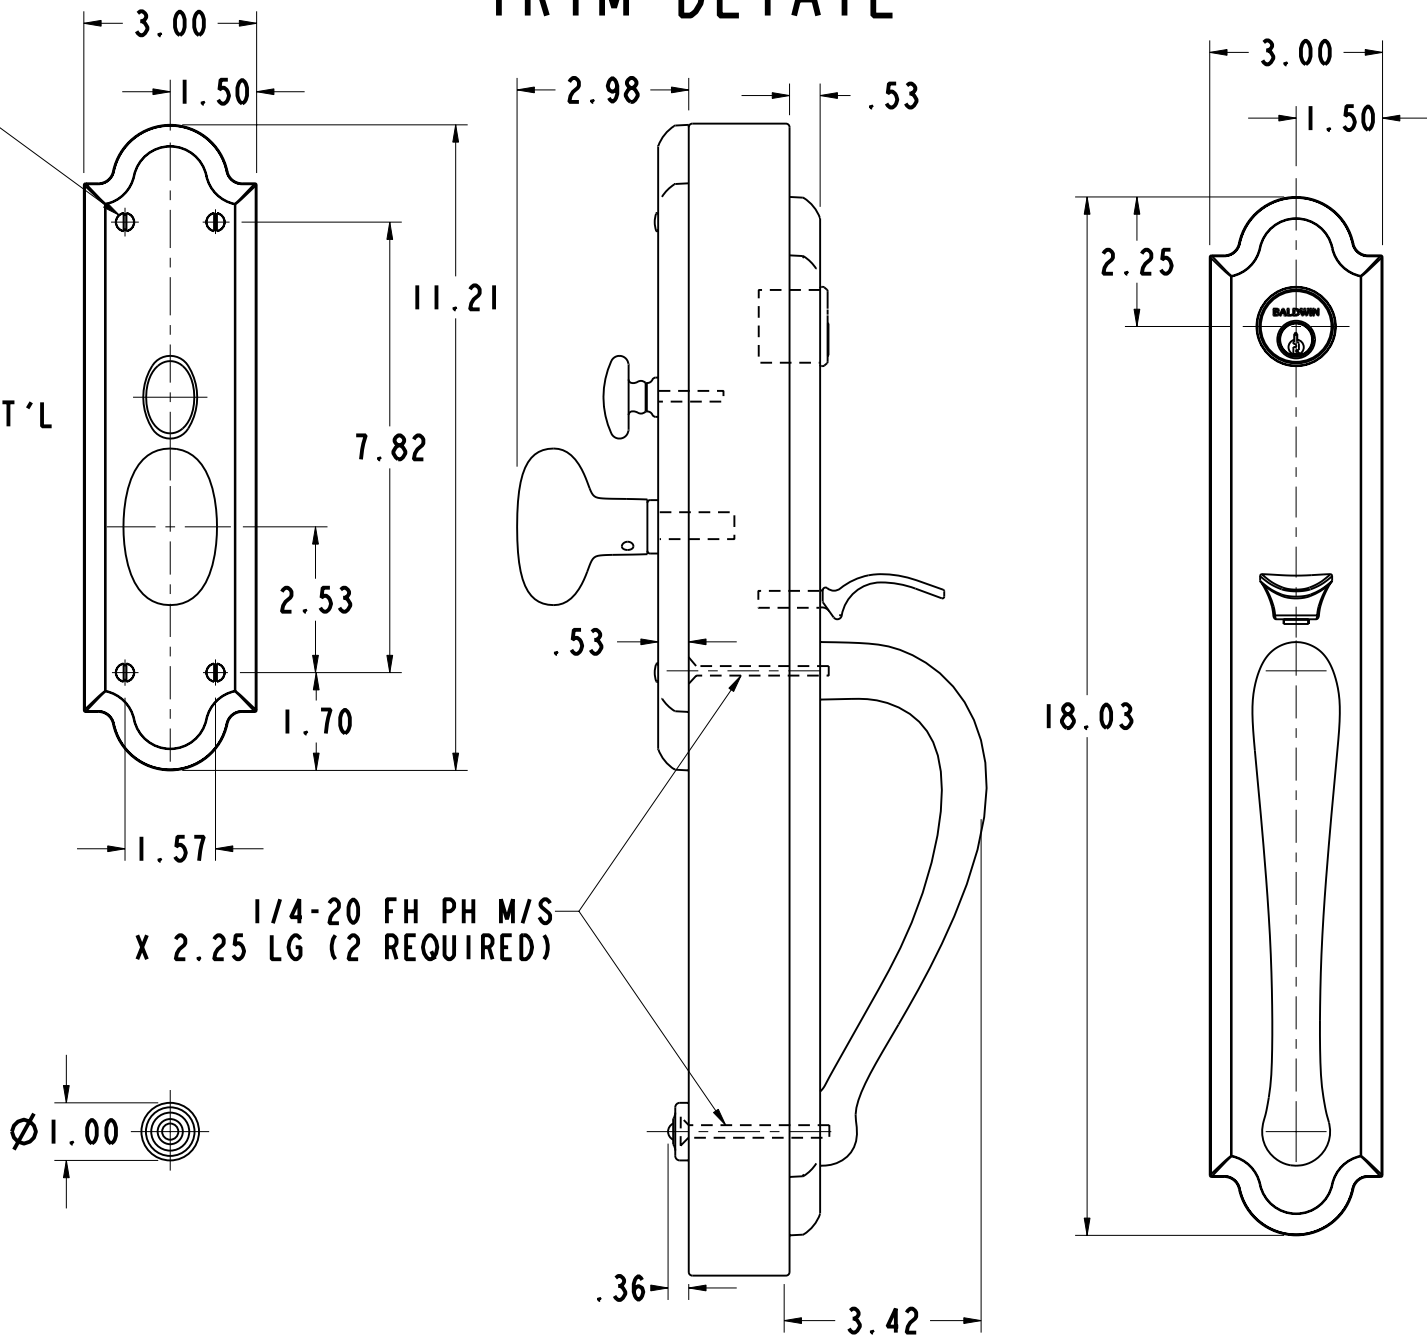

- NOTE:
- 1) WHEN PREPARING DOOR FOR L_R DBL FUNCTION, OMIT DRILLING OF Ø.625 TURN KNOB HOLE (INSIDE). DRILL A Ø 1.250 CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
 - 2) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
 - 3) DRILL ALL HOLES HALF WAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
 - 4) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.

B

BALDWIN

HARDWARE CORPORATION

READING, PENNSYLVANIA

A

BLACK&DECKER

COMPANY

M514 BOULDER TRIM

TEMPLATE: NO VARIATIONS

TEMPLATE NO. I-514

© 2006 BY BALDWIN HARDWARE CORPORATION

DO NOT SCALE DRAWING

EFFECTIVE 10-22-07