
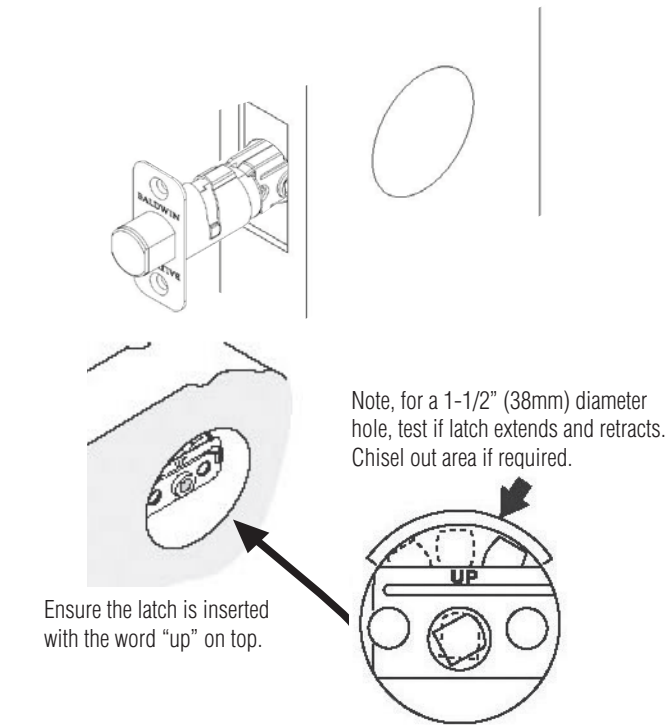


Double Cylinder Deadbolt Installation Instructions

www.baldwinhardware.com


1. Adjust and install latch

Measure your door backset as shown.

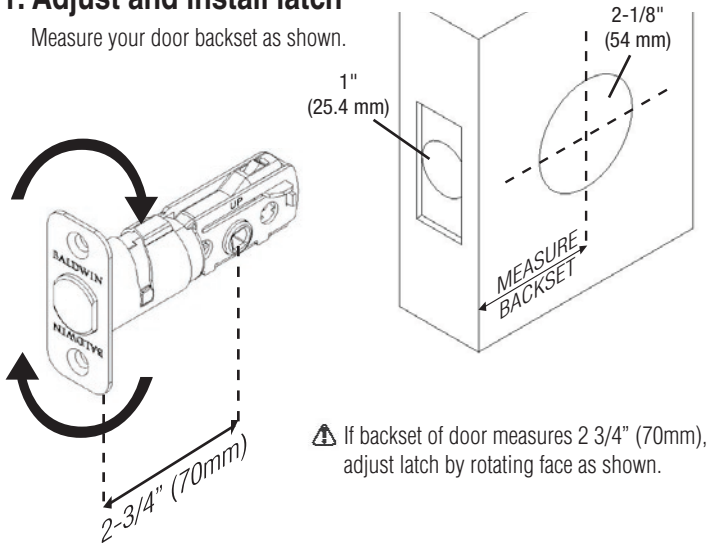


Ensure the latch is inserted with the word "up" on top.

Install latch with 11/16" screws.

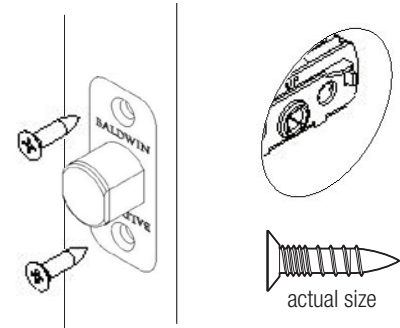


2. Install trim

EXTERIOR

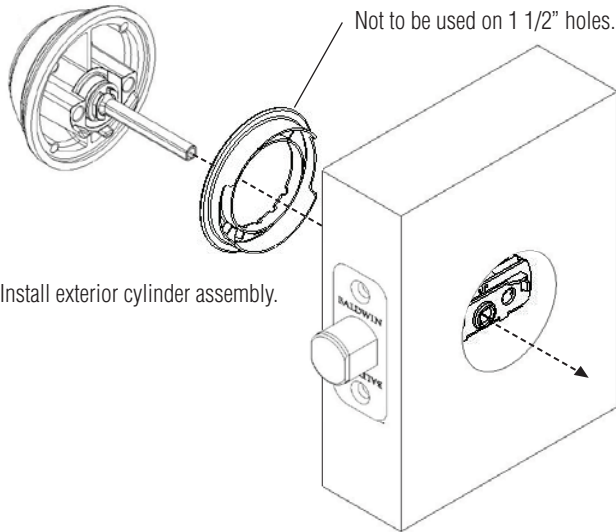


INTERIOR

Install interior cylinder assembly.

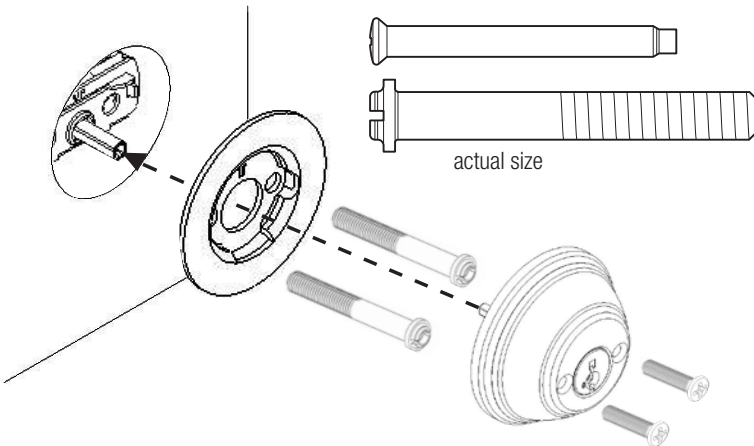


3. Install strike



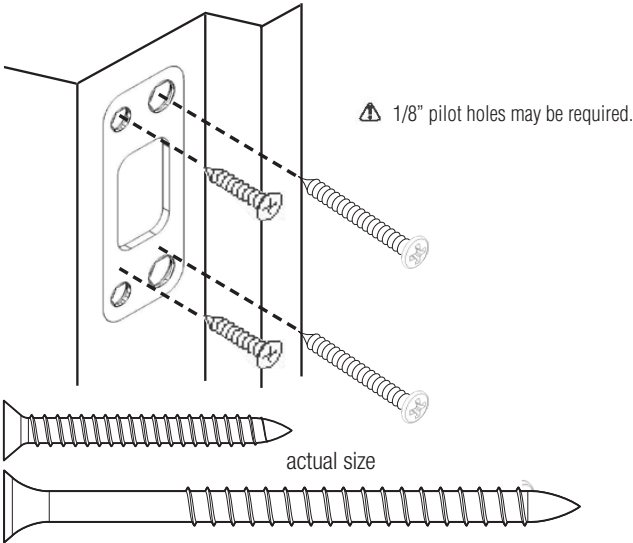


TEMPLATE


PLANTILLA

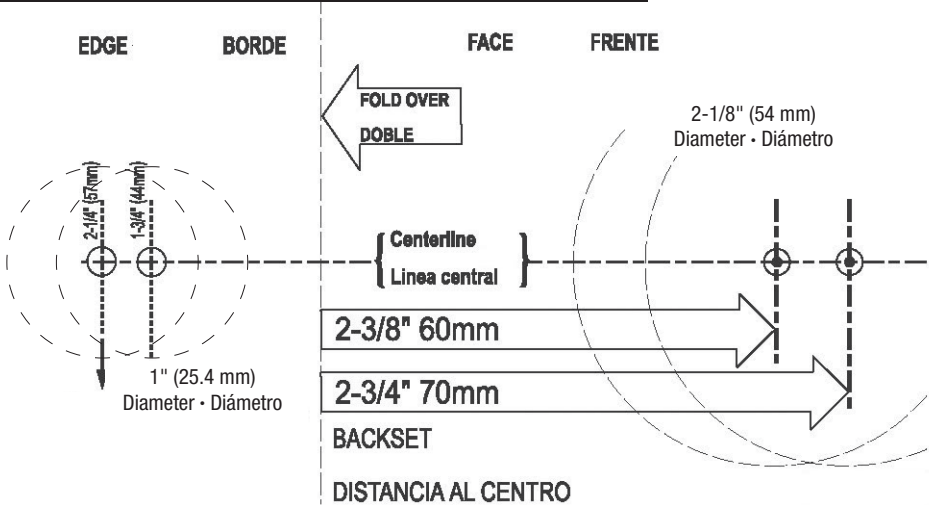


1. Regule e instale el picaporte

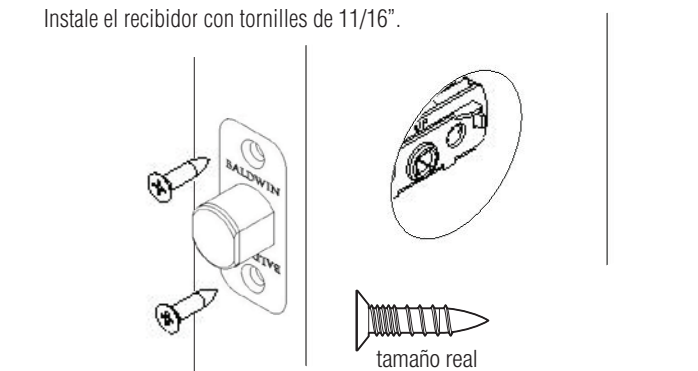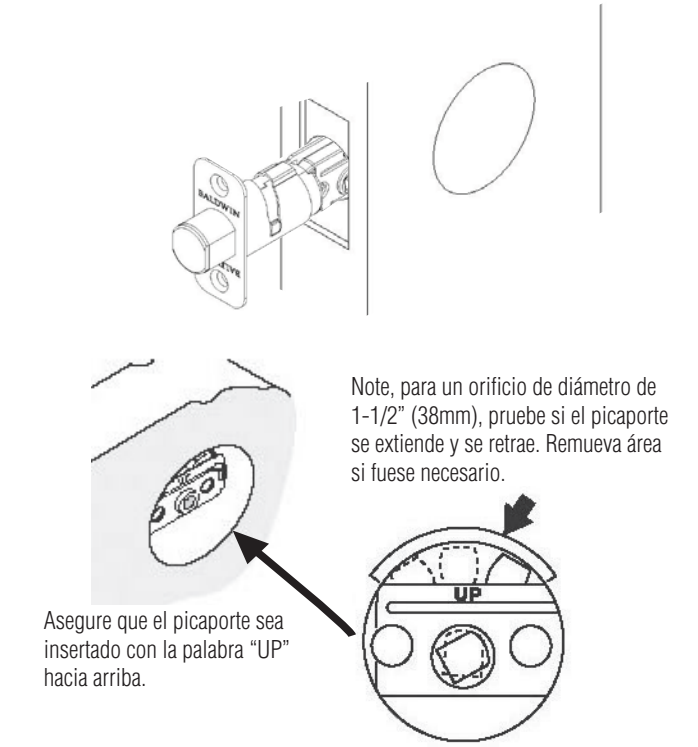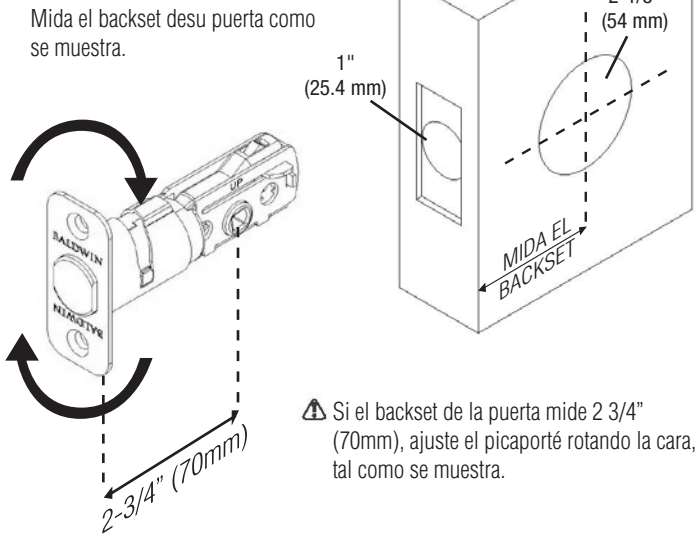

2. Instale el Trim

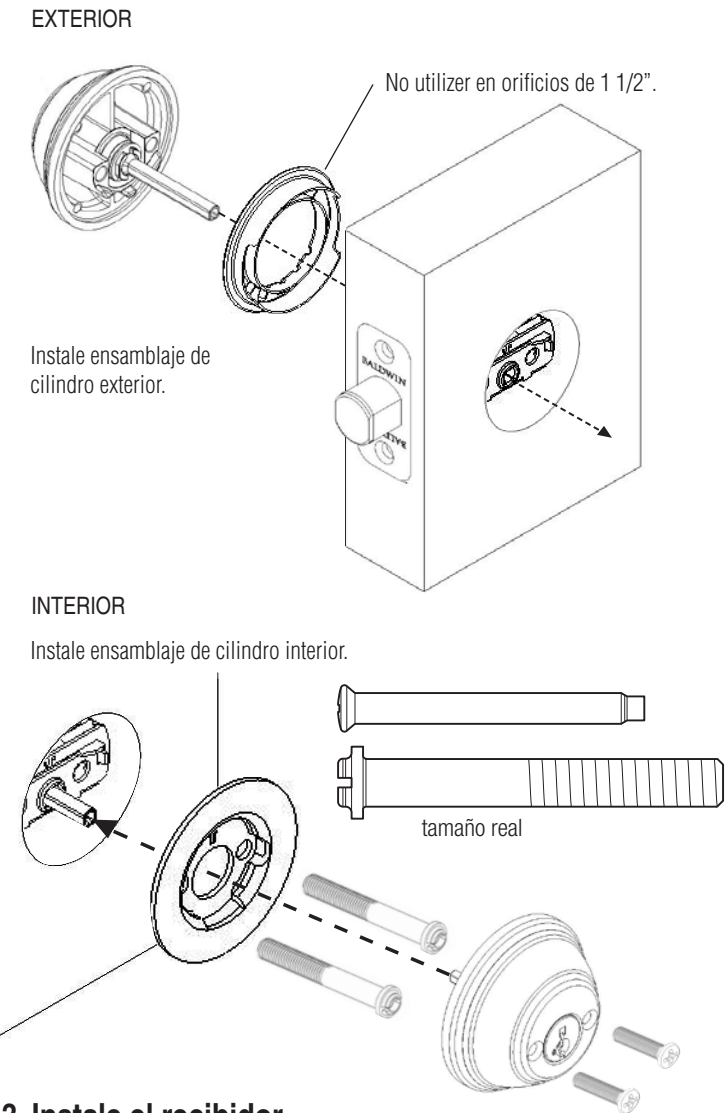

3. Instale el recibidor

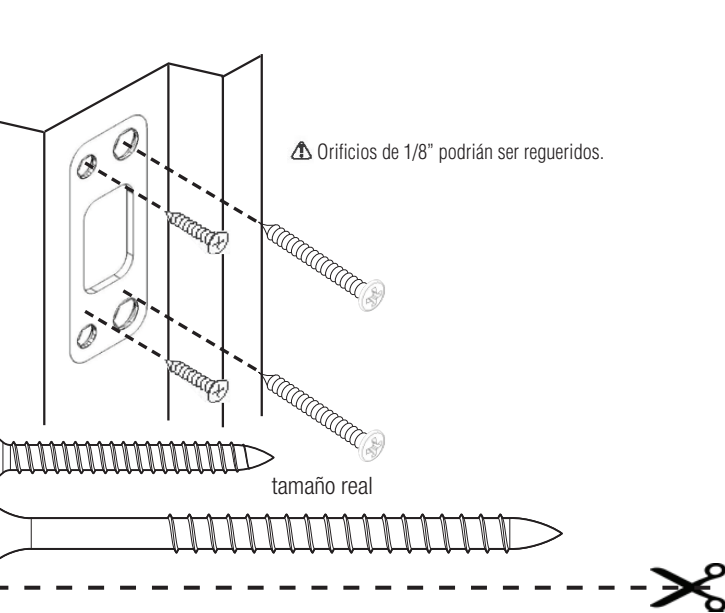

TEMPLATE

PLANTILLA

