
TED BAKER

LONDON

ARTILF

Getting the most from

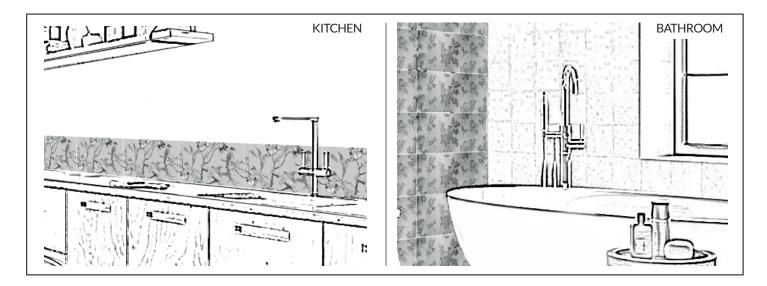

INSTALLATION INSTRUCTIONS

Check the surface to be tiled is clean, flat, dry, non-porous and free from grease or dust or anything that could impair adhesion.

Use Superior Pro-Poxy Adhesive and Grout for installation. Always follow the manufacturer's mixing and fixing instructions.

*Please note tile may require support until the adhesive fully sets.

Allow air to circulate freely around the edges of the tile to ensure the adhesive sets. *Adhesive drying times can be affected by a number of factors. Ensure it is fully dry/cured before grouting.

Do not use a rapid-set adhesive with a cement base as this is too aggressive.

Product cannot be submerged in water but can be used in a shower or wet room environment.

As with all glass products care should be taken while cleaning and fixing. Remove dirt and grease with a warm soapy sponge, then buff with a lint-free cloth. Never use abrasives on your glass tiles.

Some shade variation is an inherent feature within glass tiles. Please ensure a satisfactory effect can be reaches prior to insallation.

If using behind a stove you need to ensure that the product is fixed at least 4.4 in. away from the heat source.





Email: customerhelp@tileshop.com Tel: 888-398-6595