

NOTE: READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION WORK BEGINS

735-7810 Air Filter Replacement

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

WARNING: Removal of the front wheel may be necessary to access filter cartridge. Be sure to properly anchor and support the vehicle prior to jacking and removing the wheel.

1. Remove fasteners from left side of splash shield and front fasteners from left side inner fender liner to access the filter box.
2. Pull down splash shield and pull fender liner rear.
3. Remove the two wing nut retainers.
4. Pull filter cartridge housing form the air box.
5. Remove snap in filter retainer.
6. Remove old filter.
7. Insert new filter element (Fram CA7098, STP SA7098, K&N 33-2113, Purolator A14649, Auto Extra 619-46107, Wix 46107 or equivalent) oriented as shown in Figure 1.
8. Snap in filter retainer oriented as shown in Figure 1.
9. Replace filter cartridge into the air box housing with arrows pointing toward the engine intake.
10. Tighten wing nut retainers by hand only. Excessive torque may crack the plastic housing.
11. Apply enclosed label in a conspicuous location in the engine bay.

735-7810 Replaceable Air Filter Element
STP SA7098 Check Every 10,000 miles

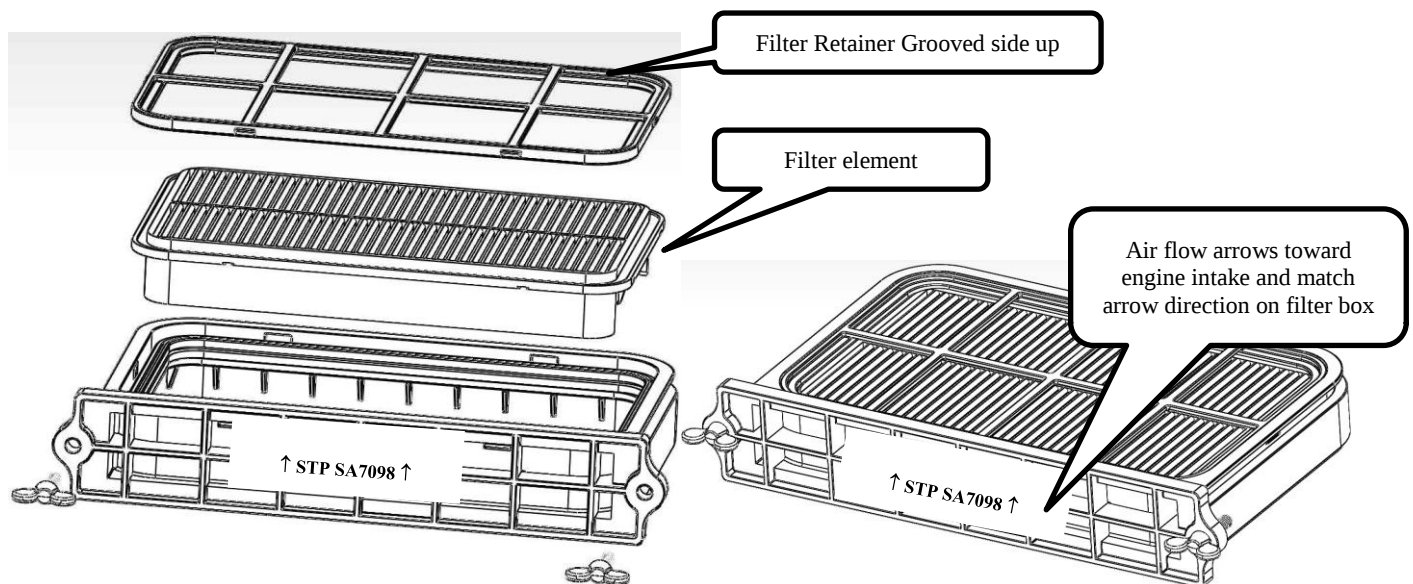


Figure 1. FILTER CARTRIDGE ASSEMBLY

Disclaimer

Even though every attempt to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

Document Control #: 735-7810 -INS