

NWL0001805809B
10/25



SNUGRIDE® TURN & SLIDE

INFANT CAR SEAT BASE


Read This Instruction Manual

Do not install or use this child restraint until you read and understand the instructions in this manual.

**FAILURE TO PROPERLY
USE THIS
CHILD RESTRAINT
INCREASES THE
RISK OF SERIOUS
INJURY OR DEATH IN
A SUDDEN STOP OR
CRASH.**

**KEEP INSTRUCTIONS
FOR FUTURE USE.**

www.gracobaby.com

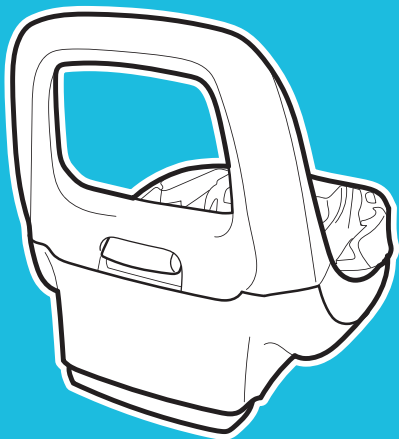

Important

Pages 4-10

- 1-A Welcome to the Graco Family!**
- 1-B Safety Warnings**
- 1-C Aircraft Installation**

Features

Pages 11-25

- 2-A Car Seat Features**
- 2-B Car Seat Rotation**
- 2-C Attach Car Seat to Base**
- 2-D Remove Car Seat from Base**
- 2-E Recline the Base**
- 2-F Choosing Vehicle Seat Location**
- 2-G Which Installation Method Should I Use?**

Rear-Facing Use

Pages 26-46

- 3-A Rear-Facing Checklist**
- 3-B Install With Base With Lower Anchor Attachment**
- 3-C Install With Base With Vehicle Seat Belt**

Vehicle Information

Pages 47-51

- 4-A How to Remove Lower Anchor Attachment**
- 4-B Unsafe Vehicle Seats**
- 4-C Vehicle Seat Belts**

Care & Cleaning

Page 52

- 5-A Cleaning Lower Anchor Attachment**



1 Important

1-A Welcome to the Graco Family!

This base is compatible **ONLY** with the Graco® Snugride Turn & Slide™ car seat.

Your child's safety depends on you. **No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death.**

READ THIS MANUAL CAREFULLY.

This child restraint system conforms to all applicable Federal motor vehicle safety standards.

Even if this car seat seems easy to figure out on your own, you must follow the detailed instructions in this instruction manual to ensure the steps are performed correctly.

If You Need Help

In the U.S.A, please contact our Customer Service Department with any questions you may have concerning parts, use, or maintenance. When you contact us, please have your product's model number and date of manufacture ready so that we may help you efficiently. These numbers can be found on a sticker on the back side of your car seat.

Contact us at **www.gracobaby.com or call 1-800-345-4109.**

For additional resources or to get your car seat checked by a child passenger safety technician, please visit the following web sites:

www.nhtsa.gov • www.seatcheck.org • www.safekids.org

Register This Child Restraint

Please fill out the prepaid registration postcard attached to the harness and mail it in today **or register online at www.gracobaby.com/carseatregistration.**

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, and the restraint's model number and manufacturing date to:

Graco Children's Products, Inc.
Attn: Customer Service
P.O. Box 5665, Portland, OR 97228-9851
or call 1-800-345-4109
or register online at
www.gracobaby.com/carseatregistration

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.NHTSA.gov>.



1 Important

1 Important

For future reference or if you change addresses, record the model name, model number, date of manufacture, and purchase date of this car seat below. You can find this information either on the registration card if you still have it or on the date label located on the back of the car seat.

Model Name _____

Model Number _____

Date of Manufacture _____

Date of Purchase _____

1-B Safety Warnings

! WARNING!

Failure to follow these instructions and child restraint's labels can result in child striking the vehicle's interior during a sudden stop or crash.

! According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. The center of the back seat can be the safest during a possible side impact.





! NEVER place this child restraint rear-facing in a vehicle seating location that has an active front air bag.

If an air bag inflates, it can hit the child and car seat with great force and cause serious injury or death to your child.

- ! Review your vehicle owner's manual for more information about air bags and car seat use.**
- ! If your vehicle does not have a back seat, review your vehicle owner's manual.**
- ! Children are safer riding rear-facing and should ride rear-facing as long as possible, until they reach the maximum rear-facing height or weight rating for their car seat. Graco convertible and all-in-one car seats have higher rear-facing limits that will allow children to ride rear-facing longer after outgrowing their infant car seat. Be sure to check your local and state laws, as well as AAP and NHTSA recommendations, for car seat usage.***
- ! Select a suitable location for the car seat in your vehicle.**
- ! Secure car seat with a vehicle seat belt or lower anchor attachment that is properly routed as shown in this manual.**

*Graco Supports the American Academy of Pediatrics and National Highway Traffic Safety Administration's Car Seat Guidelines. Visit www.gracobaby.com/en-US/safety for information on car seat usage recommendations.



1 Important

- ! Vehicle seat belt system MUST hold car seat securely. Not all vehicle seat belts can be used with a car seat.**
- ! If vehicle seat belt does not hold car seat securely, read “Vehicle Seat Belts” section 4-C and your vehicle owner’s manual.**
- ! Always secure car seat with lower anchor attachment or a vehicle seat belt, even when unoccupied. In a crash, an unsecured car seat can injure passengers.**
- ! DO NOT use car seat if it is damaged or missing parts.**
- ! If car seat is in a crash, it must be replaced. DO NOT use it again! A crash can cause unseen damage and using it again could result in serious injury or death.**
- ! DO NOT use accessories or parts other than those provided by Graco except for a thin towel or mat to protect your vehicle seat or rolled towels or pool noodles to help get your car seat level. Their use could alter the performance of the car seat.**
- ! DO NOT remove lower anchor attachment system from car seat. If using vehicle seat belt to secure car seat, lower anchor attachment connectors must be stored.**
- ! Never leave child unattended, even when sleeping. Child may become tangled in harness straps and suffocate or strangle.**
- ! Rear-facing car seat must be properly leveled:**
 - Too reclined can result in injury or ejection.**
 - Too upright can result in breathing difficulties.**



! Never attach two lower anchor attachment connectors to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.

- ! Do not use both the vehicle seat belt and lower anchor attachment strap at the same time when using the car seat rear-facing.**
- ! NEVER rotate the seat while the vehicle is in motion.**
- ! DO NOT operate vehicle until child is properly secured and the car seat is locked into position**
- ! DO NOT rotate with a child in the seat unless the car seat is securely installed in the vehicle.**
- ! Always return car seat to locked position after securing/removing child.**
- ! The Car seat rotation lever should only be operated by an adult.**
- ! When attaching or removing the car seat from the base with the child in the carrier, make sure the harness is properly secured.**



1 Important



1 Important

Car Seat's Useful Life

STOP using this car seat and throw it away 7 years after the date of manufacture. Look for date of manufacture label on back of the car seat.

Graco Children's Products Inc. advises against loaning or passing along a car seat unless you know the complete history of the product. We also advise against purchasing a car seat second hand.


1-C Aircraft Installation




This child restraint's **base** is NOT certified for use in aircraft.

Contact the airline for their specific policies.



2-A Car Seat Features

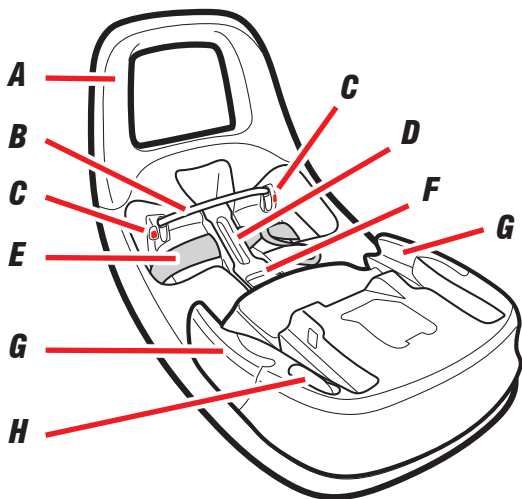

- A Anti-Rebound Bar**
- B Car Seat Locking Bar**
- C Turn-Lock Indicator**
- D SnugLock® Lock-Off**
- E Lower Anchor Attachment Strap**
- F SnugLock® Lock-Off Release Lever**
- G Car Seat Rotation Lever**
- H Level Indicator**

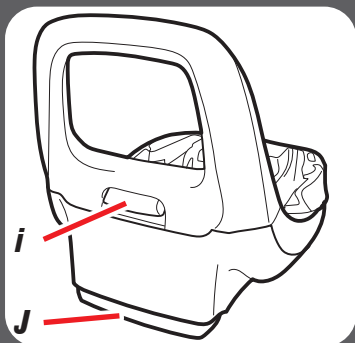

- i* Base Recline Lever**
- J* Base Recline Foot**
- K* Lower Anchor Attachment Storage (Under Base)**

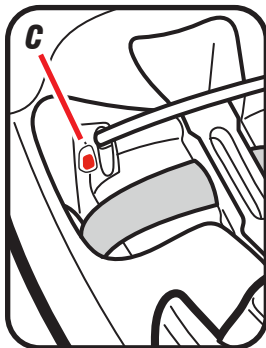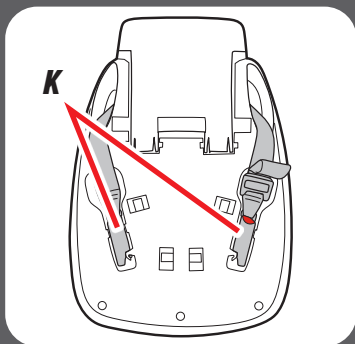


2-B Car Seat Rotation

When securely installed in the vehicle the car seat can be rotated to face the vehicle door to easily secure and remove your child.




The infant carrier can also be installed or removed from the seat base while in the rotated position.

Before securing your child, make sure the car seat is firmly installed, and the vehicle is not in motion.

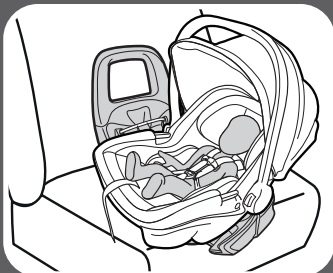

Seat Rotated Towards Vehicle Door

- **NEVER** rotate the seat while the vehicle is in motion.
- Car seat rotation lever should **ONLY** be operated by an adult.
- **DO NOT** rotate with a child in the seat unless the car seat is securely installed in the vehicle.
- **DO NOT** operate vehicle until child is properly secured and the car seat is rotated into a locked position
- Always return car seat to a locked position after securing/removing child.

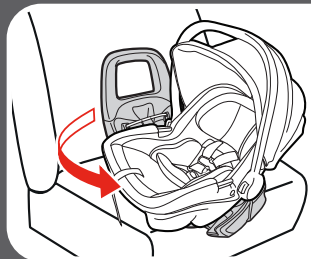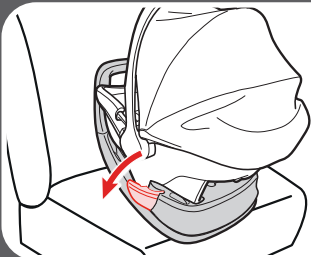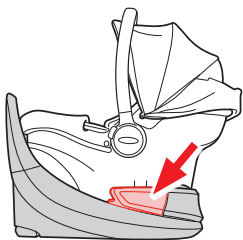

To rotate the car seat

The turn levers are located on each side of the car seat. You only need to use one lever to rotate the car seat.

To rotate the car seat, pull on the turn lever and rotate the seat in the direction of the lever.

Be mindful of surrounding occupants and objects near the seat while turning.

The car seat will remain rotated towards the vehicle door to help with securing and removing your child.


While rotated, the seat can also be removed from the base by squeezing the release lever on the front of the seat. Review section 2-C and 2-D to attach and remove the car seat from the base.

When the car seat is rotated towards the vehicle door, the car seat is **NOT** in a locked position.

The car seat MUST be rotated into the locked rear-facing position when the vehicle is in motion.


To Return the Car Seat to Rear-Facing Position

Once your child is secured, rotate the seat into Rear-Facing position until you hear a “CLICK!”

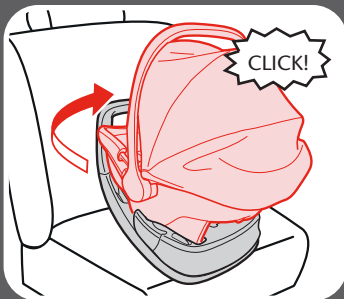


Check the turn lock indicator near the locking bar.

If the indicator is red, the seat is **NOT** securely locked in place. Always check that the indicator is green and lift up on the seat to ensure that the seat is locked to the base.

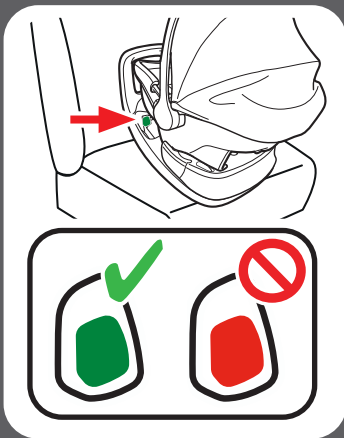

Continue reading on the next page.

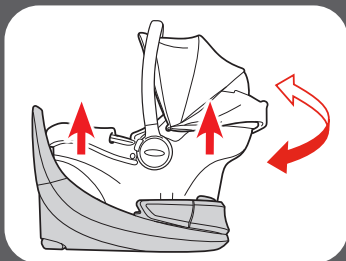

Test to make sure the car seat is securely locked in place. Ensure the car seat cannot lift up or rotate by pulling on the sides of the seat.


2-C Attach Car Seat to Base

Attaching Car Seat To Base: Slide Method


The car seat base must be firmly installed before attaching the seat seat.

With the car seat base rotated, locate the two channels in the car seat base.



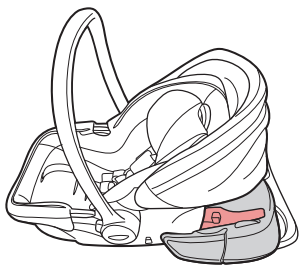

Attach the car seat by placing the rear edge of the car seat near the two channels in the base.

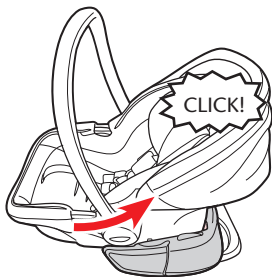


Then push the car seat back firmly until you hear a "CLICK!"


Pull up on the seat to make sure it is locked.

Alternatively, the car seat may also be installed without rotating the base:

Attaching Car Seat To Base: Standard Method


When the car seat base is not rotated, align the locking bar at the front of the base with the locks in the car seat.

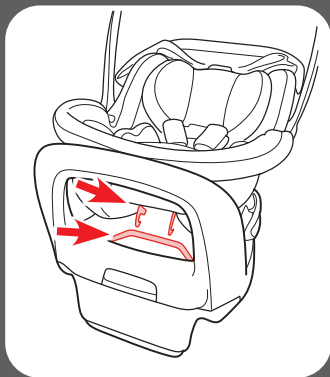

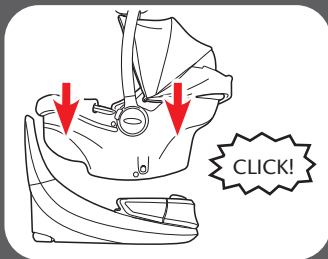


Set car seat in the base.
Push down on the front of the car seat. You will hear a “CLICK!” when it is locked.

Pull up on the front and rear corners of the seat to make sure it is locked.

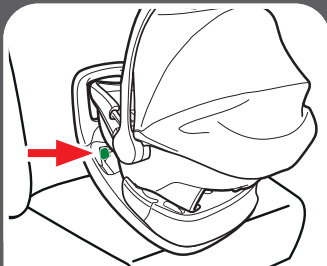



Check the turn lock indicator near the locking bar. If the indicator is red, the seat is **NOT** securely locked in place. Always check that the indicator is green and lift up on the seat to ensure that the seat is locked to the base.

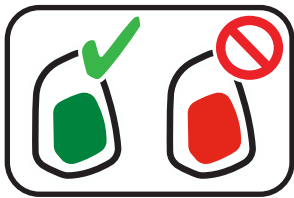

2-D Remove Car Seat from Base

To Remove Car Seat from Base: Slide Method


From the front of the car seat, squeeze the release lever and slide the car seat towards you and away from the base.

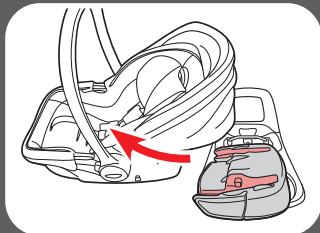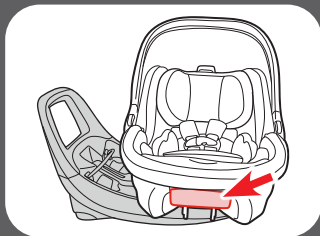


Alternatively, the car seat can also be removed from the base without rotating:

To Remove Car Seat from Base: Standard Method

From the front of the car seat, squeeze the release lever and lift the car seat out of the base.

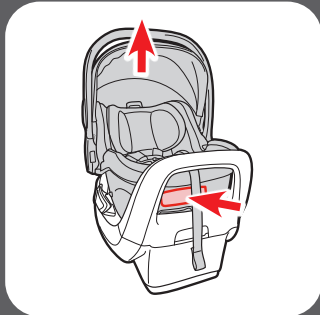

2-E Recline the Base

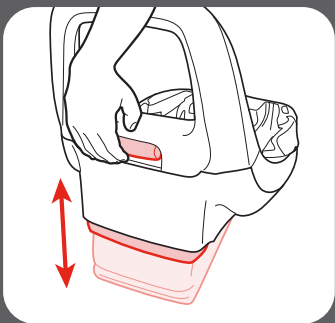


Base Has 4 Recline Positions

Squeeze the base recline lever and lift the base to extend the foot.

Squeeze the base recline lever and lower the base to retract the foot.

Check the level indicator for appropriate install. (See Next Page)

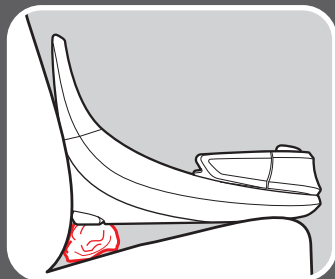

When the foot is completely extended and the level indicator is not correct for your child's age, you may raise the foot and place a rolled towel under the foot until the indicator shows correctly.

When Reading The Level Indicator

Vehicle **MUST** be on level ground.


Use corrected age for preemies.

- Place the bubble completely within the blue lines to ensure the seat is level.

- If the bubble is entirely within the light blue line, the restraint is level for infants from birth to 3 months of age.

- If the bubble is entirely within any blue lines, the restraint is level for infants above 3 months of age.

- If the bubble is not completely under the blue lines, the child restraint is **NOT** level. You must adjust your recline position.

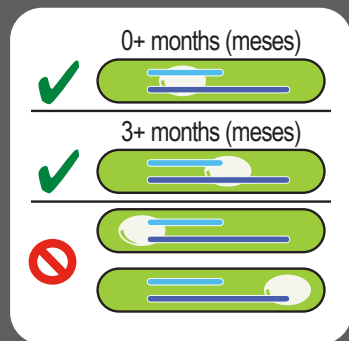

2-F Choosing Vehicle Seat Location

Review your vehicle owner's manual for seating locations. Review section 4 for additional information.

Some vehicles have specific requirements for where the car seat can be installed. Be sure to check your vehicle owner's manual for all available seating positions.

WARNING!



NEVER place this child restraint rear-facing in a vehicle seating location that has an active front air bag.


In the event there is no back seat, review your vehicle owner's manual to see how to use your infant child restraint.

2-G Which Installation Method Should I Use?

This car seat can be installed in your vehicle using either the vehicle seat belt OR the lower anchor attachment system. Both systems are equally safe to use. **DO NOT USE BOTH AT THE SAME TIME.**

The lower anchor attachment system allows you to securely attach your car seat in your car without using the vehicle seat belt and possibly to get a better fit. All 2003 and newer model year vehicles are required to have a lower anchor attachment system, although some manufacturers began including lower anchor attachment earlier. Some vehicle owner manuals use the term ISOFIX to identify the lower anchor attachment system.


Review your vehicle's owner manual for exact location and use. Review section 4 for additional information.

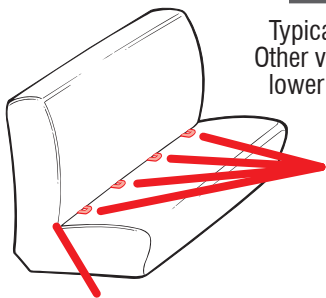


Vehicle Seat Crease

Typical seat in a passenger vehicle.
Other vehicle types may have different
lower anchor attachment locations.


**Vehicle Lower
Anchor**

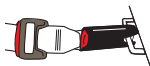


3-A Rear-Facing Checklist

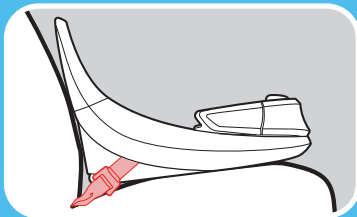

Lower Anchor Attachment

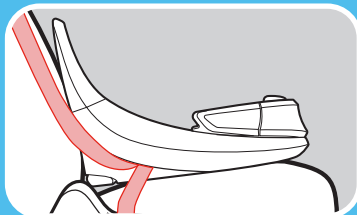

**Vehicle Lap/Shoulder
Seat Belt**

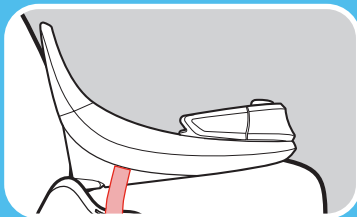

Vehicle Lap Only Seat Belt

Rear-Facing:

- Car seat **MUST** be rear-facing in the vehicle back seat.
- Make sure lower anchor attachment strap or vehicle seat belt is routed through the rear-facing belt path.
- Install this car seat tightly in your vehicle. When installed with the Lower Anchor Attachment or the vehicle seat belt, the car seat **should not move** at the belt path more than 1" (2.5 cm) from side to side and front to back.
- Make sure to check the level indicator or level line for proper recline.
- Make sure base is a minimum of 80% on vehicle seat.

Children are safer riding rear-facing and should ride rear-facing as long as possible, until they reach the maximum


rear-facing height or weight rating for their car seat. Graco convertible and all-in-one car seats have higher rear-facing limits that will allow children to ride rear-facing longer after outgrowing their infant car seat. Be sure to check your local and state laws, as well as AAP and NHTSA recommendations, for car seat usage.



**3 Rear
Facing**

3-B Install With Base With Lower Anchor Attachment

Review your vehicle owner's manual for lower anchor attachment location and use.

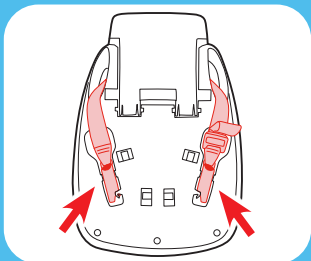


1. Remove the Lower Anchor Attachment Connectors from Storage Location

From underneath the base, unhook the lower anchor attachment connectors and remove from storage position.

2. Place Base in Back Seat of the Vehicle

Place the base flat on the vehicle seat. Push it back until the front of the base touches the vehicle seat back. Center the base between the lower anchor attachment anchors.



If allowed by your Vehicle Owner's Manual, the center seating position may be used if the anchor spacing is 11" (28 cm) or greater.

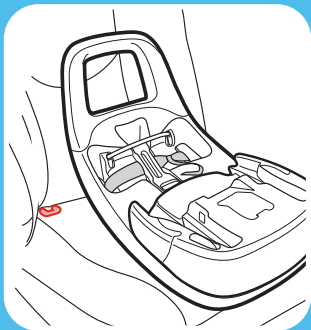


**3 Rear
Facing**

3. Open the SnugLock® Lock-Off

Push in the release lever and open the lock-off.

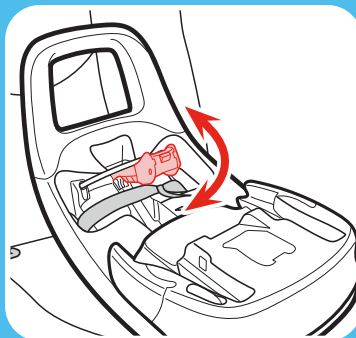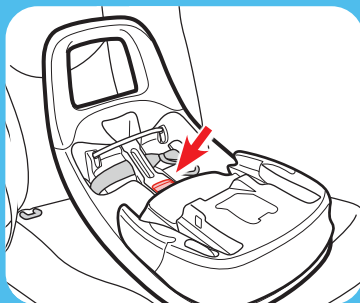


**3 Rear
Facing**

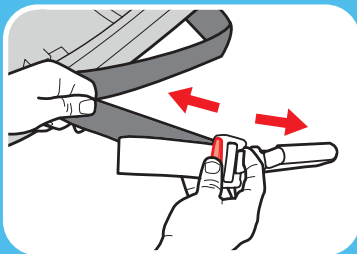

4. **Extend the Lower Anchor Attachment Strap**


Extend the lower anchor attachment strap to its maximum length by pressing the gray button and pulling on the strap.

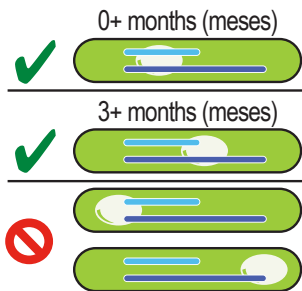

5. **Check the Level Indicator**

Vehicle **MUST** be level with the ground.

To recline, review section 2-E.

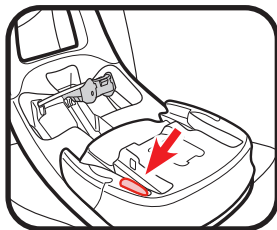



6. Recline the base

If the bubble in the level indicator is not under the blue lines, you **MUST** adjust the recline position.


To adjust the recline, squeeze the base recline lever on the front of the base and lift or lower the base to the appropriate recline.

Recheck the level indicator.

When the foot is completely extended and the level indicator is not correct for your child's age, you may raise the foot and place a rolled towel or pool noodle under the foot until the indicator shows correctly.

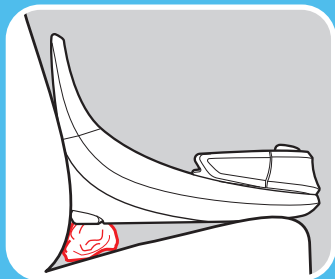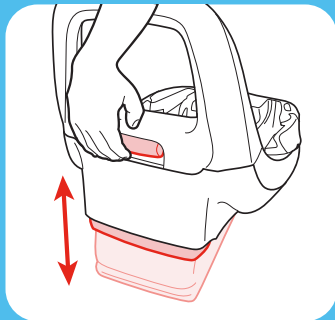


3 Rear
Facing

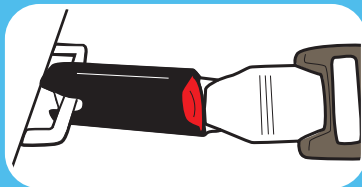

7. Connect Lower Anchor Attachment Connectors to Vehicle's Lower Anchor Attachment Anchors

Lower anchor attachment strap should lay as flat as possible and not be twisted.

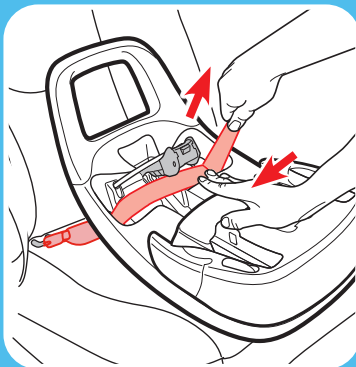

8. Remove the Slack

Press down firmly on the top of the base while pulling on the free end of the lower anchor attachment strap to remove all the slack.

Do not pull on the strap with excessive force.




3 Rear Facing

9. Close the SnugLock® Lock-Off

Shut the lock-off on top of the lower anchor attachment strap.

Close the lock-off until you hear a “Click”.

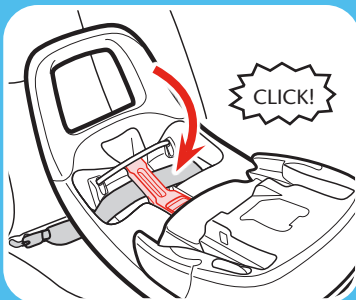


! WARNING!

Keep hands away from the lock-off area when closing the lock-off.




10. Test For Tightness

Grab the sides of the base at the belt path, push and pull the base from side to side and front to back.

If the base moves less than 1" (2.5 cm), it is tight enough.

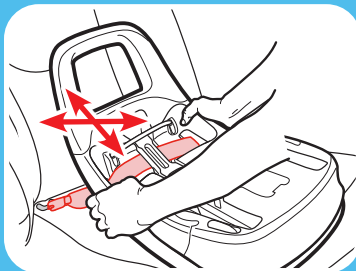

**3 Rear
Facing**

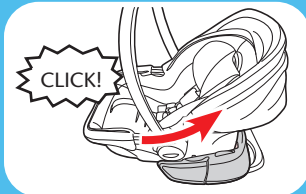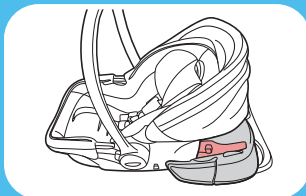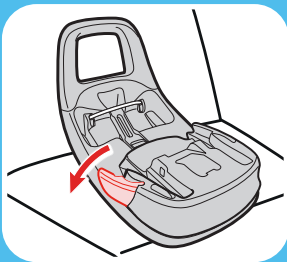

11. Rotate the Base

The car seat may be installed while the base is rotated, but it is not required to rotate the base. If you do not want to rotate the base, skip to step 14.

To rotate the car seat, pull on the turn lever and rotate the seat in the direction of the lever.

12. Attach Car Seat to Base (Rotated)

Attach the car seat by placing the rear edge of the car seat near the two channels in the base.

Then push the car seat back firmly until you hear a “CLICK!” Pull up on the seat to make sure it is locked.

Your child can be placed inside the car seat and secured before or after attaching the car seat to the base. **DO NOT** attach or remove the car seat with your child unsecured in the seat.



To secure your child, review section 4.

13. Rotate The Car Seat

Once your child is secured, rotate the seat into Rear-Facing position.

The car seat **MUST** be rotated into the locked rear-facing position when the vehicle is in motion.


Grab the sides of the seat and try to rotate and pull up on the seat without using the turn lever to make sure it is securely locked in place.

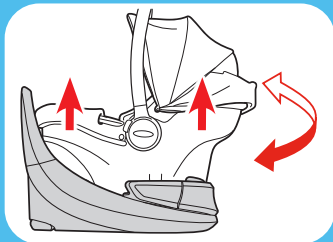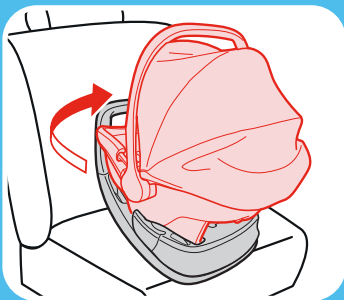

14. Attach Car Seat to Base




If you have already attached the car seat to the base, skip to step 15.

Place car seat into the base. Push down on the front and rear of the car seat and handle until you hear a “click”.

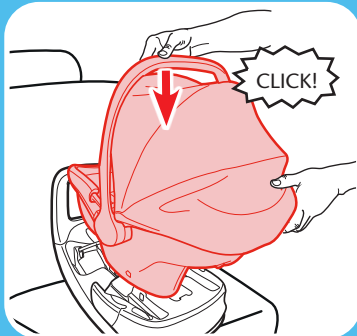



3 Rear
Facing

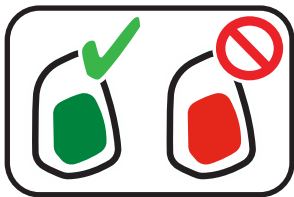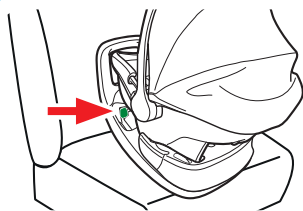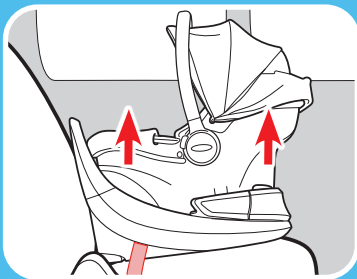

Test to make sure the car seat is attached by pulling up on the front and rear corners of car seat.

15. Check the Lock Indicator

Check the turn lock indicator near the locking bar.

If the indicator is red, the seat is **NOT** securely locked in place. Always check that the indicator is green and lift up on the seat to ensure that the seat is locked to the base.

16. Check the Level Indicator

Vehicle **MUST** be on level ground.

Use corrected age for preemies.


Check the level indicator with child in the child restraint.

- Place the bubble completely within the blue lines to ensure the seat is level.

- If the bubble is entirely within the light blue line, the restraint is level for infants from birth to 3 months of age.


- If the bubble is entirely within any blue lines, the restraint is level for infants above 3 months of age.

- If the bubble is not completely under the blue lines, the child restraint is **NOT** level. You must adjust your recline position.

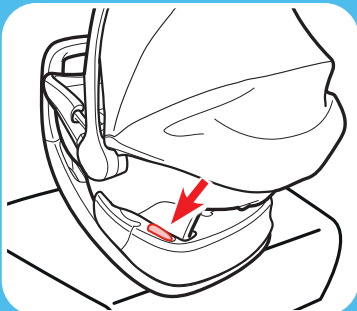

3 Rear Facing

3-C Install With Base With Vehicle Seat Belt

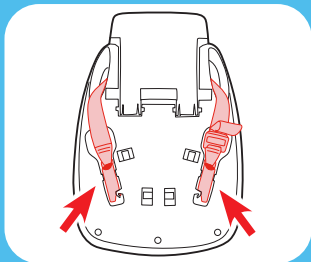

1. ***Store Lower Anchor Attachment Connectors***

Attach the lower anchor attachment connectors to the plastic bars on the bottom of the base as shown. Remove the slack.



2. ***Place Base in Back Seat of the Vehicle***


Place the base flat on the vehicle seat. Push it back until the front of the base touches the vehicle seat back.



3 Rear
Facing

3. Open the SnugLock® Lock-Off




Push in the release lever and open the lock-off.

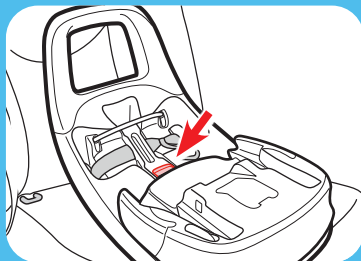

4. Check the Level Indicator



Vehicle **MUST** be level with the ground.

To recline, review section 2-E.

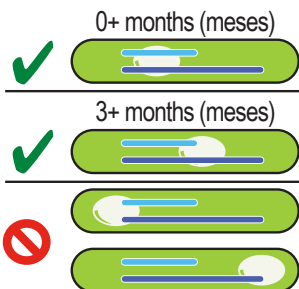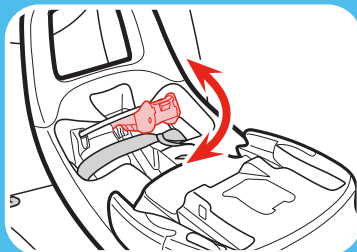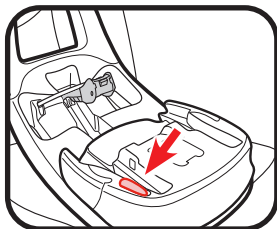



3 Rear
Facing

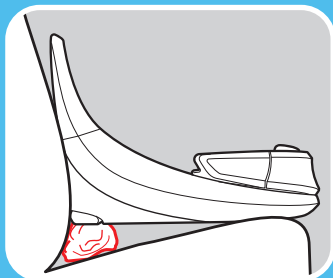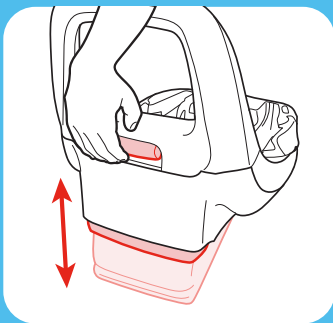

5. *Recline the base*

If the bubble in the level indicator is not under the blue lines, you **MUST** adjust the recline position.

To adjust the recline, squeeze the base recline lever on the front of the base and lift or lower the base to the appropriate recline.

Recheck the level indicator.

When the foot is completely extended and the level indicator is not correct for your child's age, you may raise the foot and place a rolled towel or pool noodle under the foot until the indicator shows correctly.

6. Route the Vehicle Seat Belt

Thread the vehicle seat belt through the rear-facing belt path and buckle it. The seat belt should lay as flat as possible and not be twisted.




Review your vehicle's owner's manual for vehicle seat belt use


7. Tighten the Vehicle Seat Belt

Press down firmly on the top of the base while pulling on the shoulder belt to remove the slack.

Do not pull on the strap with excessive force.

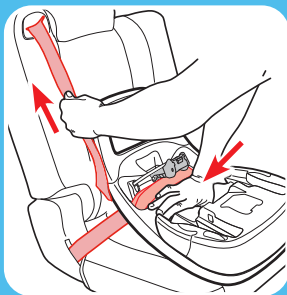

3 Rear Facing

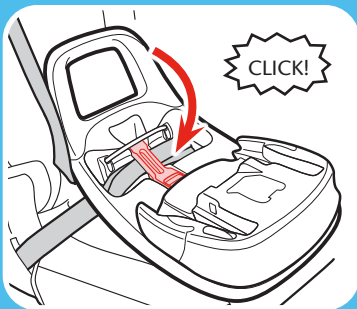


8. Close the SnugLock® Lock-Off

Push down on the arm until the you hear a click.

⚠ WARNING!

Keep hands away from the lock-off area when closing the lock-off.

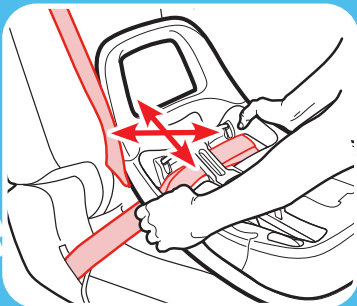

9. Test For Tightness


Grab the sides of the base where the seat belt is and push and pull the base from side to side and front to back.

If the base moves less than 1" (2.5 cm), it is tight enough.

10. Rotate the Base

The car seat may be installed while the base is rotated, but it is not required to rotate the base. If you do not want to rotate the base, skip to step 13.

To rotate the car seat, pull on the turn lever and rotate the seat in the direction of the lever.

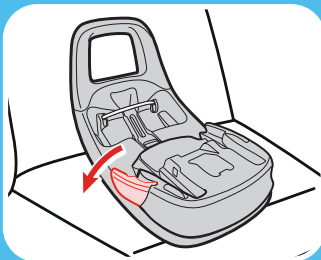



11. Attach Car Seat to Base (Rotated)

Attach the car seat by placing the rear edge of the car seat near the two channels in the base.




Then push the car seat back firmly until you hear a “CLICK!” Pull up on the seat to make sure it is locked.

Your child can be placed inside the car seat and secured before or after attaching the car seat to the base. **DO NOT** attach or remove the car seat with your child unsecured in the seat.

To secure your child, review section 4.

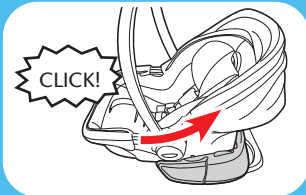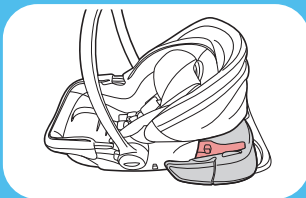

3 Rear
Facing

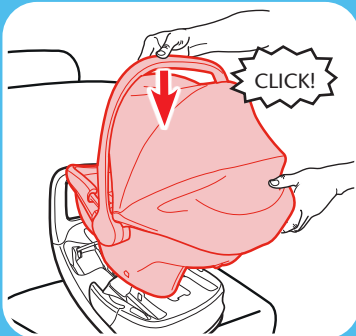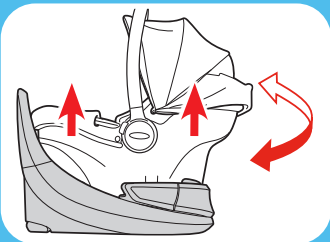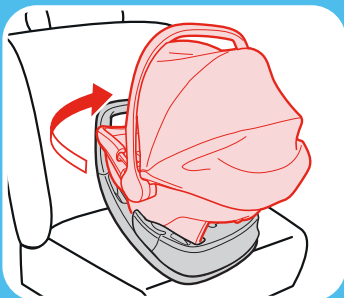

12. Rotate The Car Seat

Once your child is secured, rotate the seat into Rear-Facing position.

The car seat **MUST** be rotated into the locked rear-facing position when the vehicle is in motion.


Grab the sides of the seat and try to rotate and pull up on the seat without using the turn lever to make sure it is securely locked in place.

13. Attach Car Seat to Base

If you have already attached the car seat to the base, skip to step 14.

Place car seat into the base. Push down on the front and rear of the car seat and handle until you hear a "click".



Test to make sure the car seat is attached by pulling up on the front and rear corners of car seat.

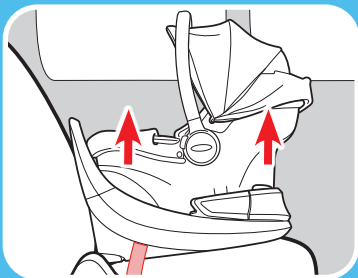



14. Check the Lock Indicator

Check the turn lock indicator near the locking bar.

If the indicator is red, the seat is **NOT** securely locked in place. Always check that the indicator is green and lift up on the seat to ensure that the seat is locked to the base.

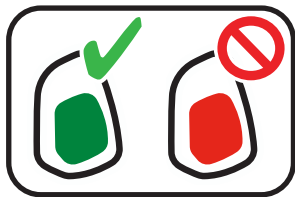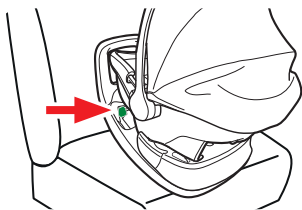

3 Rear
Facing

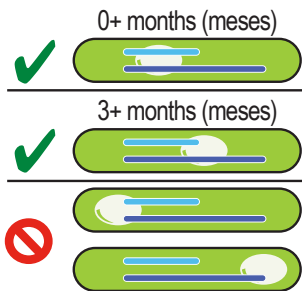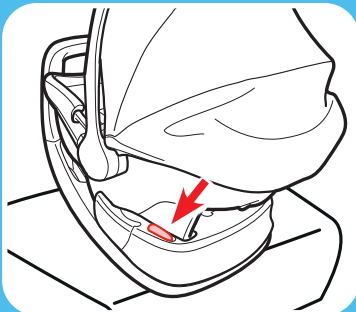

15. Check the Level Indicator

Vehicle **MUST** be on level ground.

Use corrected age for preemies.

Check the level indicator with child in the child restraint.

- Place the bubble completely within the blue lines to ensure the seat is level.


- If the bubble is entirely within the light blue line, the restraint is level for infants from birth to 3 months of age.

- If the bubble is entirely within any blue lines, the restraint is level for infants above 3 months of age.

- If the bubble is not completely under the blue lines, the child restraint is **NOT** level. You must adjust your recline position.

4-A How to Remove Lower Anchor Attachment


1. Push Button In While Pulling on Lower Anchor Attachment Strap to Loosen

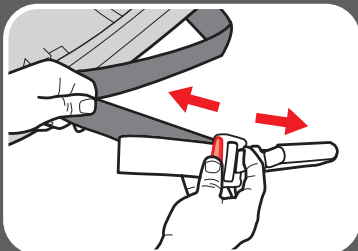

2. Press the Lower Anchor Attachment Release Button



3. Pull Away From Anchor Point

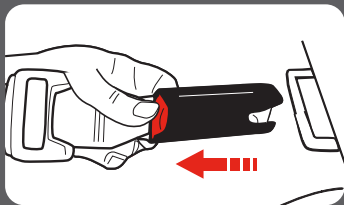

4-B Unsafe Vehicle Seats

Never install this car seat in side-facing or rear-facing vehicle seats.



4-C Vehicle Seat Belts


Review your vehicle owner's manual for vehicle seat belt use

This car seat can be installed using a vehicle seat belt. To do this, you will need to change the seat belt to a locked mode for use with car seats. With some vehicle seat belts, this is done with the latch plate; with other vehicle seat belts, this is done with the retractor.

Vehicle Seat Belt Terms

Retractor

A device that winds up the unused vehicle seat belt. It is often hidden inside the panels on the walls of the vehicle or in the vehicle seat back.

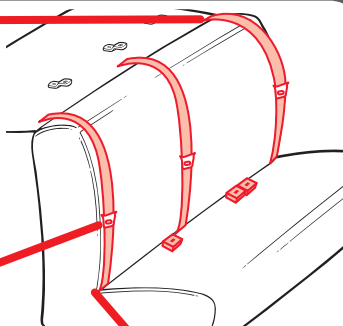

Latch Plate

The male end of the seat belt with the silver tongue.

Seat Crease

The crease where the vehicle seat back and seat bottom meet.

Identify Your Seat Belt Type


There are two different types of vehicle seat belts that can be used with this car seat:

Lap/Shoulder Seat Belt

3 connections points.

Lap Only Seat Belt

2 connection points.

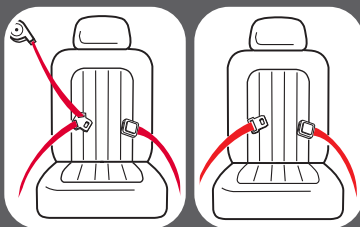

49

The following types of vehicle seat belts **CANNOT** be used safely with this car seat:




Lap Belt with Motorized
Shoulder Belt



Lap Belt or Shoulder Belt
Mounted on Door

Belts Forward of the
Seat Crease

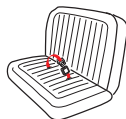


Some vehicles you may
not get a secure fit.
Read both your vehicle
and car seat manuals.

Lap/Shoulder Seat Belt Installation

Always review your vehicle owner's manual for specific information about your vehicle seat belts.

Most vehicles manufactured after 1996 will have Switchable retractors in the back seat. If you have any questions about your retractor type, consult your vehicle owner's manual, call Graco or visit www.gracobaby.com/vehicle-seatbelt-information.

To verify you have a Switchable retractor, **slowly** pull the belt all the way out, and then allow it to retract several inches. Try to pull the belt all the way out again. If it cannot be pulled out, it is **Switchable** retractor. Follow the steps in the rear-facing sections in this manual.

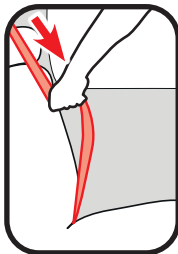

5-A Cleaning Lower Anchor Attachment

Surface wash only with mild soap and damp cloth. **DO NOT IMMERSE THE HARNESS STRAPS or LOWER ANCHOR ATTACHMENT STRAP IN WATER.** Doing so may weaken the straps.

If harness straps or lower anchor attachment strap are frayed or heavily soiled, contact Customer Service at www.gracobaby.com or 1-800-345-4109.

Notes

Notes

Notes

Replacement Parts

To purchase parts or accessories in the United States,
please contact us at the following:

www.gracobaby.com

or

1-800-345-4109