




Inflating Coleman® Double-Lock™ Valve

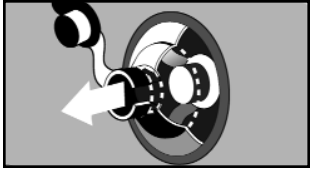


To begin inflation, open external cap and pull firmly on the lanyard to extend out. This will open internal yellow seal.

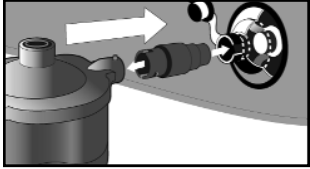

Attach adapter nozzle to inflation end of pump. Insert pump and turn on.

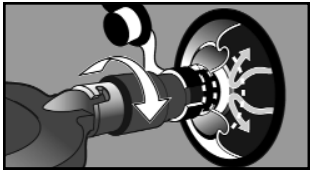


When fully inflated, seal valve by pushing in with pump nozzle. This will seal the internal yellow stopper and keep air from escaping while closing cap.

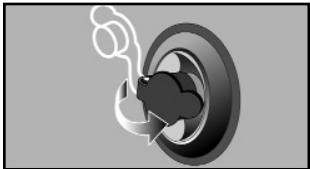

Fully remove pump and close external cap. Valve should appear depressed into itself.

Deflation

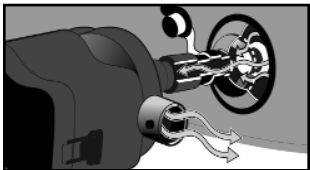

Remove adapter nozzle from inflation end and attach to deflation side of pump. Repeat same steps as inflation. This will draw the air out quickly.

CAUTION: Do not block the air portals during operation, this could damage the motor.



The Coleman Company, Inc. has been making people comfortable in the great outdoors since 1901. We've lit your way, cooked your food and warmed your nights. Our products have helped make a million memories. People from all over the world have counted on Coleman time and again for innovation and dependability. That's why, for over a century, our dedication to quality shines on.

Please call or write us with any comments or questions.

The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, KS 67219 U.S.A.
1 800 835-3278 • TDD: 316 832-8707 • www.coleman.com

Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions • 20B Hereford Street • Brampton, ON L6Y 0M1

Manufactured in China

© 2009 The Coleman Company, Inc.
Coleman®, , and  are registered trademarks and QuickPump™ and Double-Lock™ are trademarks of The Coleman Company, Inc.



How to Use and Enjoy Your Coleman®

120V QuickPump™





IMPORTANT THINGS YOU SHOULD KNOW

- Power supply must be 120 volt AC
- Coleman® 120V QuickPump™ unit is a high-volume, low-pressure pump. It is intended to inflate items requiring low pressure (such as inflatable beds, inflatable rafts, air mattresses, etc.)
- Keep unit out of reach of children.
- Do not expose to rain or sunlight. Indoor use only.
- Carefully inspect the pump for damage before first use and every use thereafter. Do not use if found damaged.
- Do not change the plug in any way.
- For fast inflation and maximum motor cooling, always use the largest size nozzle possible.
- Do not leave unit plugged into 120V power source while unattended.
- **Caution** – Risk of fire and electric shock! Do not operate for more than 20 minutes. Allow 10 minutes off between each operation.

Note: Pump will not work on stem valves or needle valves commonly used on bike tires, basketballs, etc.

WARNINGS

- Follow the instructions carefully on articles to be inflated, never exceed recommended pressure. Bursting items can cause serious injury.
- Never leave pump unattended while in use.
- Do not use under wet conditions. Keep away from water.
- Never allow sand, small rocks, etc. to be sucked into the pump while operating.
- Never look into or point any opening toward your eyes while pump is operating.
- Do not open case, electrical hazards may result. There are no user serviceable parts.
- Let pump cool before storing the pump inside the box after use. Never twist the cord.
- Do not attempt to put any objects into the inflation or deflation port at any time.
- Do not block the air portals during operation..
- Allow pump to cool for 10 minutes after each 20 minutes of continuous operation.

MAINTENANCE AND SERVICE

Warning: Turn OFF the switch and remove the plug before doing any cleaning.

Use only mild soap and a rag dampened with hot water to clean the outer plastic parts. Avoid all other types of detergents, cleaner, or solvents, which might contain chemicals that could seriously damage the plastic. All other service, except cleaning, should be preformed by a qualified person.

IMPORTANT SAFETY INSTRUCTIONS

- READ AND SAVE THESE INSTRUCTIONS.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
Do not attempt to defeat this safety feature.
- Unplug or disconnect the appliance from the power supply before servicing.
- WARNING – To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Pump With Any Solid-State Speed Control Device.
- Do not operate any pump with a damaged cord or plug. Discard pump or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area where it will not be tripped over.

GROUNDING INSTRUCTIONS (IF APPLICABLE)

This pump should be grounded while in use to protect the operator from electric shock. The pump is equipped with a 3-conductor cord and 3-prong grounding type plug to fit the proper grounding type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal. This pump is for use on less than 150V, and has a plug that looks like that shown in sketch (A). An adapter, see sketch (B), is available for connecting sketch (A) type plugs to 2-prong receptacles. The green colored rigid ear, lug, or the like, extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box. (See Fig. 1)

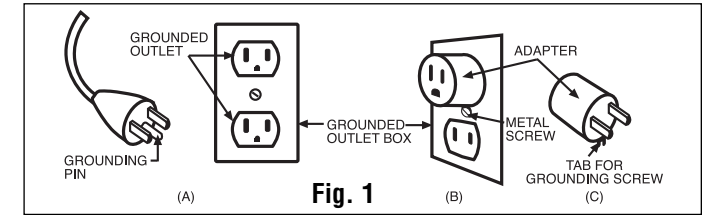



Fig. 1

EXTENSION CORDS

Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in the line voltage resulting in loss of power and overheating. The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Volts 120V	Total length of cord in feet			
	0-25'	26'-50'	51'-100'	101'-150'
Ampere rating More Than	AWG			
Not More Than				
0-6	18	16	16	14
5-10	18	16	14	12
10-12	16	16	14	12
12-16	14	12	Not recommended	

Inflating Standard Pinch Valve

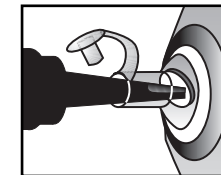

- Attach pinch valve adapter to inflation end of pump.
- Insert pinch valve adapter into pinch valve.
- **Make sure tip of adapter is extended past inner "flap" inside of valve.** Turn pump on.
- When fully inflated, remove pump from valve and seal valve.

OTHER VALVES

The Coleman® 120V QuickPump™ unit is compatible with most valves on inflatable products. If you have an inflatable product with a valve other than those described above, rotate the adapter sleeve until nozzle end fits valve. **Note: Pump will not work on stem valves or needle valves commonly used on bike tires, basketballs, etc.**

CAUTION: Do not block the air portals during operation, this could damage the motor.